



Fuse Box

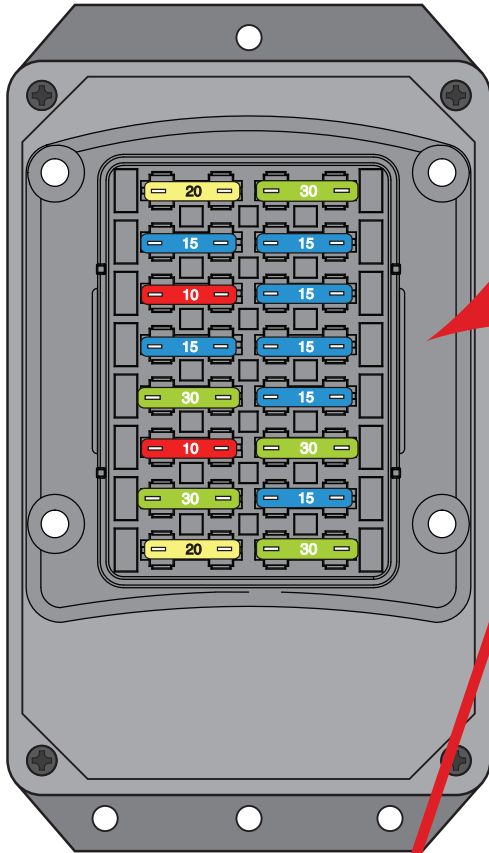

Fuse Box Lid

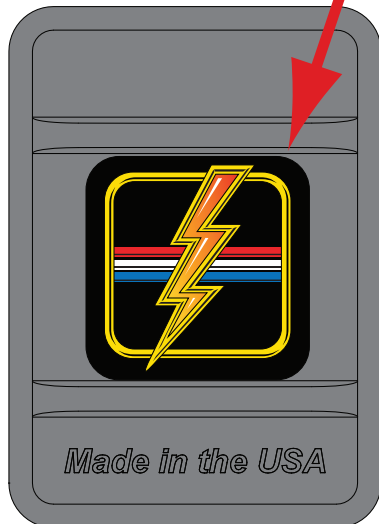

NOTE:

If your fuse box and fuse box lid look like this, these **ARE** the correct instructions for your application. If the word "BUSSMANN" appears on your fuse box or fuse box lid, you have an earlier version of this kit and these **ARE NOT** the correct instructions.

KIT BOX CONTENTS:

<u>Number</u>	<u>Description</u>
510476	Alternator & Main Power Connection Kit
510886	Main Dash Harness Kit w/ AAW Fuse Panel
510394	1966-67 Fairlane Front Light Bucket Wiring Kit
510555	Instrument Cluster Wiring Kit
510556	Rear Body Wiring Kit
510730	Vehicle Speed Sensor, VSS, Lead Wires
510911	Front Light Wiring Kit
510912	Engine Wiring Kit
500042	Dimmer Switch
510128	Ignition Switch
510385	Headlight Switch
510557	Fuse, Relay & Flasher Kit
510558	62-65 Fairlane & 62-63 Meteor Parts Kit
500919	Practice Terminal Kit
92973561	Kit Instruction Sheets
92970725	Firewall Template
92973600	Warning Page



**American
Autowire**

www.americanautowire.com 856-933-0801

Classic Update Kit
1962-65 Ford Fairlane
1965-63 Mercury Meteor
510553

92973802 Rev. 0.0 03/22/2024



WARNING: This harness is intended to be used in a modified vehicle. Please read this sheet thoroughly and be sure that you understand everything explained on it prior to opening any of the enclosed packages, or before attempting to install any of the components. Once this kit has been opened or any component has been installed, the kit is not returnable.

1. This kit should typically be used in a **MODIFIED 1962 - 65 Ford Fairlane and 1962 - 63 Mercury Meteor** application only.
2. This kit **DOES NOT** include any factory original A/C wiring, but will support the original heater system and any aftermarket heat or A/C system.
3. This kit only supports the use of a higher current self-exciting 1 wire, or other style internally regulated alternator. An adapter may be necessary for certain applications. The use of a stock, low amperage alternator is seriously discouraged as they cannot handle the higher current requirements of updated ignition systems, electric fans, aftermarket A/C systems, stereo systems, air ride suspensions, and other power hungry accessories and will ultimately create performance issues with the system.
4. This kit **WILL NOT** support the use of a factory ammeter. All AAW kits are engineered to supply the optimum charge to the battery. To achieve this performance, we route our 6ga. charge wire directly from the alternator output terminal to the starter solenoid. Due to the path of the charge being altered from the stock configuration, the gauge can no longer see a charge vs. a discharge, so it will not work properly. When ammeters were originally used, most generator or alternator current outputs were rated at maximum of about 25-60 amps. Modified cars being built today typically utilize a 100 amp or higher output alternator. With these higher current units, ammeters, generally speaking, become a safety hazard. Ammeters are usually wired in parallel to the charging circuit, are typically unfused, and can short very easily causing a fire. A voltmeter is recommended as a good alternative.
4. This kit **WILL NOT** support the use of a factory tachometer in it's original connection application as those tachs wired the primary ignition circuit directly in series through the tach and then out to the positive side of the coil. With this type of connection, any type of MSD or high energy ignition will generally destroy the internal circuitry of the tach and will cause the car to quit running as voltage will no longer flow through the tach and out to the coil or ignition control unit. **HOWEVER**, if your factory tach has been upgraded or retrofitted to a later style movement where the pulse post on the tach gets wired to the negative side of the coil (or to the tach output on an MSD box or similar unit) and the feed post of the tach uses a conventional 12 volt ignition connection, **you will be able to use this harness system.**
5. This kit **IS NOT** set up with a resistance wire for a standard, points type ignition system. It is wired with a full 12 volt primary ignition feed that is hot in both the start and run positions. It will support HEI, MSD, other electronic ignition systems, as well as computerized Fuel Injection systems. If you wish to run a points type system, there are illustrations on the engine connection pages to do so. Extra parts that are not included in this kit will be required to complete that operation.
6. You will need to re-use your original wiper switch and wiper/washer wiring as we have only provided 12 volt fused feeds for those systems.



510553 - Classic Update Series Kit

1962 - 65 Ford Fairlane & 1962 - 63 Mercury Meteor

This kit contains the following components:

<u>Bag</u>	<u>Part Number</u>	<u>Description</u>	<u>Quantity</u>
	500042	Floor Dimmer Switch	1
	500919	Practice Terminal Crimping Set	1
M	510556	Rear Body Wiring Kit	1
N	510394	Headlight Extension Kit	1
	510128	Ignition Switch	1
	510557	Fuse, Relay, and Flasher Kit	1
G	510886	Dash/Main Harness Kit	1
K	510911	Front Light Kit	1
J	510912	Engine Kit	1
	510385	Headlight Switch	1
	510558	Grommet and Parts kit Kit	1
H	510555	Dash Cluster wiring kit	1
Z	510476	Alternator and Main Connection kit	1
V	510730	VSS Connection Kit	1
	92973561	Introduction Instruction Sheet	1
	92973600	Warning Sheet	1
	92970725	Fuse box installation sheet	1

Validate the kit contents with this component list. If there are any discrepancies with incorrect or missing parts, stop your installation and notify the supplier you purchased the kit from before proceeding.



www.americanautowire.com 856-933-0801

510553

92973600 Rev 0.0 6/4/2021

Classic Update Series

— 62-65 Ford Fairlane and 62-63 Mercury Meteor —

START HERE !

PLEASE READ THIS BEFORE STARTING INSTALLATION !

This wiring kit is designed for ease of installation. Please read the guidelines below, BEFORE STARTING your installation to guarantee a successful job. Use an appropriate crimping tool which folds the wings of the open barrel terminals down into the wire as shown below. ALL TERMINALS THAT YOU INSTALL SHOULD BE PROPERLY SOLDERED. Our factory crimped terminations are installed by GM approved five ton presses, and soldering these terminations is not necessary. AAW offers a great terminal crimping video entitled "Proper Crimping Video". It can be viewed by visiting YouTube. Type the following address into your web browser to go directly to the video: www.youtube.com/watch?v=8u_EkMsioMy.



PLEASE READ THESE HELPFUL INSTALLATION TIPS BEFORE GOING ANY FURTHER!

Prior to installing the Dash/Main harness in your vehicle, plug all of the fuses (see a detailed picture, on page 14, of the fuse installation locations) and Horn Relay (see page 6), into this harness.

AS THIS HARNESS IS DESIGNED FOR USE IN A MODIFIED VEHICLE REQUIRING A HIGHER RATE OF CHARGE, IT DOES NOT SUPPORT THE USE OF A STOCK (ORIGINAL) ALTERNATOR. IT IS DESIGNED FOR USE WITH AN INTERNALLY REGULATED GM "SI" STYLE OR SINGLE WIRE STYLE ALTERNATOR. ADAPTERS (WHICH ARE NOT INCLUDED WITH THIS KIT) THAT ARE AVAILABLE FROM SEVERAL SOURCES WILL BE NECESSARY TO USE ANY ALTERNATOR OTHER THAN A GM "SI" STYLE OR SINGLE WIRE STYLE UNIT.

STEP 1: DISCONNECT YOUR BATTERY:

Disconnect the battery before installing the wiring kit to prevent any accidental shorting caused by loose bare wire ends.

STEP 2: START INSTALLING KIT (see page 3):

This kit is broken down into individual steps that are identified by a letter printed on the instruction sheets visible through each bag. These letters are the order of operation for installing your kit. Start with bag letter G, then H, etc. The order of installation is shown below. You will use this main instruction sheet, 929703561, to complete the installation process of bag G. See page three of this instruction set and Fuse Block Mounting instruction sheet 92970725 to begin.

- G - 510886 Dash Harness Kit
- H - 510555 Gauge Cluster Kit
- J - 510912 Engine Harness Kit
- K - 510911 Front Light Harness Kit
- M - 510556 Rear Body Kit
- N - 510394 Headlight Harness Kit
- V - 510730 VSS Connection Kit
- Z - 510476 Alternator and Main Connection Kit

STEP 3: RECONNECT YOUR BATTERY:

When you have completed the installation and are ready to reconnect the battery, make sure that the following electrical system grounds are in place:

- A. Battery is grounded to the ENGINE BLOCK.
- B. Battery is grounded to the frame.
- C. Engine block is grounded to the frame.
- D. Body is grounded to the frame.

STEP 4: CHECK ALL ELECTRICAL FUNCTIONS:

Any non-functioning items should be checked for proper installation. Any problems with your wiring and electrical circuit functions should be addressed to American Autowire Systems, Inc. as soon as possible to avoid any warranty problems.

If you have any questions concerning this or any of our products, please feel free to call us at 1-856-933-0801.


AMERICAN AUTOWIRE MAKES IT EASY !!

We carry many accessories for your 62-65 Ford Fairlane and 62-63 Mercury Meteor

p/n 510585
OEM small terminal crimping
tool (18-14 gauge)



p/n 510586
OEM large terminal crimping
tool (12-8 gauge)

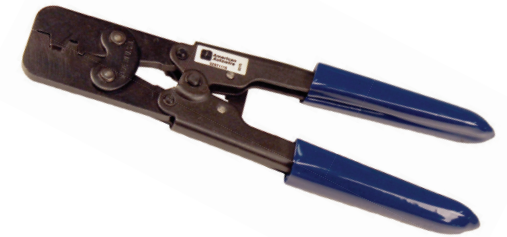

p/n 500918
Ford Duraspark Ignition Harness



p/n 500802
GM "SI" series to Ford "3G" int.
regulated alternator




1962-65 Ford Fairlane 1962-63 Mercury Meteor

Classic Update Series



510553

© COPYRIGHT 2004 American Autowire / Factory-Fit
Used with express permission of
American Autowire / Factory-Fit

92973561 Rev 0.0 2/1/2022

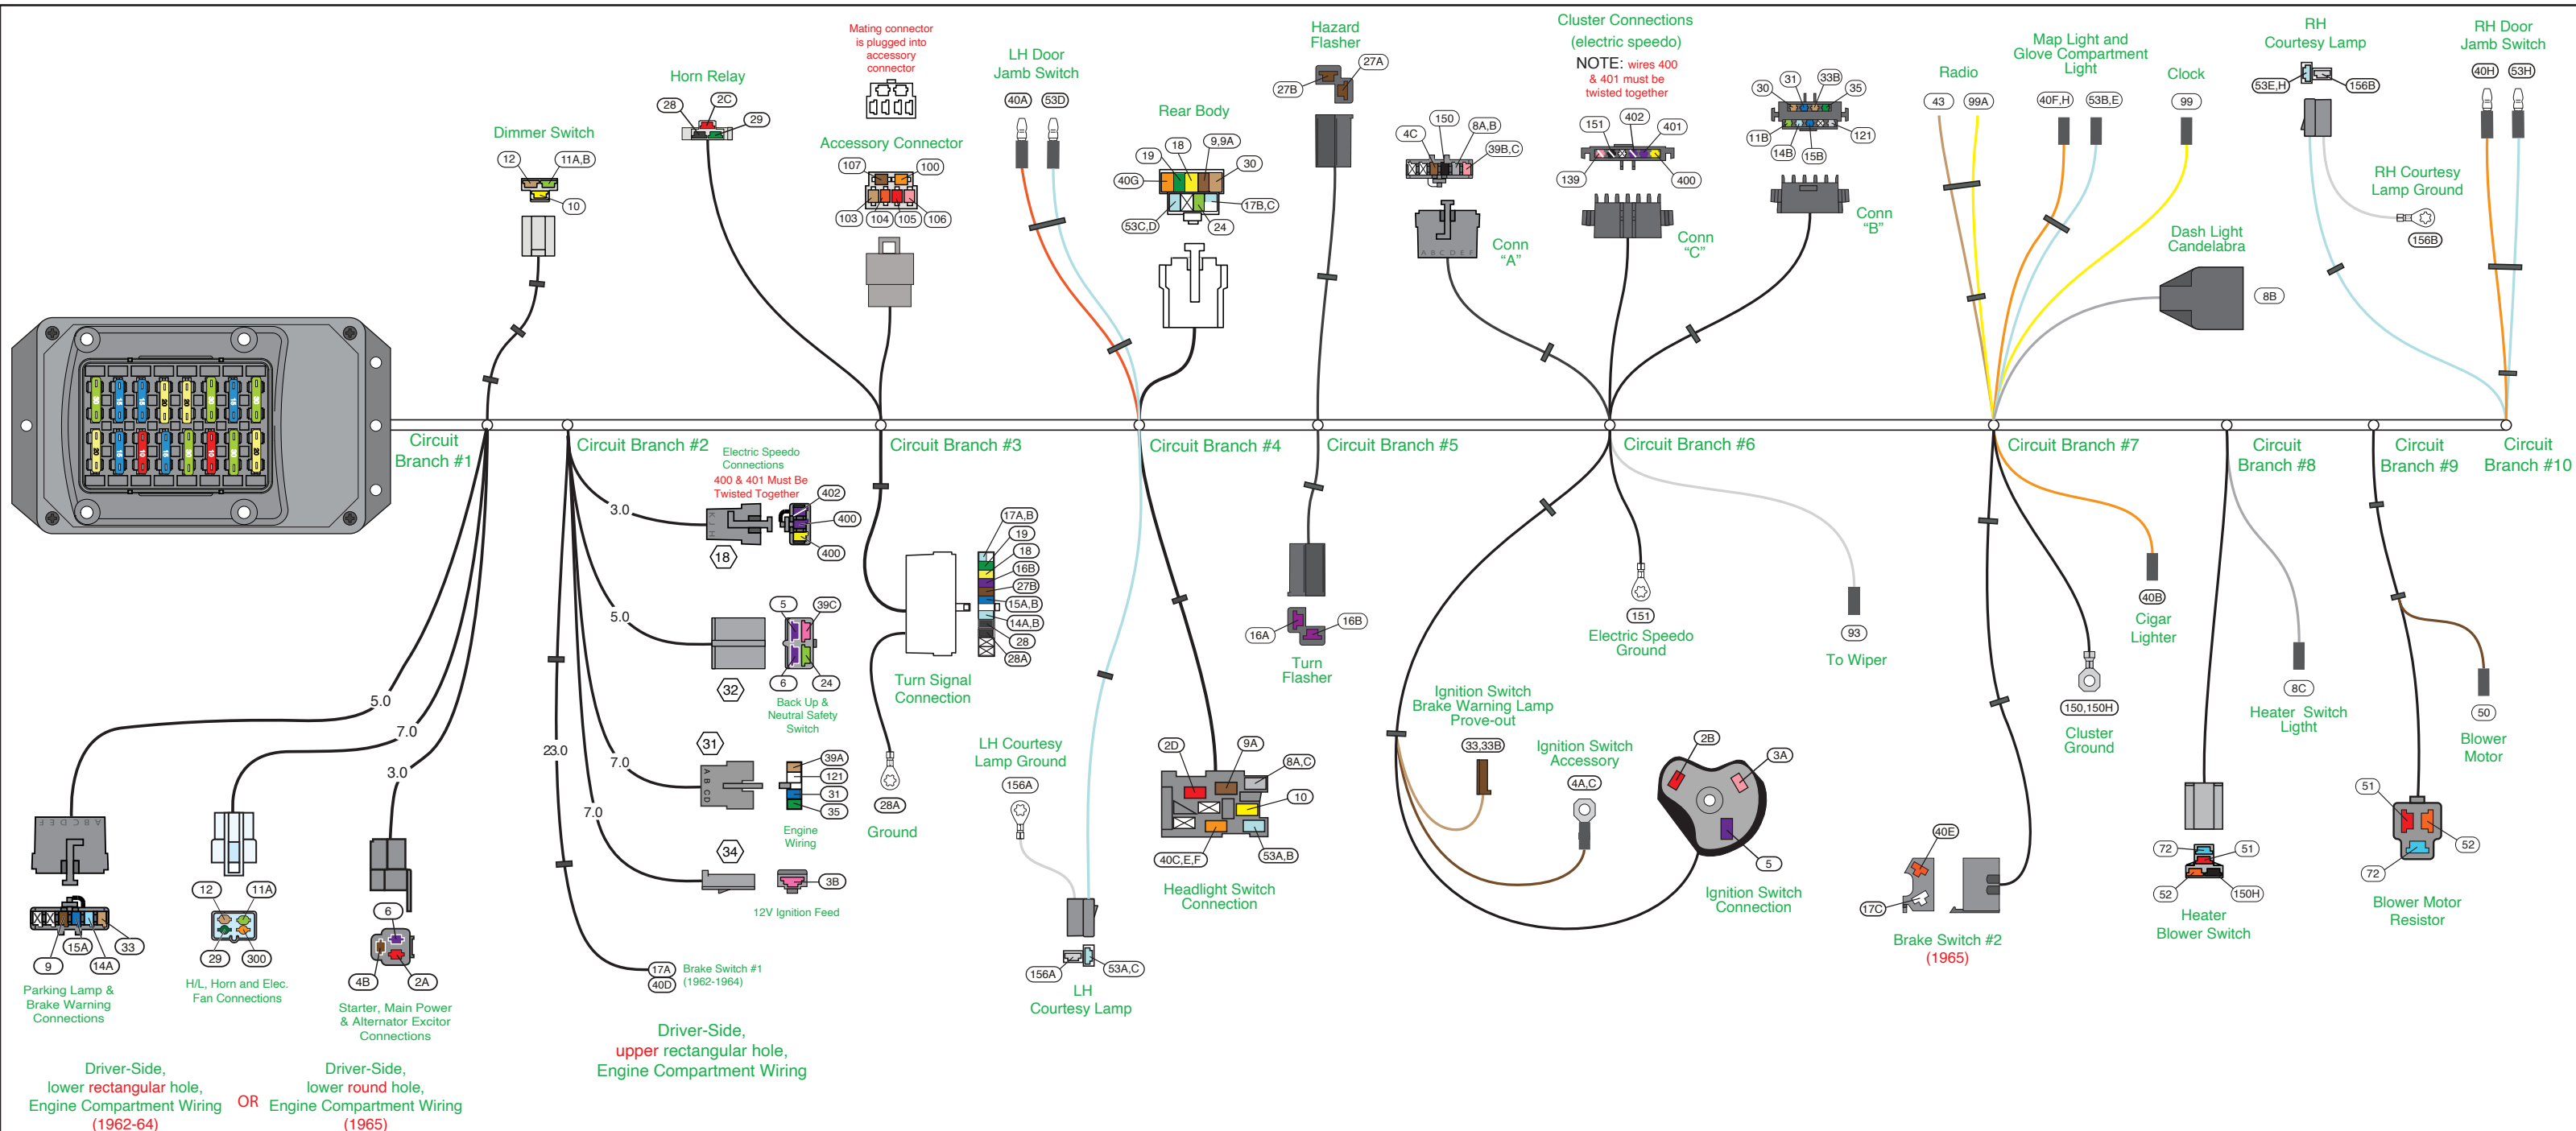

NOTE: Your new underdash courtesy lamp extensions use # 631 bulbs (not included with this kit). They may be purchased at any auto parts store.

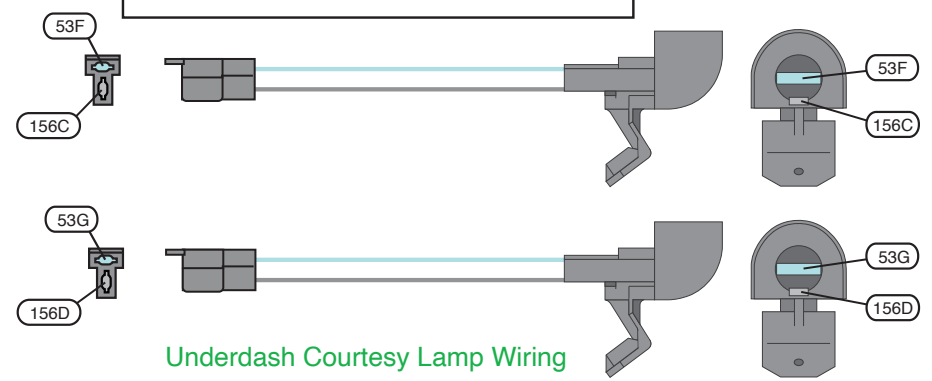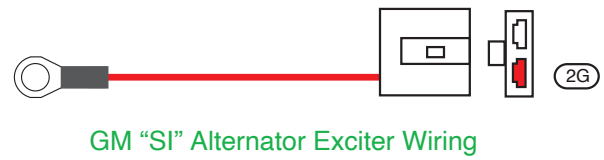

1962-65 Ford Fairlane
1962-63 Mercury Meteor
Classic Update Series
510553 92973561 Rev 0.0 2/1/2022

Prior to installing the Main Dash Harness, obtain the [Fuse and Flasher Kit 510557](#). Plug all of the Fuses in the Fuse Block (see [page 14](#) for the location of the fuses). Install the Horn Relay to the Dash Harness [510886](#) (see [Circuit Branch #3, page 6](#) for the Horn Relay location).

Main Dash Harness Installation Instructions

NOTE: Before installing the Dash Harness [510886](#), you will have to reuse and install your existing factory Wiper System Wiring and Connectors. We provide a 12V feed wire with a female bullet connector on the Dash Harness to connect to the factory Wiper wires. You will have to install the [Windshield Wiper Jumper Harness](#) (see [page 2](#)) included in [Bag G](#) for the 1962-1963 vehicles with a 1-speed Wiper. For all others, you will not need the Windshield Wiper Jumper Harness, but you will add a 1-way male bullet connector to your factory Wiper wiring and it will connect directly to the Dash Harness (see [page 14, for an example](#)).

Remove the original Wiper System Wires from your factory Instrument Panel Harness, use caution not to damage any wires or connectors. If you have a 1962-1963 vehicle with a 1-speed Wiper System, cut the red and blue wires (1962) or two blue wires (1963) at the Wiper System Circuit Breaker (you will not need the Circuit Breaker), slide on sleeve **J** to each wire, and crimp on a terminal **H** to each of these two wires. Now plug these two wires to the [Windshield Wiper Jumper Harness](#). For the (1962- 1963) vehicles with a 2-speed Wiper System, and all (1964-1965) vehicles, the Circuit Breaker is internal to the Wiper Switch so you will just cut the 12V feed wire (orange with a white stripe) about four inches from the Wiper Switch, slide on sleeve **J** and crimp on terminal **H** to this wire. This new male bullet connector will eventually plug into the mating Wiper female bullet connector on the Dash Harness [510886](#).

Now route the original factory Wiper wires to the Wiper Motor (see the [Fuse Block Mounting Instructions 92970725](#)) for the routing of the wires through the Firewall. Begin installing the Main Dash Harness [510886](#) and the Fuse Block (see the same [Fuse Block Mounting Instructions 92970725](#)).

Install two **S** clamps, found in the [510558](#) Parts Kit, to the Steering Column Support Bracket (see “**S** clamp location photograph”, on this page). Use the Bolt, Nut and Washer (item **R**) from the [510558](#) Parts Kit. The Dash Harness routing will be the same as the original Instrument Panel Harness routing. Continue routing the Dash Harness. Now proceed to Circuit Branch 1 instructions.

Circuit Branch 1 – Under Dash Connections

Dimmer Switch Route this wiring branch to the Dimmer Switch and connect. Plug this connector onto the Dimmer Switch [500042](#), and then attach the Dimmer Switch to the floor pan.

Wire #	Wire Color	Printing	Description
10	Yellow	DIMMER SW FEED	Feed from the Headlight Switch.
11A	Light Green	HEADLIGHT-HI BEAM	Feed to the LH Headlight-High Beam.
11B	Light Green	HI BEAM INDICATOR LIGHT	Feed to the Hi Beam Indicator Light in the Cluster.
12	Tan	HEADLIGHT-LOW BEAM	Feed to the LH Headlight-Low Beam.

Circuit Branch 1 – Engine Compartment Connections

NOTE: Plug the 510911 Front Light Extension harnesses onto the dash at this location and bring the wires through the firewall as shown on [page 12](#). See [page 12, “Figure A”](#) for typical connections. For loose piece terminals and connectors, see kit # 510558.

Main Power Feed to the Fuse Block Route the red 12V Battery wire (circuit 2A) which is in the Dash Harness, to the Megafuses (see [Figure C on page 13](#)) and cut to length. Use ring terminal, shrink tubing from 510476 kit. Connect as shown on [page 13](#).

Wire #	Wire Color	Printing	Description
2A	Red	12V BATTERY	Main power feed.

Start Circuit Route wire 6 to the Starter Relay and cut to length. Install sleeve **D** and crimp on terminal **K** (see [parts kit 510558](#)). Connect to the Starter Relay **S** stud (see [page 12, figure A](#)).

Wire #	Wire Color	Printing	Description
6	Purple	STARTER SOLENOID-S	Start circuit.



Alternator Output Circuit Obtain the large red [Alternator Feed Wiring](#) from the 510476 kit and connect as shown on [page 13](#) and on the instructions for the 510476 Alternator and Main Power Connection kit.

Wire #	Wire Color	Printing	Description
2	Red	no printing	Alternator output wire.


Alternator Exciter Wire

Wire 4B is the exciter wire for your Alternator/Voltage Regulator. If you are using a one wire Alternator, this wire will not be used and should be capped off as it is “hot” when the Ignition Switch is in the “ON or ACC” position. If you are using an Alternator that requires an internal or external Voltage Regulator, this wire must be connected to the “switched or 12V ignition” terminal on your Voltage Regulator or Alternator according to the manufacturers specifications for the type of Alternator/Voltage Regulator that is being used. An inline diode or resistor may be necessary to eliminate “run on” after being switched off. AAW recommends a Ford GEN 3 Internally Regulated or a one wire alternator. If you are using a GM “SI” alternator, obtain the [GM “SI” Alternator Exciter Wiring Harness](#) (see [page 2 included in Bag G](#)). Attach the ring terminal end of wire 2G to the Alternator Battery stud (see [page 13 Figure C](#)). Route the 4B wire in the Dash Harness to the 2-way connector, which is part of this same Exciter Wiring Harness. Crimp on terminal **B** to wire 4B and insert into the open cavity of the 2-way connector. Now plug the 2-way connector into the “SI” alternator.

Wire #	Wire Color	Printing	Description
2G	Red	no printing	Alternator Battery Stud wiring in the GM “SI” Alternator Exciter Wiring Harness.
4B	Brown	ALTERNATOR IGN	Alternator Exciter wire.

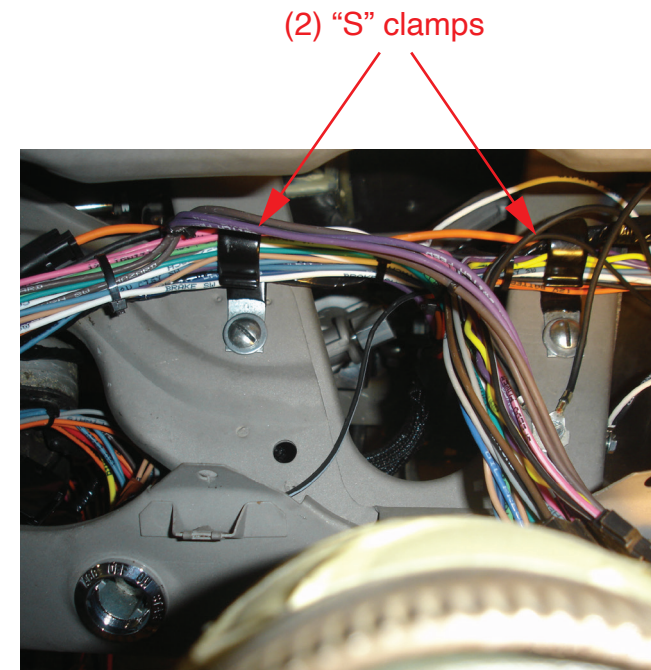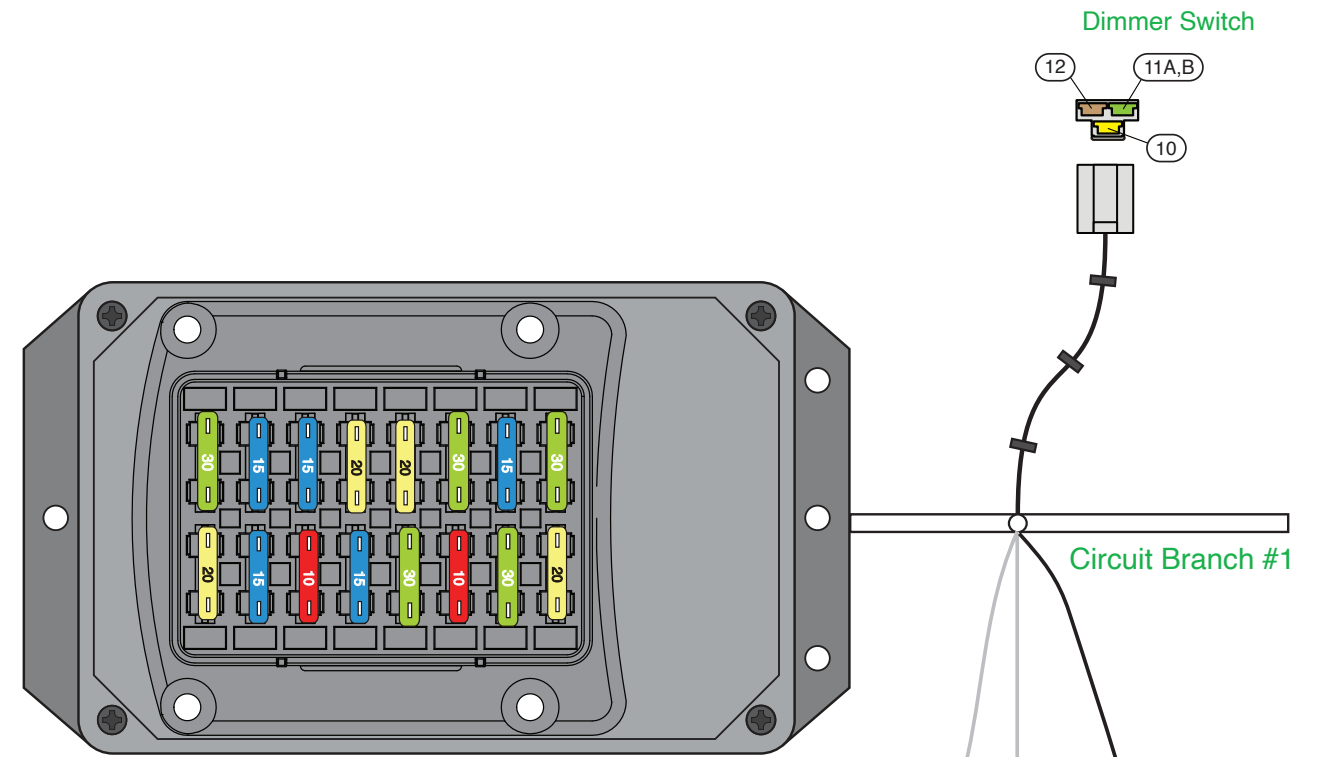

“S” clamp location photograph

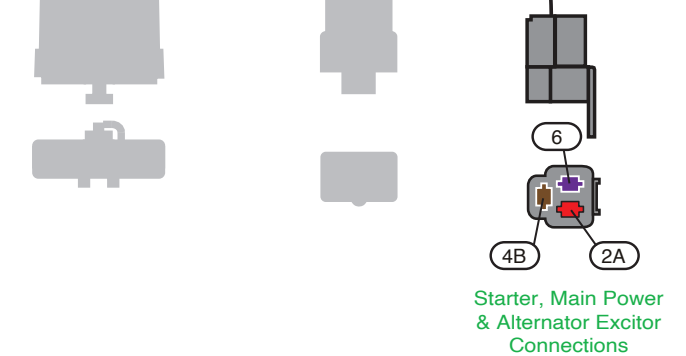

www.americanautowire.com 856-933-0801

1962-65 Ford Fairlane
1962-63 Mercury Meteor
Classic Update Series

510553 92973561 Rev 0.0 2/1/2022

CONT'D: Plug the 510911 Front Light Extension harnesses onto the dash at this location and bring the wires through the firewall as shown on page 12. See page 12, "Figure A" for typical connections. For loose piece terminals and connectors, see kit # 510558.

Park/Turn Signal - Lamp & Socket Assemblies **NOTE:** You will need to reuse the original Front Park/Turn Signal Lamp & Socket Assemblies, but will have to replace each 2-way bullet connector with a 2-way AAW connector (see figure A on page 12). Be sure that the Park/Turn Signal Lamp pigtail is routed and retained, per the original factory routing, before replacing the connectors. For both LH and RH Park/Turn Lamp & Socket Assemblies, remove the old 2-way molded bullet connectors, and install terminals **W** to each wire and install the wires in the 2-way connector **V** (all supplied in kit 510558) as shown in figure A on Page 12. The original Ford Left Front Turn wire is green/white and the Park Light wire is black/yellow. The original Ford Right Front Turn wire is white/blue and the Park Light wire is black/yellow.

Left Hand & Right Hand Park/Turn Lamp Connectors Select the brown Park Light wire (9), route the wire close to the 2-way connector **V** that was just added to the LH Park/Turn Signal Lamp & Socket Assembly, cut to length, take the cut off portion, double them together in terminal **C** and install into connector **T** (see page 12 Figure A). Be sure to align the AAW brown Park Light wire with the original Park Light wire. Route the remaining brown wire close to the 2-way connector that was just added to the RH Park/Turn Signal Lamp & Socket Assembly. Crimp on terminal **B**, and install into another connector **T**.

Select the light blue Left Front Turn wire (14A), route this wire to the same connector **T** where wire 9 is located. Crimp on terminal **B** and install in that connector **T** (see page 12 Figure A). Now make the connection to the LH Park/Turn Lamp & Socket Assembly.

Select the Right Front Turn wire (15A) and route it to the 2-way connector **V** that was added to the RH Park/Turn Signal Lamp & Socket Assembly. Cut to length, crimp on terminal **B** and install into connector **T** (see page 12 Figure A) where the brown park light wire is already located. Now make the connection to the RH Park/Turn Lamp & Socket Assembly. Be sure to align the AAW Park Light wire (brown) with the Ford Park Light wire (black/yellow), the AAW Left Turn wire (Lt Blue) with the Ford Left Turn wire (green/white), and the AAW Right Turn wire (DK Blue) with the Ford Right Turn wire (white/blue).

Wire #	Wire Color	Printing	Description
9	Brown	PARK LIGHTS	Park Light feed.
14A	Lt Blue	LEFT FRONT TURN	Left Front Turn Signal feed.
15A	DK Blue	RIGHT FRONT TURN	Right Front Turn Signal feed.

Horn Connection Route wire (29) to the LH Horn and cut to length, double with the wire that was just cut, crimp on terminal **C** and insert into connector **N** and attach to the LH Horn (see Figure A on page 12). Route the loose wire to the RH Horn and crimp on terminal **B** and insert into connector **N** and attach to the RH Horn. All of the terminals and connectors will be found in kit 510558.

Wire #	Wire Color	Printing	Description
29	Dark Green	HORN	Horn feed.

LH and RH Headlight Extension Harnesses Obtain the Headlight Extension Harnesses 510394 (Bag N) and connect to your LH and RH Headlights. Attach each ground ring terminal to a good Radiator Core Support ground.

Headlights Select the light green Headlight High Beam wire (11A) and the tan Headlight Low Beam wire (12). Route these wires to the LH Headlight Extension Harness, cut each to length, take each of the cutoff portions, double each of them together with their original wires, crimp on terminal **C** to each pair of wires, and install each terminal into connector **Z** found in kit 510558 (see Figure A on page 12). Be sure to align the tan wire 12 with the Headlight Extension Harness tan wire and the light green wire 11A to the Headlight light green wire. Now plug this connector to the LH Headlight Extension Harness. Attach the black ground wire, with the ring terminal, from the LH Headlight Extension Harness to a good Radiator Core Support ground. Take the remaining light green and tan wires and route them to the RH Headlight Extension Harness. Cut each to length, crimp on terminal **B** to each one, and install into another connector **Z**. Align the wire colors as before. Plug this connector to the RH Headlight Extension Harness. Attach the black ground wire, with the ring terminal, from the RH Headlight Extension Harness to a good Radiator Core Support ground.

Wire #	Wire Color	Printing	Description
11A	Lt Green	HEADLIGHT-HI BEAM	High Beam feed to the LH headlight.
12	Tan	HEADLIGHT-LOW BEAM	Low Beam feed to the LH headlight.

NOTE: If you choose to upgrade your single reservoir Brake System to an upgraded dual reservoir Brake System, we have provided the circuits in the Dash Harness for a Brake Warning Light (Dash lamp and switch/switch connection not provided in kit).


The Brake Pressure Differential Warning Switch **NOTE:** if you have a Ford style twin post switch and wish to use it, simply cut the wires about 6 inches back from your old original connector, double them together, and splice them into wire assembly 33 (from page 3 of this instruction sheet) to complete your brake warning circuit. If you have an aftermarket single post switch, splice it into wire assembly 33 (from page 3 of this instruction sheet) to complete your brake warning circuit (also see Figure A on page 12).

Route wire 33B from the Dash Harness to the master cylinder area, cut to length, and splice it to the Brake Pressure Differential Warning Switch Extension (if needed).

Wire #	Wire Color	Printing	Description
33	Tan	BRAKE LIGHT/SWITCH	Brake Warning feed.

Aftermarket Electric Fan This circuit is provided to feed the trigger wire of your Electric Fan Relay (not provided with this kit). See the Electric Fan Manufacturers recommendations for electrical hook up. **NOTE:** This is a keyed hot feed.

Wire #	Wire Color	Printing	Description
300	Orange	ELECTRIC FAN	12V Ignition feed to the trigger wire of the Electric Fan Relay.

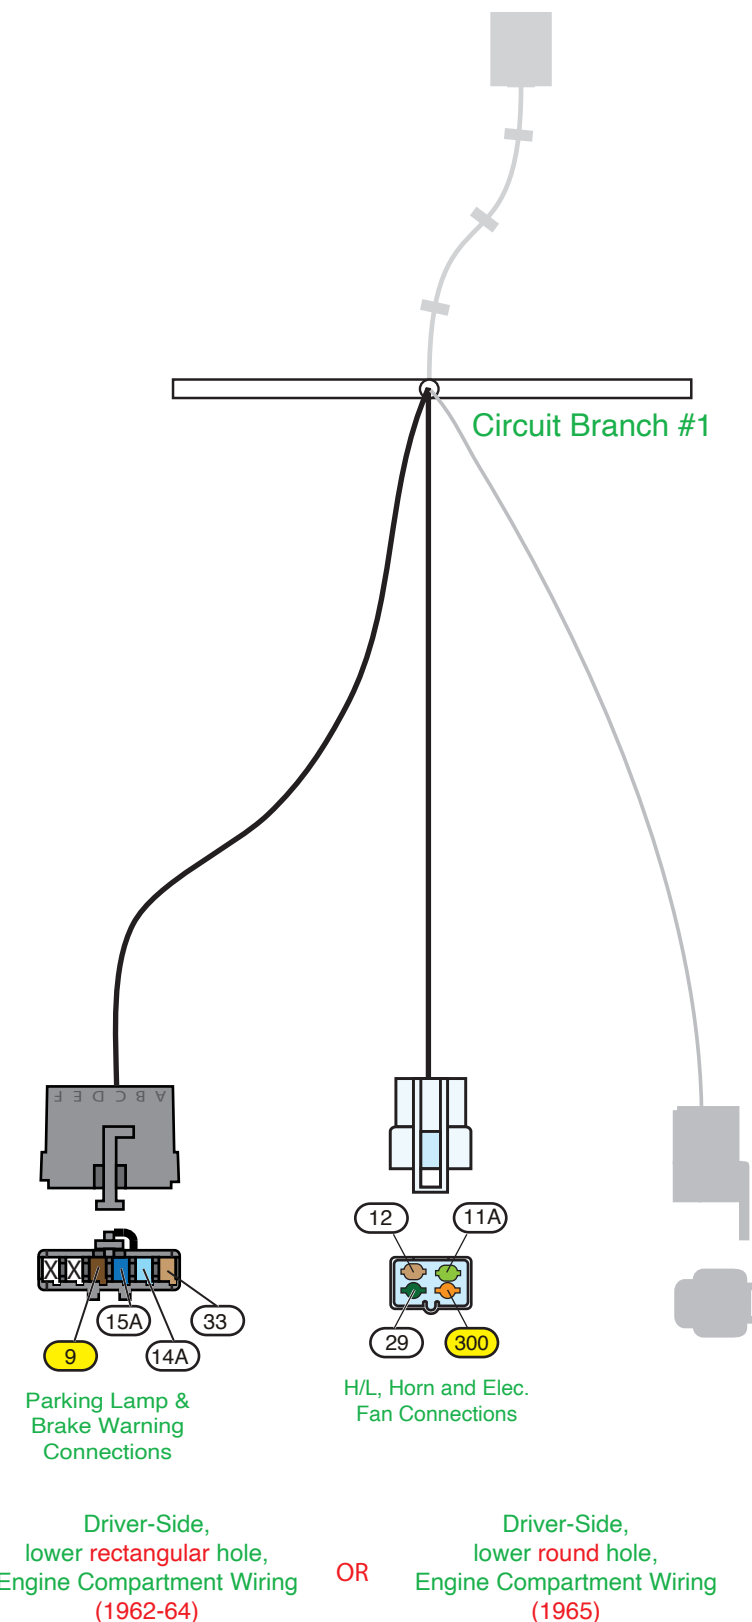

Driver-Side, lower rectangular hole, Engine Compartment Wiring (1962-64)

OR Driver-Side, lower round hole, Engine Compartment Wiring (1965)



www.americanautowire.com 856-933-0801

1962-65 Ford Fairlane
1962-63 Mercury Meteor
Classic Update Series
510553 92973561 Rev 0.0 2/1/2022

Circuit Branch 2 – Engine Compartment Connections

Aftermarket Electric Speedometer Connection Plug the 510730 VSS Connection Kit in here and see those instructions for detailed connections.

(NOTE: Wires 400 and 401 must remain twisted together)

Wire #	Wire Color	Printing	Description
400	Yellow	VSS GROUND	Vehicle Speed Sensor Ground.
401	Purple	VSS SIGNAL	Vehicle Speed Sensor Signal.
402	Purple/White	VSS POWER	Vehicle Speed Sensor Power if using a 3 wire sender.

Brake Switch #1 (1962-1964 Vehicles. For 1965 vehicles, see page 9, circuit branch 7, brake switch #2) This Stop Light Switch is located on the Brake Master Cylinder. Route wires 17A and 40D to the switch. Cut to length and install sleeve D on each wire (see Figure B on page 13). Crimp on terminal X and slide sleeve D over the terminal. Now connect to the switch, polarity doesn't matter.

Wire #	Wire Color	Printing	Description
17A	White	BRAKE SW	Brake Light feed to the Turn Signal Switch.
40D	Orange	BRAKE SW	12V feed from the Fuse Block.

NOTE: Plug the 510912 Engine, Coil Feed and Neutral Safety Switch Extension harnesses onto the dash at this location and bring the wires through the firewall as shown on page 13. See page 13, "Figures A and D" for typical connections. For loose piece terminals and connectors, see kit # 510558.

The Back-up and Neutral Safety Switches Route circuits 24 and 39C to the Back-up Lamp Switch and connect. If you have an Automatic Transmission, route circuits 5 and 6 to the Neutral Safety Switch and connect. If you have a Manual Transmission, connect wire 5 to wire 6. Note: If wire 5 and wire 6 are not connected, your Starter Solenoid will not engage, and your Engine will not crank. A typical connection for the Neutral Safety/Back-up Switch can be found on page 13, Figure D.

Wire #	Wire Color	Printing	Description
5	Purple	NEUTRAL SAFETY SWITCH	Start feed from the Ignition Switch to the Neutral Safety Switch or to wire 6.
6	Purple	STARTER SOLENOID-S	Start circuit from the Neutral Safety Switch or wire 5 to the Starter Solenoid.
24	Lt Green	BACK UP LT SW	Feed from the Back-up Lamp Switch to the Back-up Lamps.
39C	Pink	12V IGNITION	12V feed to the Back-up Lamp Switch.

Electric Choke This is the feed to the Electric Choke (if equipped). Route wire 39A to the Electric Choke and connect. No connectors or terminals have been provided for this connection.

Wire #	Wire Color	Printing	Description
39A	Tan	ELECTRIC CHOKE	On carbureted vehicles, connect to the Electric Choke.

Ignition Feed This is your 12V switched power source for the distributor /coil. This can be connected directly to the "Bat" terminal on a typical HEI Distributor, to a Ballast Resistor for a points type Distributor, or to be used as the ignition power source for an Aftermarket Ignition Module such as an MSD or "Dura Spark" module. See the installation instructions for the type of Distributor you are using for specific connection requirements. If you are using a GM style HEI distributor, terminal C and connector P (see Parts Kit 510558) have been provided to make that connection (see page 13 figure B for some examples).


Wire #	Wire Color	Printing	Description
3B	Pink	IGNITION FEED	Switched 12V Ignition feed for the ignition.

Engine Sensors Route circuit 31 to the Oil Pressure Sending Unit and circuit 35 to the Water Temperature Sending Unit, cut to length, install terminals B or M (install sleeve J first if using M), plug into connector N (if using terminal B), see page 13 Figure B. See Parts Kit 510558 for connectors and terminals.

Wire #	Wire Color	Printing	Description
31	Dark Blue	OIL PRESSURE SENDER	Oil Pressure Sending unit.
35	Dark Green	WATER TEMP SENDER	Hot Water Temperature.

Tachometer NOTE: This Kit will not support the use of an original factory tachometer (see the Warning Page). However, this can be connected directly to the Tachometer terminal on a typical HEI Distributor, to the negative side of the Ignition Coil, or a Tachometer connection in an aftermarket Ignition Module such as an MSD module. If you are using a GM style HEI Distributor, terminal B and connector Q (Parts Kit 510558) have been provided to make that connection (see page 13, figure B).

Wire #	Wire Color	Printing	Description
121	White	COIL --> TACH	Tachometer feed wire.

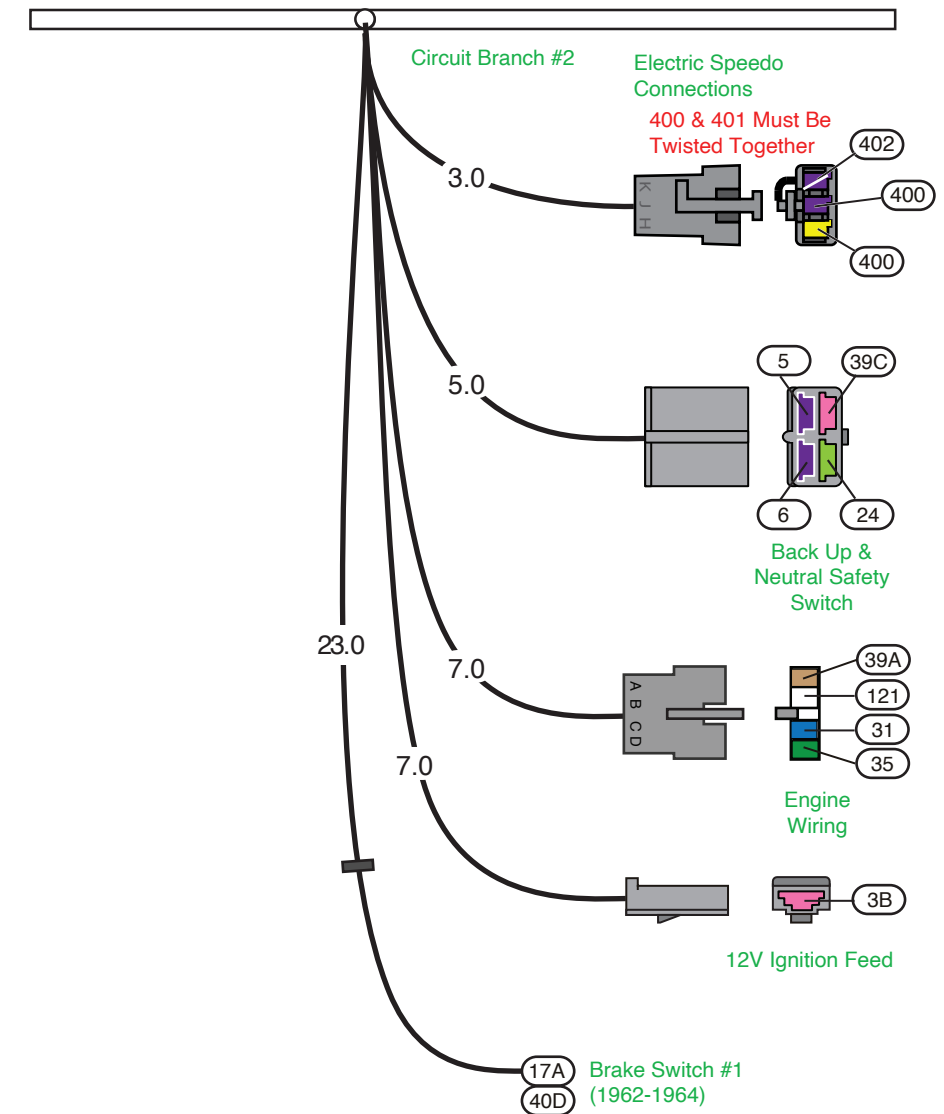

www.americanautowire.com 856-933-0801

1962-65 Ford Fairlane
1962-63 Mercury Meteor
 Classic Update Series

510553 92973561 Rev 0.0 2/1/2022

Circuit Branch 3 – Under Dash Connections

Accessory Connector Use the provided 6-way empty connector, which is attached to the 6-way Accessory Connector on the Dash Harness, and terminals B or C (see kit 510558) to add power leads (not provided) for the following systems:

Wire #	Wire Color	Printing	Fuse#	Fuse Block Cover	Fuse Rating	Description
100	Orange	no printing	7	Hazard	15A	Battery feed for Hazard or Audio Systems.
103	Tan	FUEL PUMP	10	Fuel Pump	20A	Ignition feed for Electric Fuel Pump.
104	Orange	POWER SEATS	2	Pwr Seats	30A	Battery feed for Power Seats.
105	Red	POWER LOCKS	8	Pwr Locks	20A	Battery feed for Power Locks.
106	Pink	POWER WINDOWS	15	Pwr Window	30A	Accessory feed for Power Windows.
107	Orange	12V BATTERY FUSED	1	Bat-Spare	30A	Battery feed for options.

Horn Relay Connector If you haven't already, now plug the Horn Relay (found in the 510557 Fuse kit) into this connector.

Wire #	Wire Color	Printing	Description
2C	Red	12V BATTERY	12V Battery feed to the Horn Relay.
28	Black	HORN RELAY GROUND	Relay ground circuit (to the Steering Column).
29	Dark Green	HORN	Feed to the Horns.


Turn Signal Switch Connector Plug into the Steering Column Turn Signal Switch connector. If you are using a stock Ford Steering Column on your vehicle, refer to Diagram 'A' and 'Table A' on page 11 for the proper mating directions. This Dash Harness is designed to function with a GM style turn signal switch. Our connector mates to a 3 7/8 inch long plug used on 1969-1974 GM, IDIDIT, and many other aftermarket steering columns. Starting from 1975 on up, the GM switch changed and began using a 4 1/4 inch connector. That connector is from the same family and uses the same terminals. By using the supplied mating connector and terminals located in the loose piece kit 92970715 inside Bag G, it is easy to adapt any steering column to this Dash Harness. The different functions of the wires in the Dash Harness connectors are as follows:

Wire #	Wire Color	Printing	Description
14A	Light Blue	LEFT FRONT TURN	Feed to the LH Front Turn Signal Light.
14B	Light Blue	LEFT DASH IND	Feed to the LH Turn Indicator Light.
15A	Dark Blue	RIGHT FRONT TURN	Feed to the RH Front Turn Signal Light.
15B	Dark Blue	RIGHT DASH IND	Feed to the RH Turn Indicator Light.
16B	Purple	TURN SWITCH FEED	Turn Signal Feed from the Turn Signal Flasher.
17A	White	BRAKE SW	Brake Switch #1 feed to the Turn Signal Switch.
17B	LT Blue	THIRD BRAKE LIGHT	12V feed to the optional Third Brake Light.
18	Yellow	LEFT REAR TURN	Feed to LH Rear Turn Signal Light.
19	Dark Green	RIGHT REAR TURN	Feed to RH Rear Turn Signal Light.
27B	Brown	TURN SW- HAZARD	Hazard feed to the Turn Signal Switch from the Hazard Flasher for a Steering Column with the Hazard function.
28	Black	HORN RELAY GROUND	Horn Relay ground to Horn Switch.
28A	Black	HORN RELAY GROUND	Horn Switch to ground.

Circuit Branch 4 – Under Dash Connections

Left Hand Door Jamb Switch Connection Route the two bullet terminals through the LH Door Jamb Switch hole from behind, and connect to the Door Jamb Switch which is included in kit 510558. Polarity does not matter. Attach the Door Jamb Switch in the original location.

Wire #	Wire Color	Printing	Description
40A	Orange	12V BATTERY-FUSED	12V Fused Battery Feed.
53D	Lt Blue	12V CTSY SW	Feed to the LH Courtesy Light.

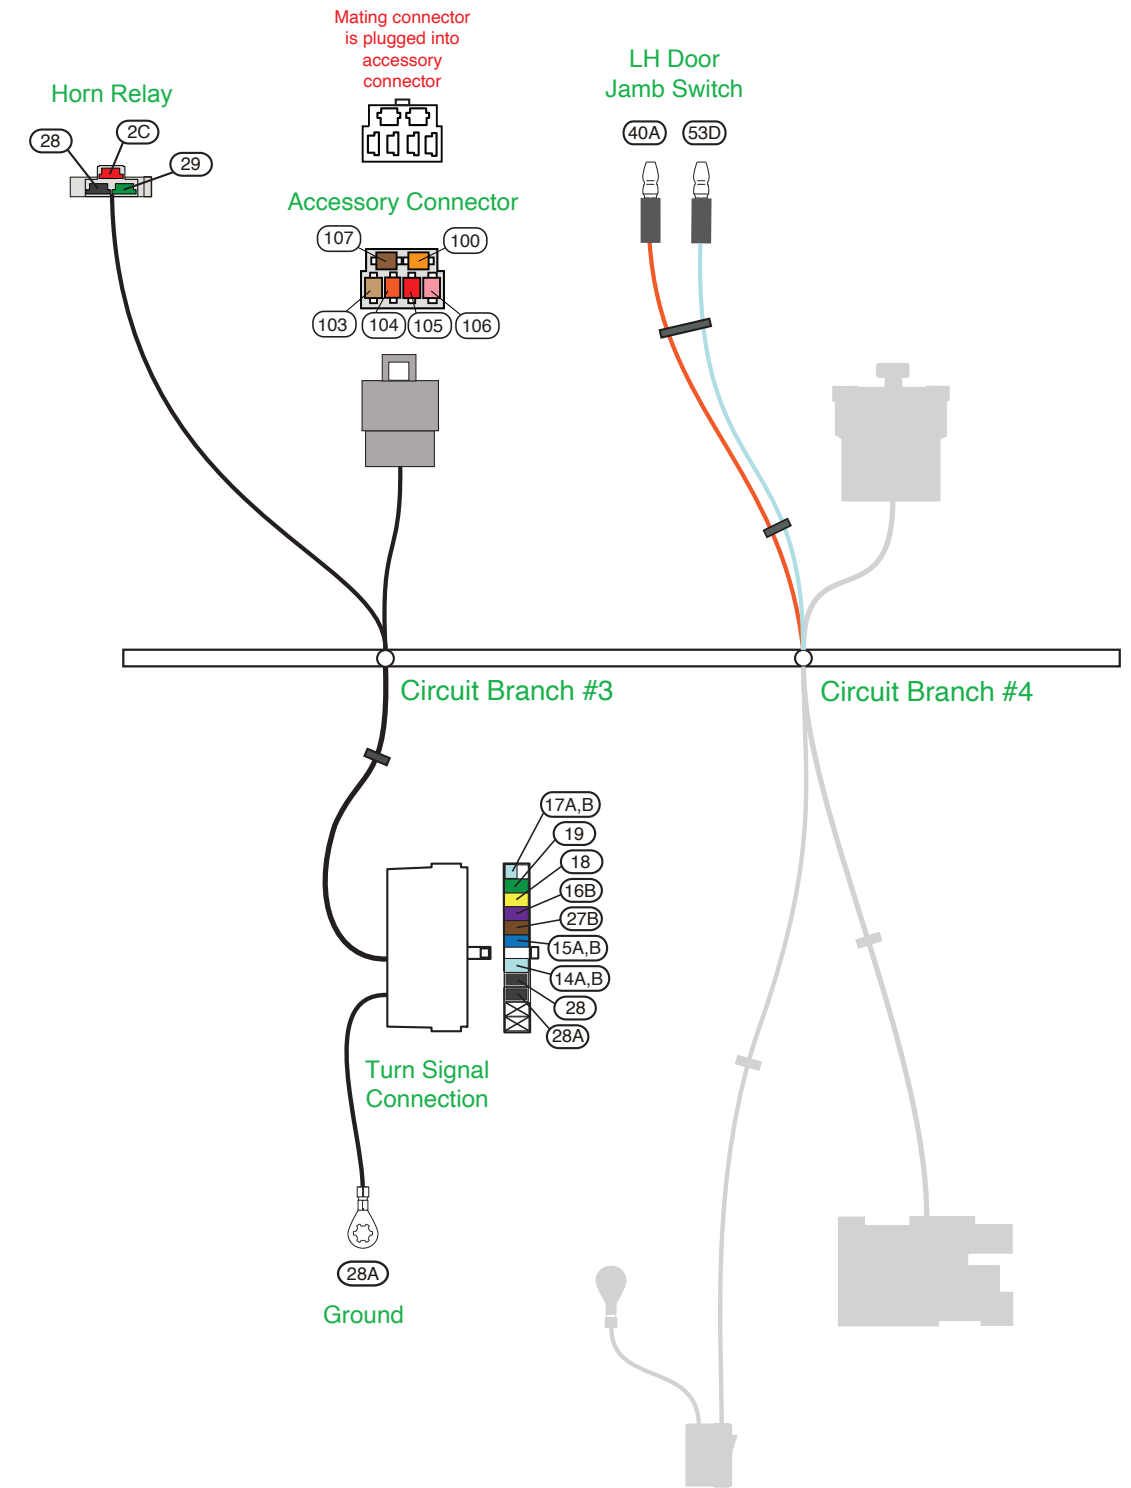

www.americanautowire.com 856-933-0801

1962-65 Ford Fairlane
1962-63 Mercury Meteor
 Classic Update Series

510553 92973561 Rev 0.0 2/1/2022

Rear Body Harness Connection This connector will plug to the Rear Body Harness 510556 (Bag M). Specific connections are addressed in that kit. The Rear Body Harness will route along the driver's sill the same as the original Ford Body Harness routing. Be sure to attach the wiring in the original routing clips.

Wire #	Wire Color	Printing	Description
9	Brown	PARK LIGHTS	Feed to the Front Park Lights.
9A	Brown	REAR RUNNING LIGHTS	Feed for the License Light and Rear Running Lights.
17B	Light Blue	THIRD BRAKE LIGHT	Feed for an Aftermarket Third Brake Light.
17C	White	BRAKE SW	Brake Switch #2 feed to the Turn Signal Switch.
18	Yellow	LEFT REAR TURN	Feed to the Left Rear Stop and Turn Light.
19	Dark Green	RIGHT REAR TURN	Feed to the Right Rear Stop and Turn Light.
24	Light Green	BACK UP LT SW	Feed from the Back-up Light Switch to the Back-up Lights.
30	Tan	GAS GAUGE	Fuel Tank Sender.
40G	Orange	12V BATTERY-FUSED	12V Battery feed for the Trunk Light or Aftermarket LED Rear Lights.
53C, 53D	Light Blue	12V CTSY SW	12V Switched feed to the Dome Light.

Left Hand Courtesy Lamp Connector Plug into one Under Dash Courtesy Lamp Wiring Harness, from bag G (as shown on page 2), to complete this circuit, and attach to the lower Instrument Panel.

Wire #	Wire Color	Printing	Description
53A, 53C	Light Blue	12V CTSY SW	12V Switched feed to the Left Hand Courtesy Light.
156A	White	CTSY GROUND	LH Courtesy Lamp ground. Attach this ring terminal to a good ground.


Headlight Switch Connector Plug this connector to Headlight Switch 510385.

Wire #	Wire Color	Printing	Description
2D	Red	12V BATTERY	Un-fused 12V Battery feed from the Fuse Block.
8A	Gray	DASH LIGHTS	Dash Light feed to the Cluster.
8C	Gray	DASH LIGHTS	Dash Light feed to the Heater Switch Light.
9A	Brown	REAR RUNNING LIGHTS	Feed to the Rear Tail Lights and the License Light.
10	Yellow	DIMMER SW FEED	Feed to the Dimmer Switch for the Headlights.
40C	Orange	12V BATTERY-FUSED	Fused 12V battery feed from the Fuse Block.
40E	Orange	BRAKE SW	Feed to Brake Switch #2.
40F	Orange	12V BATTERY-FUSED	Feed to the Map Light or the Glove Box Light.
53A	Light Blue	12V CTSY SW	12V Switched feed to the Left Hand Courtesy Light.
53B	Light Blue	12V CTSY SW	12V Switched feed to the Map Light.

Circuit Branch 5 – Under Dash Connections

Hazard Flasher Connector When the Flasher is plugged in, you will be able to supply power to a Turn Signal Switch, which is part of an Aftermarket (or a Factory) Steering Column, with a Hazard Switch function. Plug the Flasher (part of the Fuse and Flasher Kit 510557) in, if so equipped.

Wire #	Wire Color	Printing	Description
27A	Brown	TURN SW – HAZARD	12V fused battery feed to the Hazard Flasher.
27B	Brown	TURN SW – HAZARD	Hazard Flasher feed to the Turn Signal Switch.

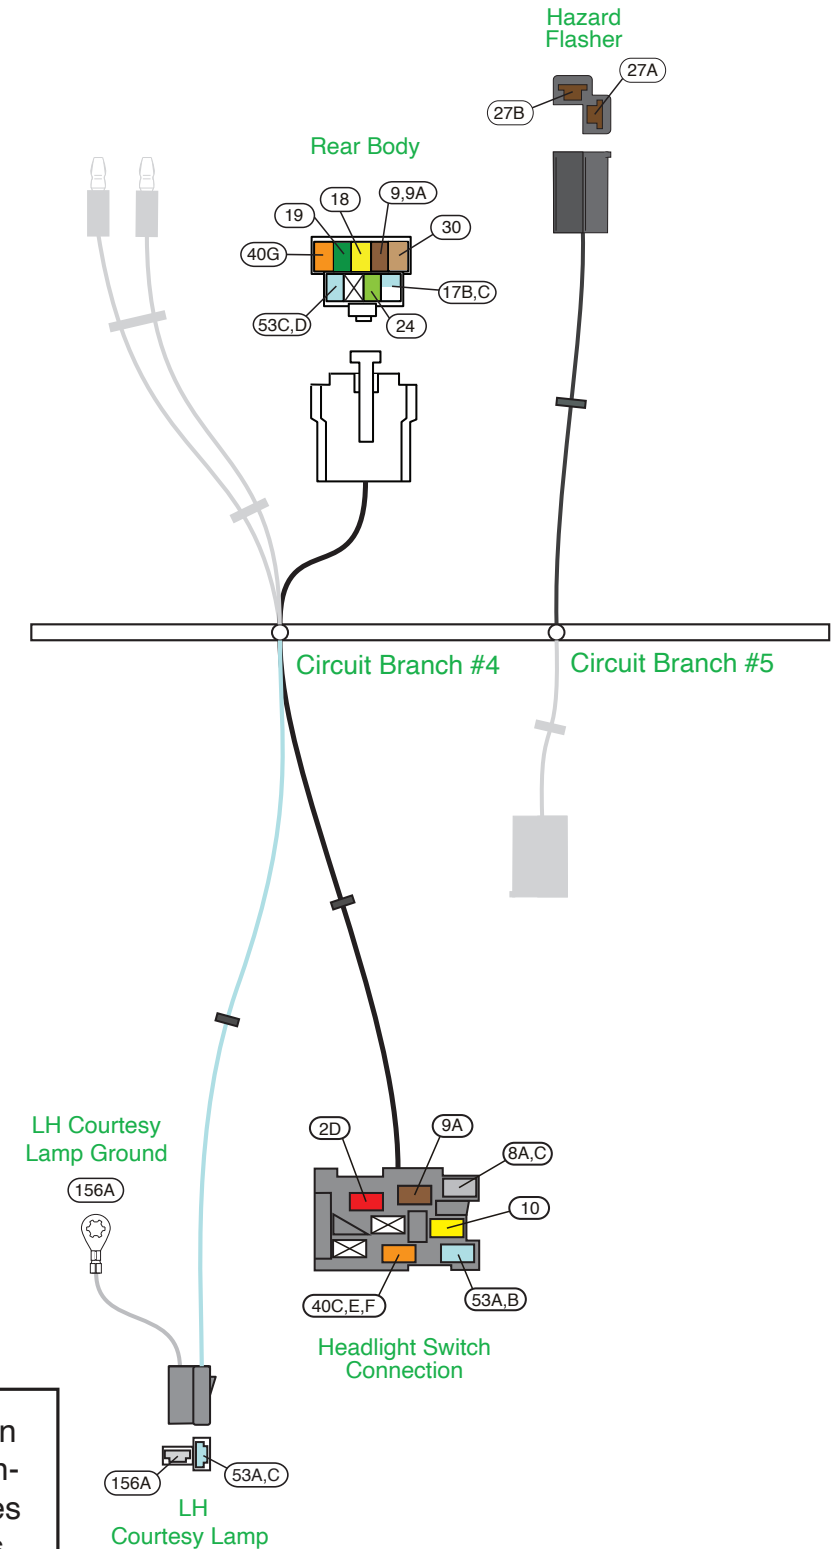

NOTE: The courtesy lamp extension from page 2, that plugs onto the connector at branch 4 on this page, uses a # 631 bulb (not included with this kit). They may be purchased at any auto parts store.



1962-65 Ford Fairlane
1962-63 Mercury Meteor
Classic Update Series
510553 92973561 Rev 0.0 2/1/2022

Turn Signal Flasher Connector This is the connector for the Turn Signal Flasher. Plug the Turn Signal Flasher (part of the Fuse and Flasher Kit 510557) into this connector. After the Flasher is connected, you can place it in the Flasher Holder on the back of the Instrument Cluster.

Wire #	Wire Color	Printing	Description
16A	Purple	TURN SWITCH FEED	12V fused ignition feed to the Turn Signal Flasher.
16B	Purple	TURN SWITCH FEED	Turn Signal Flasher feed to the Turn Signal Switch.

Circuit Branch 6 – Under Dash Connections

Instrument Cluster Connections These connections will plug into the Cluster Connector Kit 510555 (Bag H). Instructions are included in that kit for the connections to the Instrument Cluster.

Cluster Connector “A”

Wire #	Wire Color	Printing	Description
4C	Brown	no printing	Cluster 12V Accessory Feed.
8A, B	Gray	DASH LIGHTS	Headlight Switch feed for the Cluster Illumination Lights.
39B, C	Pink	12V IGNITION	Fused 12V Ignition Feed.
150	Black	GROUND	Cluster ground.

Cluster Connector “B”

Wire #	Wire Color	Printing	Description
11B	Light Green	HI BEAM INDICATOR LIGHT	Feed To the High Beam Indicator Light.
14B	Light Blue	LEFT DASH IND	Feed for the Left Turn Signal Indicator Light.
15B	Dark Blue	RIGHT DASH IND	Feed for the Right Turn Signal Indicator Light.
30	Tan	GAS GAUGE	Fuel Gauge Signal from the Fuel Tank Sending Unit.
31	Dark Blue	OIL PRESSURE SENDER	Oil Pressure Sender Signal from the Engine.
33B	Tan	BRAKE LIGHT/SWITCH	Brake Warning Light Feed for upgraded Brake Systems.
35	Dark Green	WATER TEMP SENDER	Water Temperature Sender Signal from the Engine.
121	White	COIL - TACH	Feed for an Aftermarket Tachometer (see the Warning Sheet).

Cluster Connector “C” This connector contains the circuits for an Aftermarket Electric Speedometer. Wires “400” and “401” must remain twisted together.


Wire #	Wire Color	Printing	Description
139	Pink/White	SPEEDO POWER	Fused 12V feed for the Electric Speedometer.
151	Black/White	SPEEDO GROUND	Electric Speedometer ground.
400	Yellow	VSS GROUND	Vehicle Speed Sensor ground.
401	Purple	VSS SIGNAL	Vehicle Speed Sensor signal.
402	Purple/White	VSS POWER	Vehicle Speed Sensor power.

Ignition Switch Connector Plug this connector to the Ignition Switch 510128. Use extra care when routing the wires away from the Ignition Switch. The Steering Column Support Bracket may be in close proximity to the wires and should be avoided.

Wire #	Wire Color	Printing	Description
2B	Red	12V BATTERY	12V Un-Fused Battery Feed from the Fuse Block.
3A	Pink	IGNITION FEED	Ignition Feed to the Fuse Block.
5	Purple	NEUTRAL SAFETY SWITCH	Start Feed to the Neutral Safety Switch or to Wire 6.

Ignition Switch Accessory Ring Terminal Attach this ring terminal to the Ignition Switch after the Ignition Switch Connector is plugged in. Use the nut to securely fasten the ring terminal to the Ignition Switch threaded stud. **NOTE: Do not over tighten.**

Wire #	Wire Color	Printing	Description
4A	Brown	IGNITION SW ACCY	12V Accessory Feed to the Fuse Block.
4C	Brown	no printing	12V Accessory feed to the Cluster.

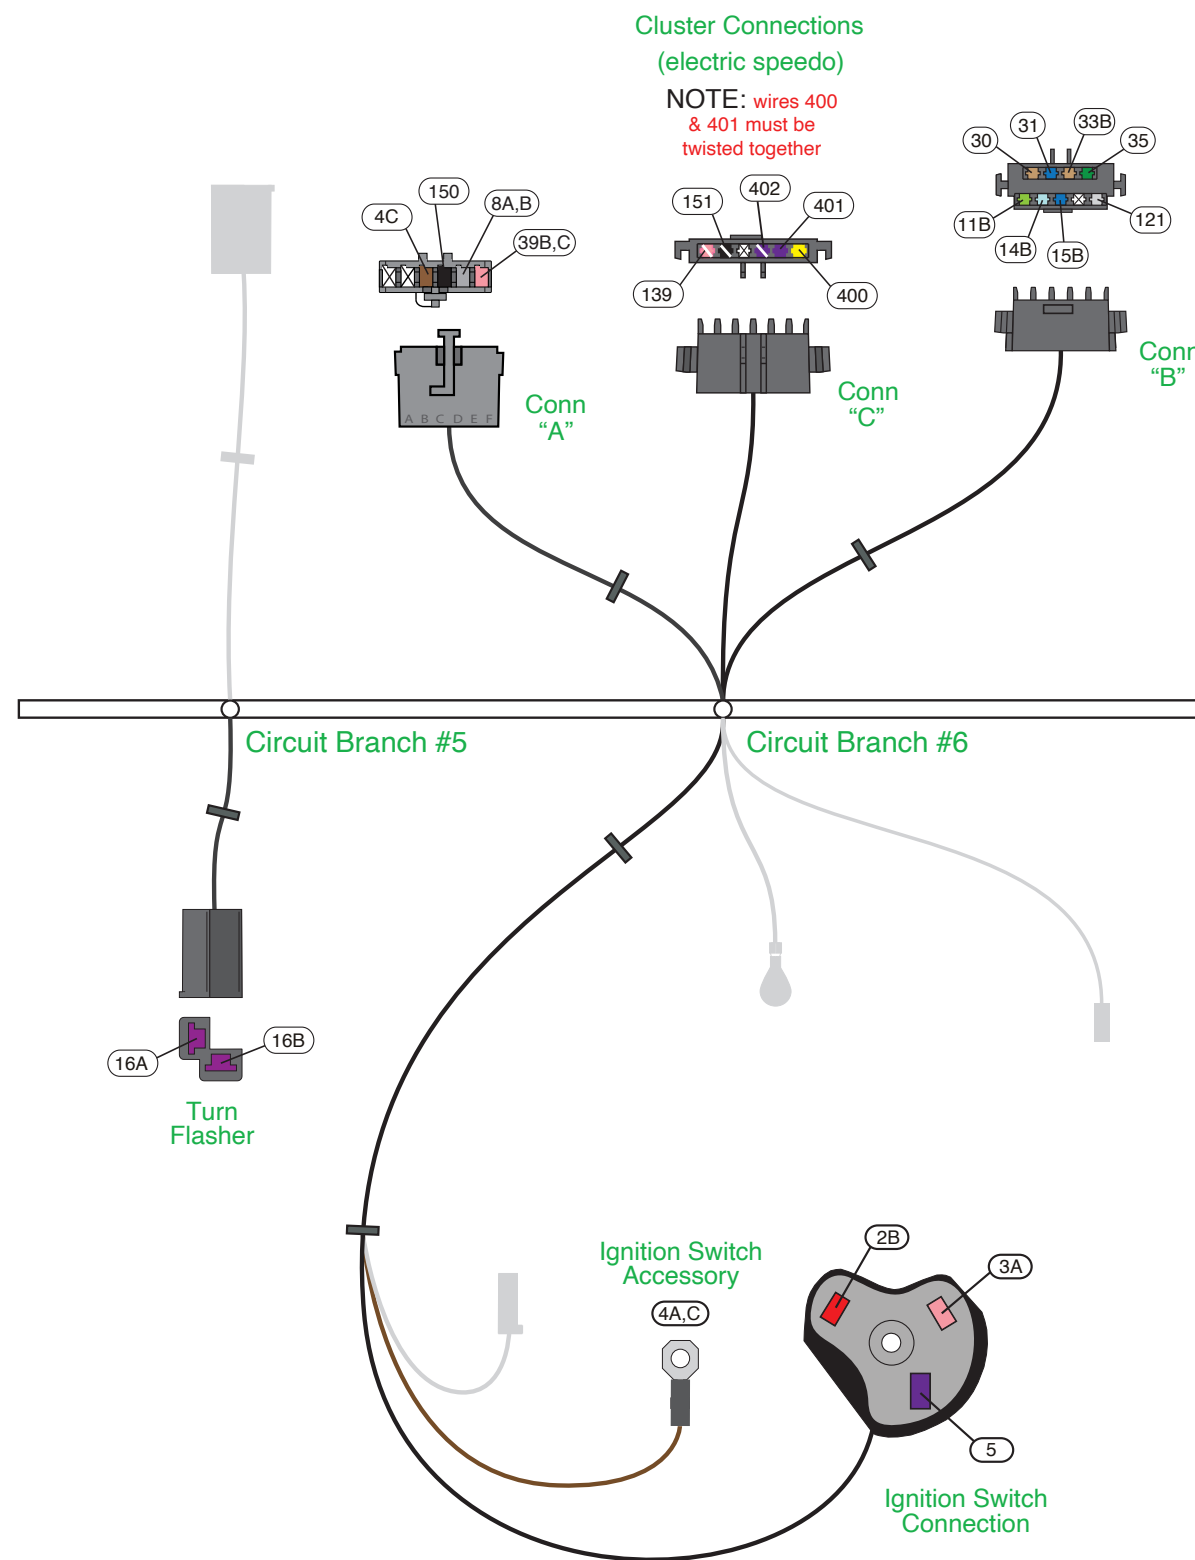

1962-65 Ford Fairlane
1962-63 Mercury Meteor
Classic Update Series
510553 92973561 Rev 0.0 2/1/2022

Ignition Switch Brake Warning Lamp Prove-out Connector For vehicles with an upgraded Brake System, connect this to the Ignition Switch after the Ignition Switch Accessory Ring Terminal is attached. This connector plugs onto the blade terminal which is located on the side of the Ignition Switch. This wire provides the bulb check ground for the Brake Warning Lamp circuit when the Ignition Switch is in the "Start" position.

Wire #	Wire Color	Printing	Description
33, 33B	Tan	BRAKE LIGHT/SWITCH	Brake Warning Lamp Bulb Check during Crank.

Aftermarket Electric Speedometer Ground Attach this wire to a good body ground. **NOTE: Do not attach this ring terminal with any other ground wires; it should be attached to ground all by itself.**

Wire #	Wire Color	Printing	Description
151	Black/White	Speedo Ground	Ground for an Aftermarket Electric Speedometer.

Wiper Connector This is the power feed to the Wiper System. Connect to the male bullet connector on the **Windshield Wiper Jumper Harness** (see page 2, located in Bag G) which is only used with a **1962-1963 1-speed Wiper System**, or the male bullet connector on the original factory Wiper wires (all others) that you added earlier and have already installed (see page 14, for an example).

Wire #	Wire Color	Printing	Description
93	White	WIPER FEED	12V fused feed for the Wiper System.

Windshield Wiper Jumper Harness This jumper is used for a **1962-1963** vehicle with a 1-speed Wiper System only. This is the power feed connection between the Dash Harness and the original factory Wiper wiring.

Wire #	Wire Color	Printing	Description
93A	White	WIPER FEED	Windshield Wiper feed.
93B	White	WIPER FEED	Windshield Wiper feed.

Circuit Branch 7 – Under Dash Connection

Dash Light Candelabra Attach the Ash Tray Light, Radio Illumination Light, Clock Light, Tachometer Light, or Auto Transmission Floor Shifter Dial Indicator Light to this candelabra connector. Note: If needed, male bullet terminal **A** and sleeve **D** have been provided to replace your original terminals. They can be found in the **510558** Parts Kit.

Wire #	Wire Color	Printing	Description
8B	Gray	DASH LIGHTS	Various Dash Light Feeds.

Clock Connect to the Clock (optional).

Wire #	Wire Color	Printing	Description
99	Yellow	CLOCK BAT	12V Fused Battery feed to the Clock.

Map and Glove Compartment Connectors These connectors are provided for your optional Glove Box Light or Map Light.

Wire #	Wire Color	Printing	Description
40F, H	Orange	12V BATTERY-FUSED	Battery Feed for the Glove Box, or the Map Light. (Mates to the dark green/yellow stripe wire).
53B, E	Light Blue	12V CTSY SW	Feed for the Map Lights. (Mates to the black/light blue stripe wire).

Radio These circuits are provided for your Radio.

Wire #	Wire Color	Printing	Description
43	Tan	RADIO	12V Fused Accessory Feed for the Radio "On/Off" power.
99A	Yellow	RADIO BAT	12V Fused Battery Feed for the Radio Memory.

Brake Switch #2 Connector (1965 Vehicles) Plug this connector to the Brake Light Switch #2 which is mounted to the Brake Pedal Assembly.


Wire #	Wire Color	Printing	Description
17C	White	BRAKE SW	Feed from the Brake Switch to the Turn Signal Switch for Rear Brake Lights.
40E	Orange	BRAKE SW	Fused 12V Battery Feed from the Fuse Block.

Ground Lead Attach this wire to a good body ground. **NOTE: Do not attach this ring terminal with the 151 ground wire in Circuit Branch #6.**

Wire #	Wire Color	Printing	Description
150	Black	GROUND	Cluster ground.
150H	Black	GROUND	Blower Switch Ground.

Cigar Lighter Connector Plug this connector to the Cigar Lighter.

Wire #	Wire Color	Printing	Description
40B	Orange	no printing	Fused 12V Battery Feed to the Cigar Lighter.

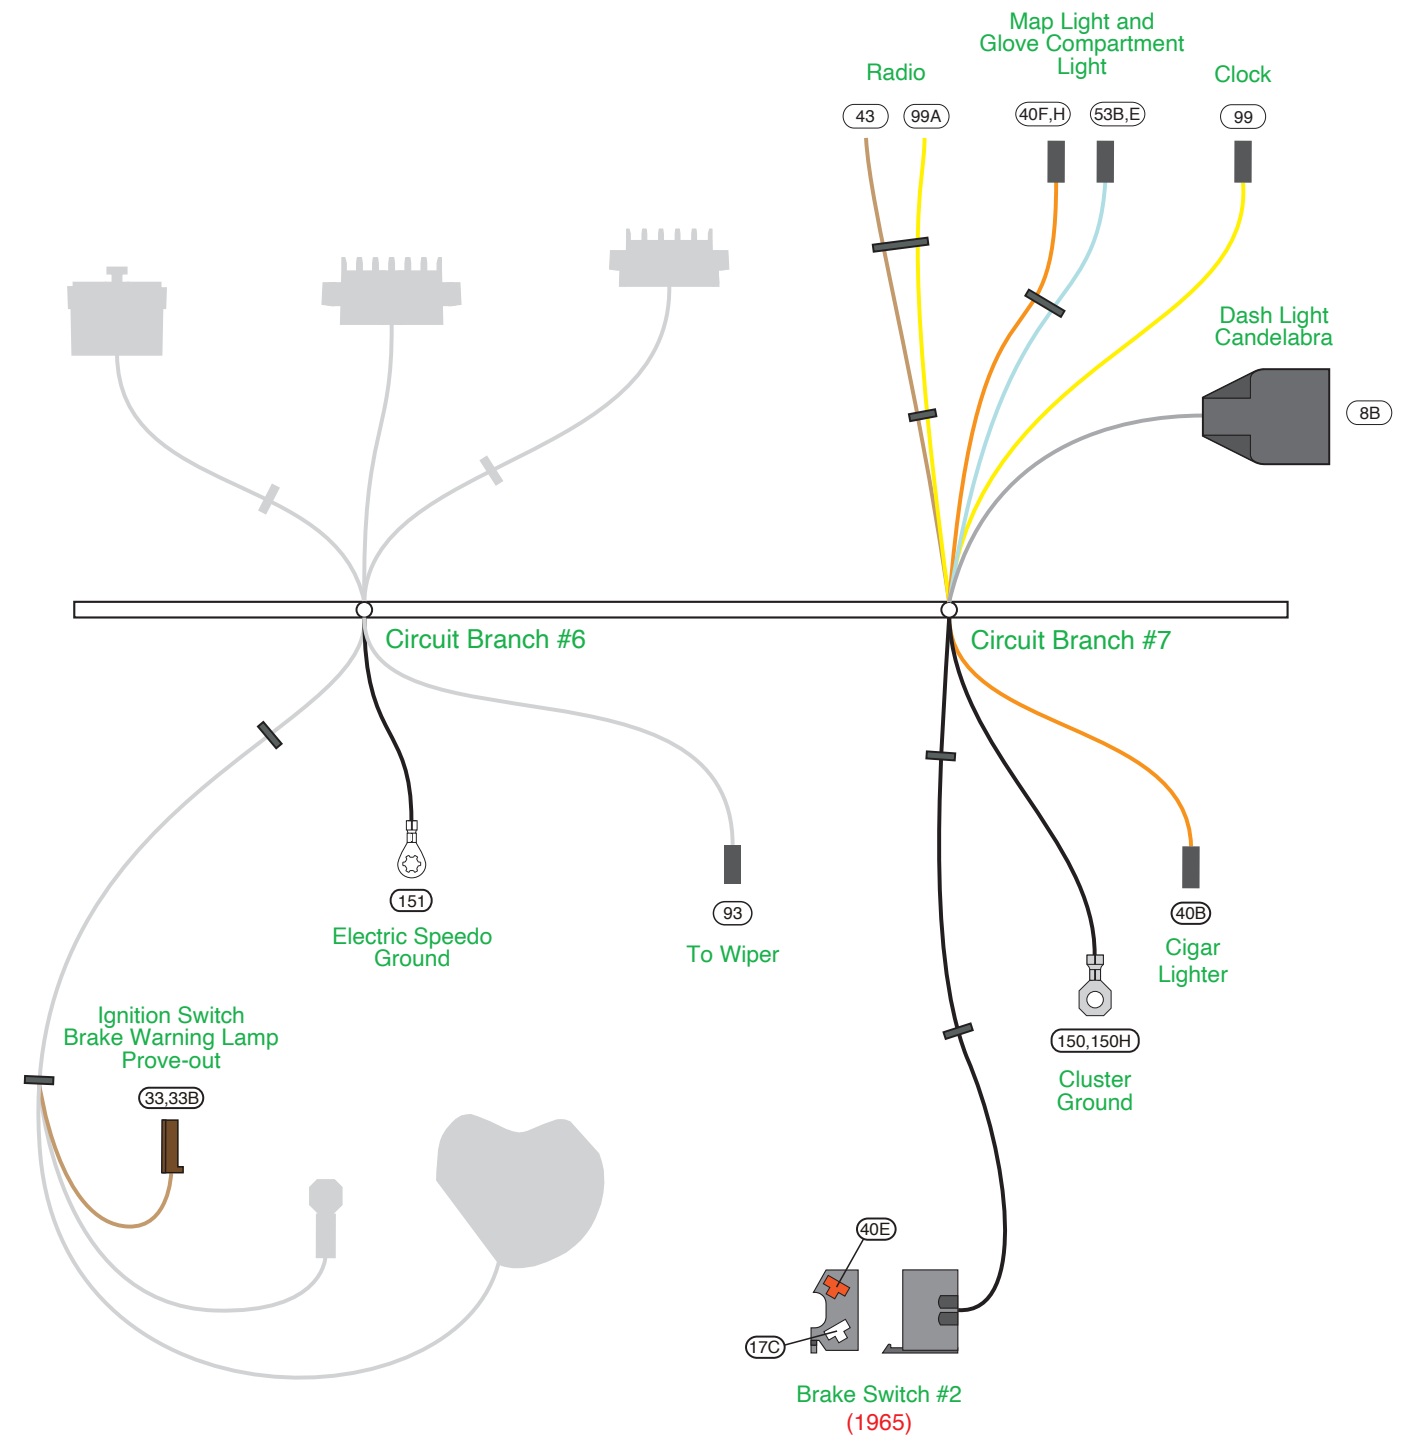

1962-65 Ford Fairlane
1962-63 Mercury Meteor
Classic Update Series
510553 92973561 Rev 0.0 2/1/2022

Circuit Branch 8 – Under Dash Connections

Heater Blower Switch Connector Connect this 4-way connector to the Heater Blower Switch.

Wire #	Wire Color	Printing	Description
51	Red	no printing	Heater Blower Switch Low Speed.
52	Orange	no printing	Heater Blower Switch High Speed.
72	Light Blue	no printing	Heater Blower Switch Medium Speed.
150H	Black	GROUND	Heater Blower Switch Ground.

Heater Switch Illumination Light Connect to the Heater Switch Illumination Light (if equipped).

Wire #	Wire Color	Printing	Description
8C	Gray	DASH LIGHTS	Heater Switch Light feed.

Circuit Branch 9 – Under Dash Connections

Blower Motor Resistor Connector Plug this connector onto the Blower Motor Resistor

Wire #	Wire Color	Printing	Description
51	Red	no printing	Blower Motor Low Speed.
52	Orange	no printing	Blower Motor High Speed.
72	Light Blue	no printing	Blower Motor Medium Speed.

Blower Motor Connector Connect to the Blower Motor Pigtail Wire which has the male bullet (or main power feed "IN" on an aftermarket system). There is another Pigtail Wire from the Blower Motor which will connect to the Blower Motor Resistor. That wire has a female Blade Terminal on it

Wire #	Wire Color	Printing	Description
50	Brown	HEATER/AC FEED	Fused 12V Blower Motor Feed.

Circuit Branch 10 – Under Dash Connections


Right Hand Courtesy Lamp Connector Plug into one Under Dash Courtesy Lamp Wiring Harness, from bag G (as shown on page 2), to complete this circuit, and attach to the Lower Instrument Panel.

Wire #	Wire Color	Printing	Description
53E, 53H	Light Blue	12V CTSY SW	12V Switched Feed to the Right Hand Courtesy Lamp.
156B	White	CTSY GROUND	RH Courtesy Lamp ground. Attach this ring terminal to a good ground.

Right Hand Door Jamb Switch Connection Route the two bullet terminals through the RH Door Jamb Switch hole from behind, and connect to the Door Jamb Switch which is included in kit 510558. Polarity does not matter. Attach the Door Jamb Switch in the original location.


Wire #	Wire Color	Printing	Description
40H	Orange	12V BATTERY-FUSED	12V Fused Battery feed.
53H	Light Blue	12V CTSY SW	Feed to the RH Courtesy Light.v

NOTE: The courtesy lamp extension from page 2, that plugs onto the connector at branch 10 on this page, uses a # 631 bulb (not included with this kit). They may be purchased at any auto parts store.

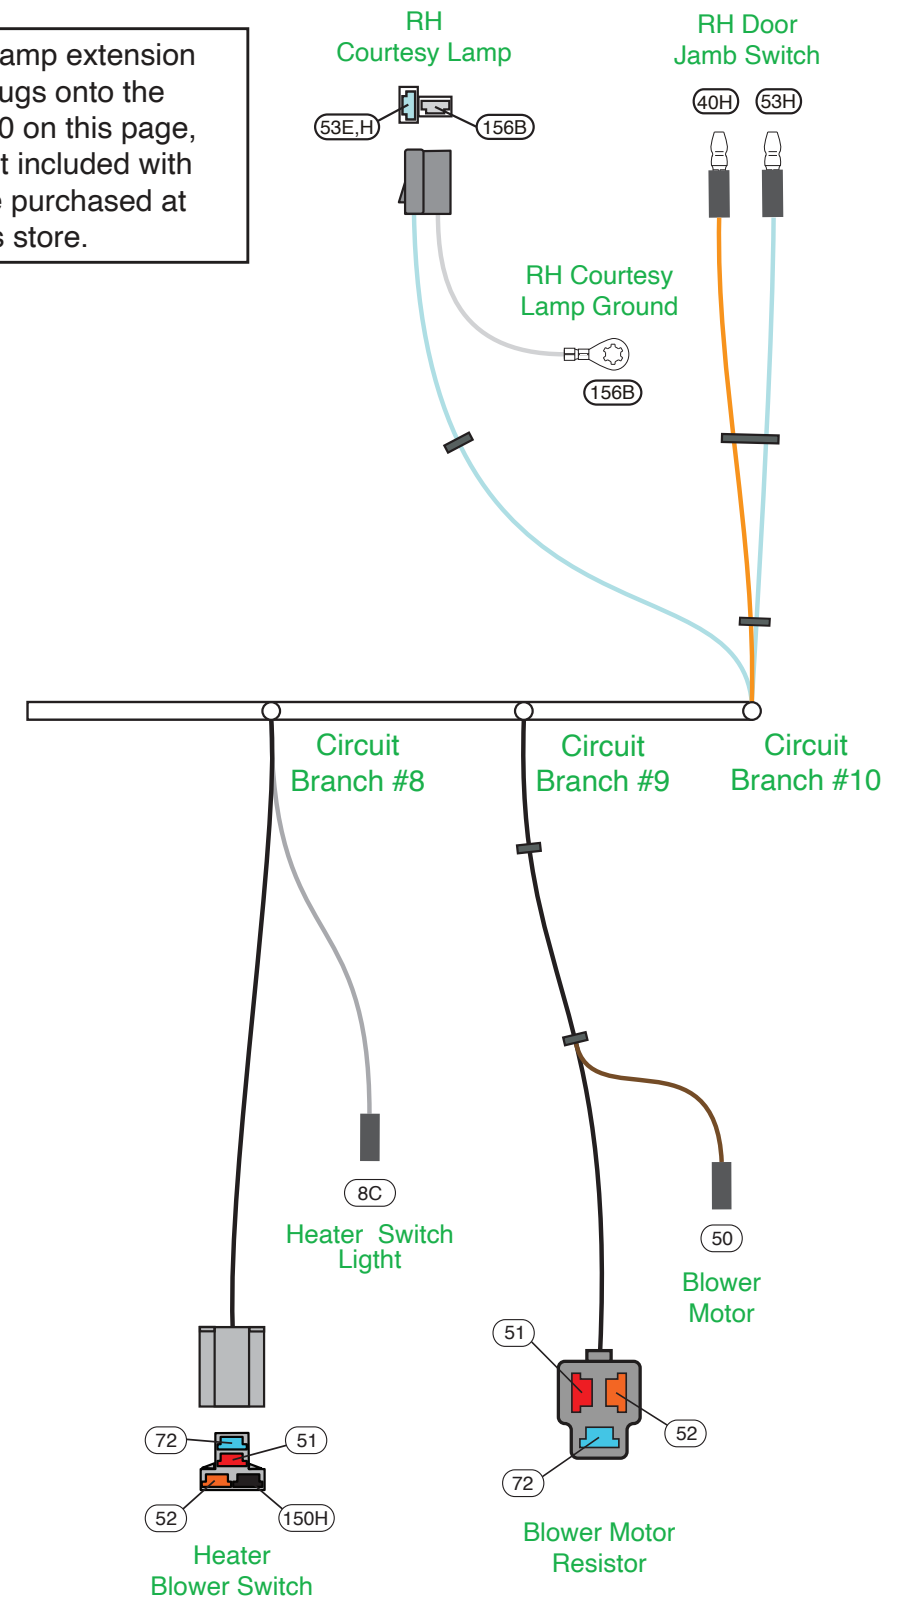

www.americanautowire.com 856-933-0801

1962-65 Ford Fairlane
1962-63 Mercury Meteor
 Classic Update Series
510553 92973561 Rev 0.0 2/1/2022

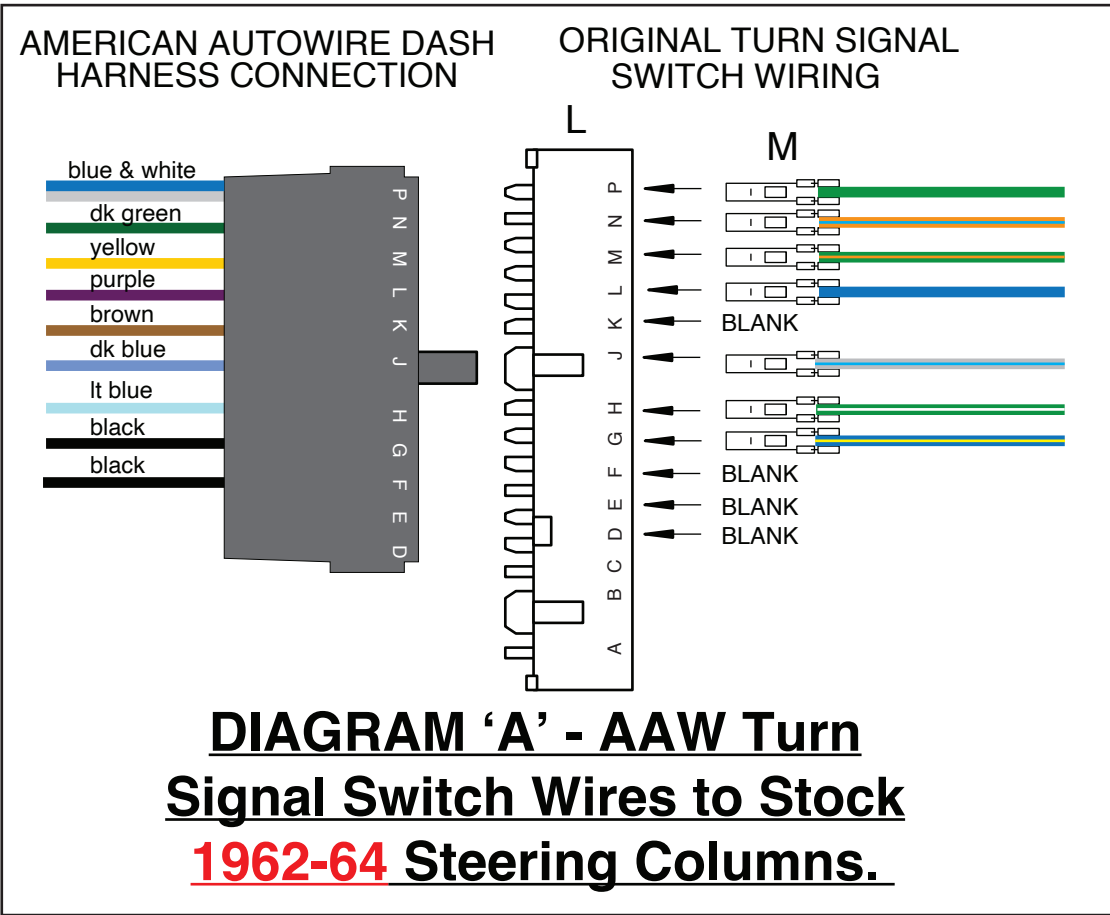


“Table A”

AAW Turn Signal Switch wires to stock 1962-1965 Ford Turn Signal Switch

AAW Wire #	AAW Wire Color	AAW Wire Printing	Connector Cavity	Ford Wire Color
17A,B	Blue & White	Brake SW	P	Green (1962-64) or Green with Red Stripe (1965)
19	Dark Green	Right Rear Turn	N	Orange with Blue Stripe
18	Yellow	Left Rear Turn	M	Green with Orange Stripe
16B	Purple	Turn Switch Feed	L	Blue
27B	Brown	Turn SW - Hazard	K	Not available
15A,B	Dark Blue	Right Front Turn	J	White with Blue Stripe
14A,B	Light Blue	Left Front Turn	H	Green with White Stripe
28	Black	Horn Relay Ground	G	Blue with Yellow Stripe (1962-64) or Yellow (1965)
28A	Black	Horn Relay Ground	F	Not available (1962-64) or Yellow with Green Stripe (1965)
None	None	None	E	None
None	None	None	D	None

NOTE: For the 1962-1964 vehicles, the Steering Column Horn Button switches ground for a Horn Relay, which then switches power to the Horns, similar to the AAW design. Wire 27B is being provided if an Emergency Warning Flasher System is to be added. Wire 28A is provided for the 1965 vehicles (see below) and is not used for the 1960-1964 vehicles.

NOTE: For the 1965 vehicles, the Steering Column Horn Button switched 12V power to the Horns. The AAW design, switches ground through the Steering Column Horn Button, which grounds a Horn Relay that will then switch power to the Horns. Therefore, you will have to align the AAW 28A Black wire (connector cavity F) to the Ford Yellow with a Green Stripe wire. Be sure to connect the ring terminal end of 28A, to a good ground. Wire 27B is being provided, if an Emergency Warning Flasher System is to be added.

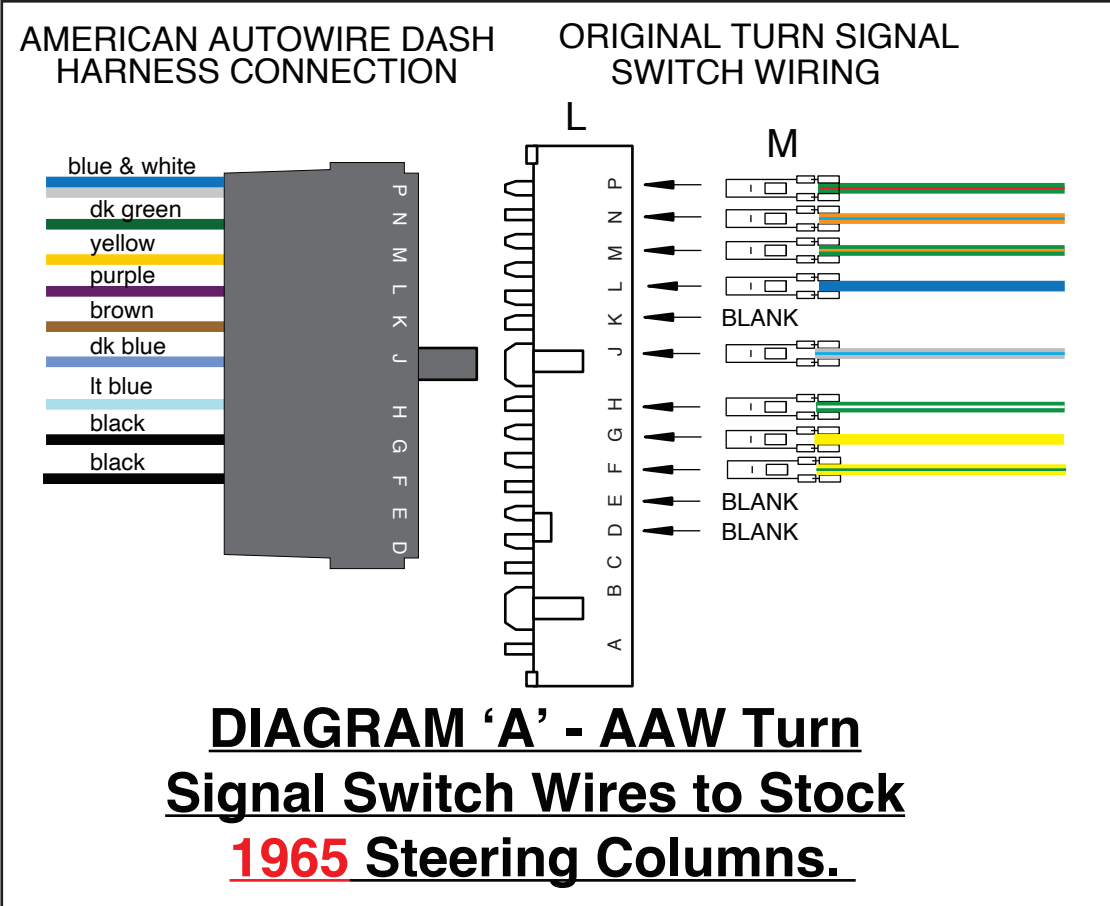


www.americanautowire.com 856-933-0801

1962-65 Ford Fairlane
1962-63 Mercury Meteor

Classic Update Series

510553 92973561 Rev 0.0 2/1/2022

510394 Headlight Extension Harness

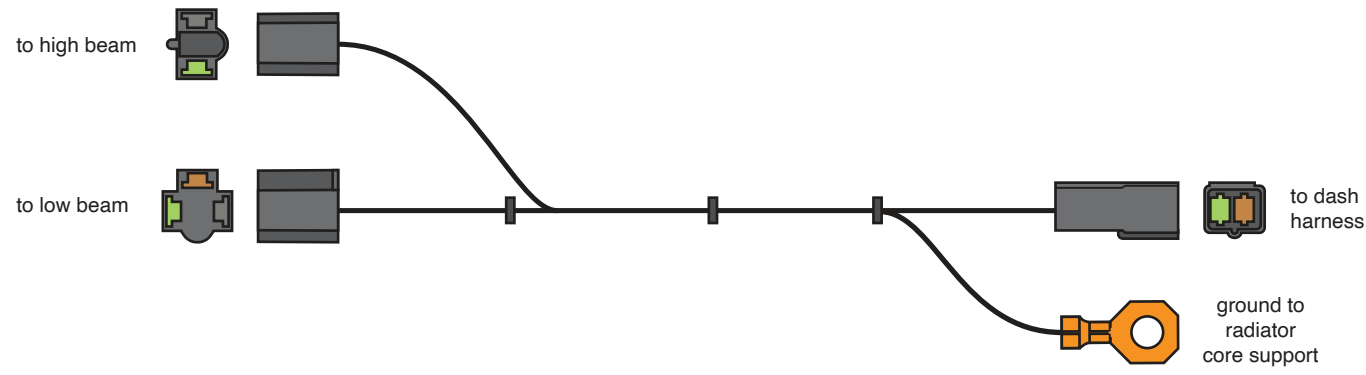

SEE FIGURE "C" ON PAGE 13 FOR THE CONNECTION OF THESE TWO WIRES.




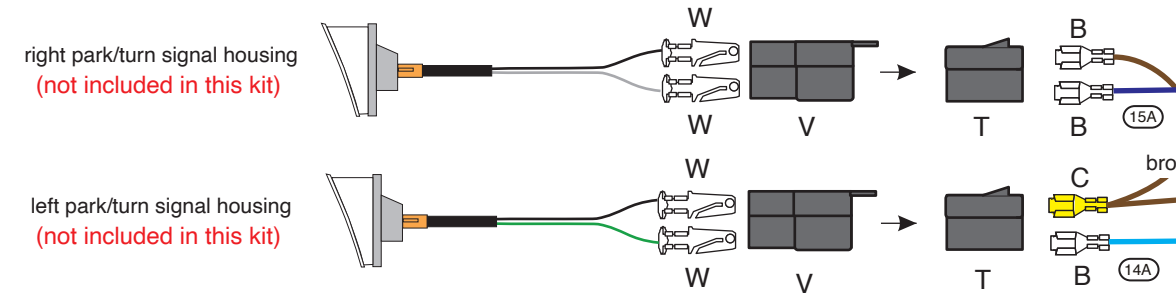


Figure "A"

Driver Side, lower rectangular hole, Engine Compartment Wiring (1962-64)
 Driver Side, lower round hole, Engine Compartment Wiring (1965)

Head lamp, parking lamp, horn, brake warning, fan relay, main power, starter solenoid and alternator exciter. These wires are all found at branch 1, pages 3 and 4.

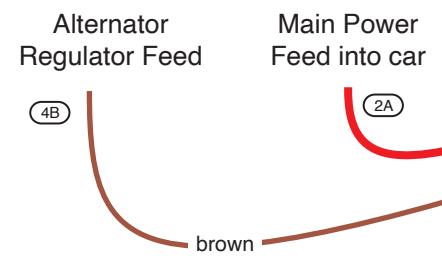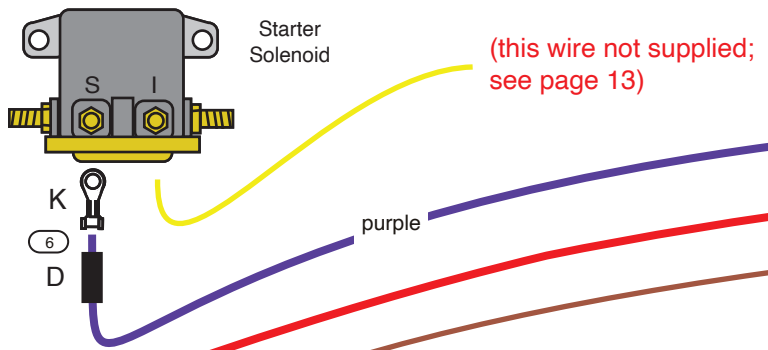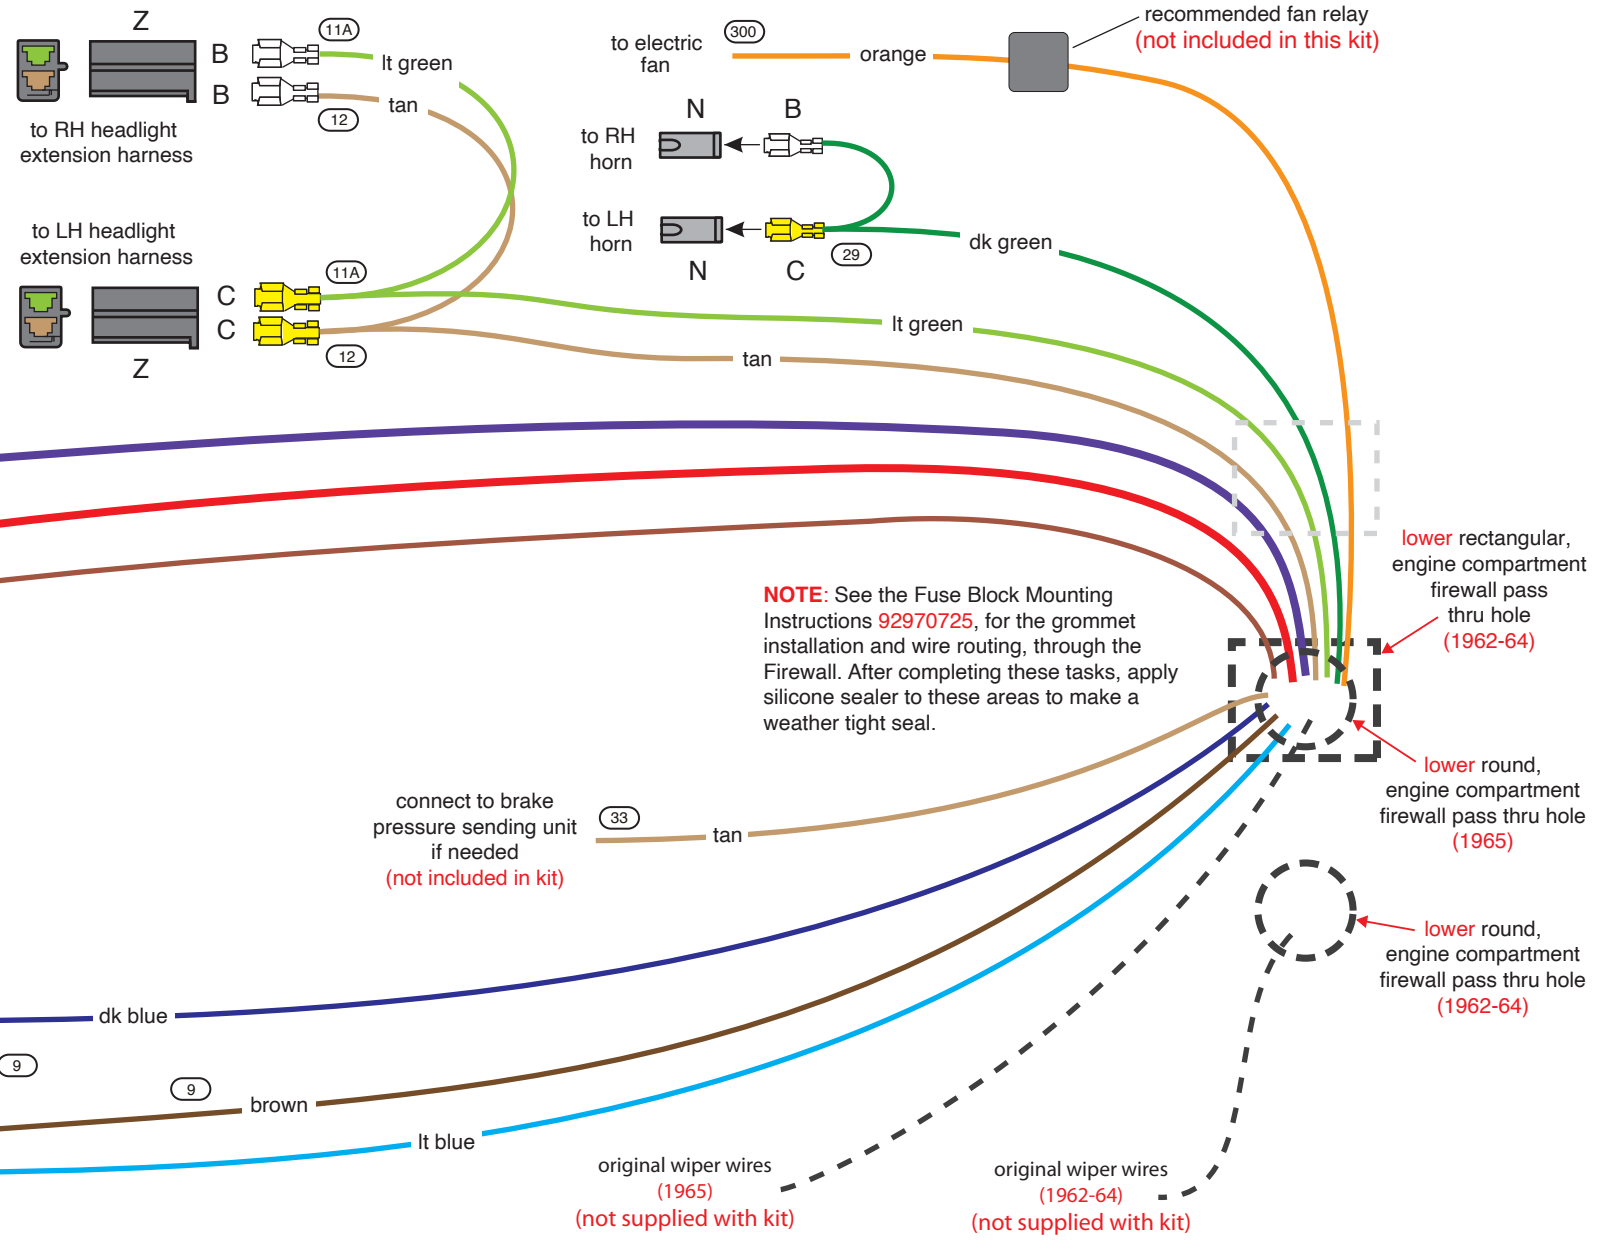


NOTE: The terminals and connectors listed on this page and denoted with UPPER CASE LETTERS, to help you complete the various connections to your lamps, horns, switches, etc., can be found in your loose piece clamp, grommet, and parts kit, P/N 510558.

The identifications, colors, and functions for all of the wires listed in "Figure A" on this page, can be found on pages 3, 4 and 5, branch 1 of this instruction set and in the headlight harness kit.





1962-65 Ford Fairlane
1962-63 Mercury Meteor
 Classic Update Series
510553 92973561 Rev 0.0 2/1/2022

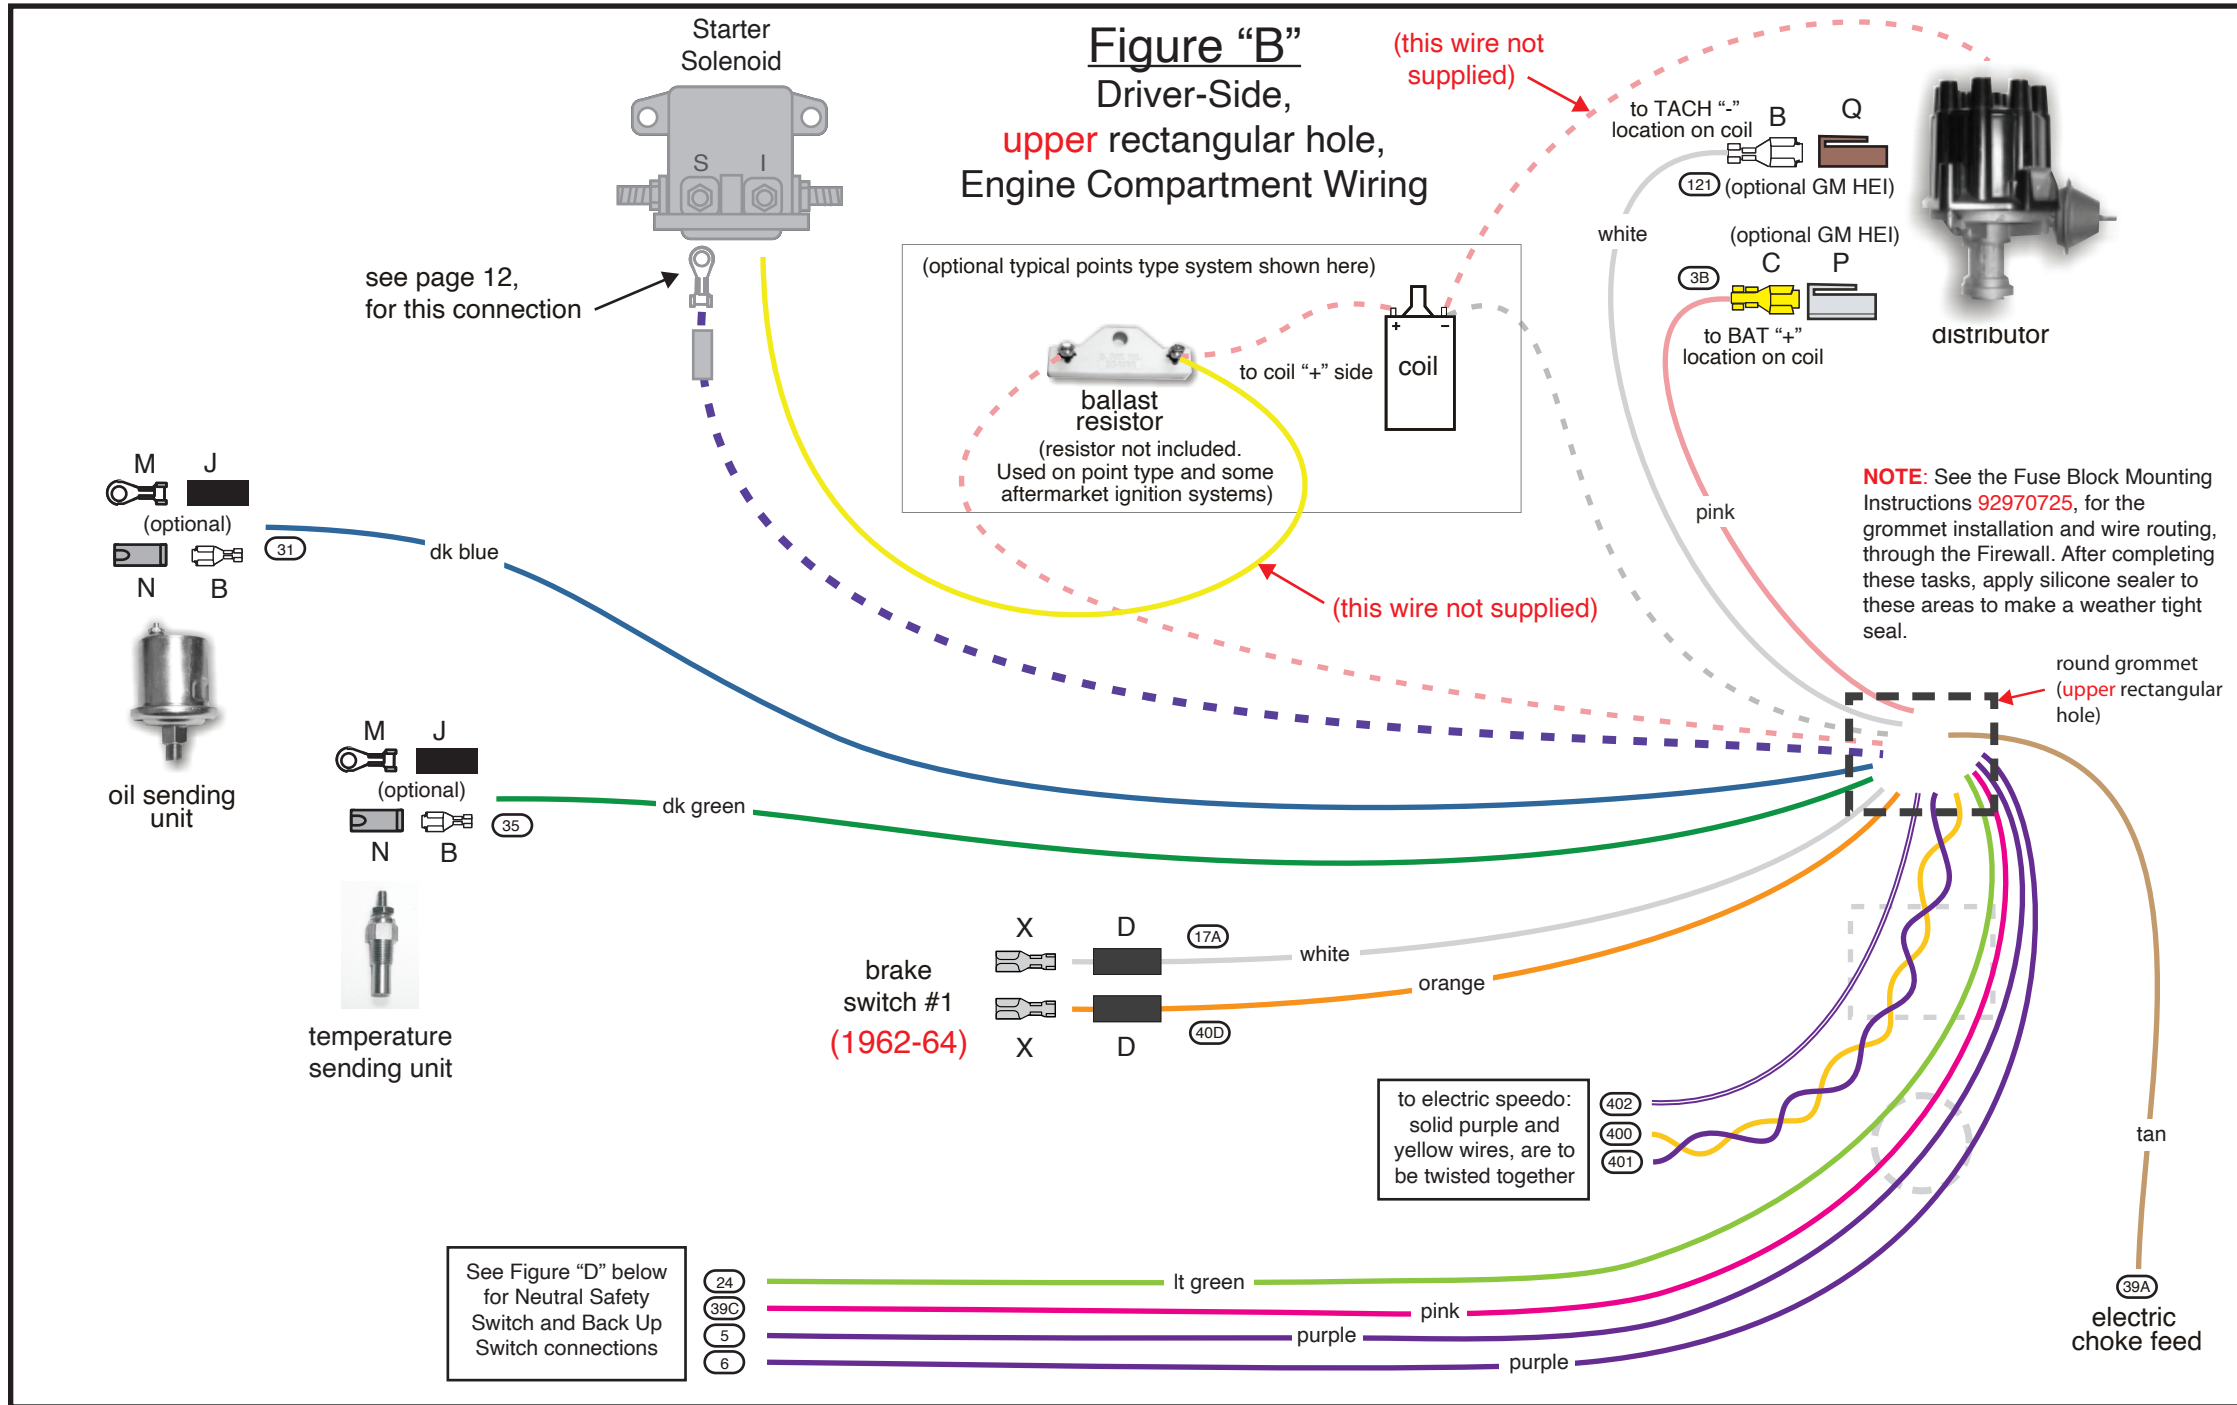

NOTE: The terminals and connectors listed on this page and denoted with **UPPER CASE LETTERS**, are to help you complete the various connections to your back-up and NSS switch, ignition feed, engine sensors, electric choke, tachometer and alternator output. They can all be found in your loose piece clamp, parts kit, P/N 510558, or the 510476 Main Power and Alternator kit.


Engine Compartment Wiring. AAW suggests and recommends using page 5 to complete the installation of the Driver-Side, upper round hole.

AAW kits are all engineered to be used in conjunction with a high output, later model internally regulated, or one wire alternators. We do not suggest or support the use of a stock low amperage alternator as they do not supply sufficient current to recharge the battery in a highly modified car such as this kit was designed for. AAW suggests a Ford Gen III (3G), a GM "SI", or a 1 wire type alternator as good choices to use. An adapter to complete the connection to the Ford Gen III (3G) style alternator (AAW p/n 500802) may be purchased separately. Contact AAW for your needs.

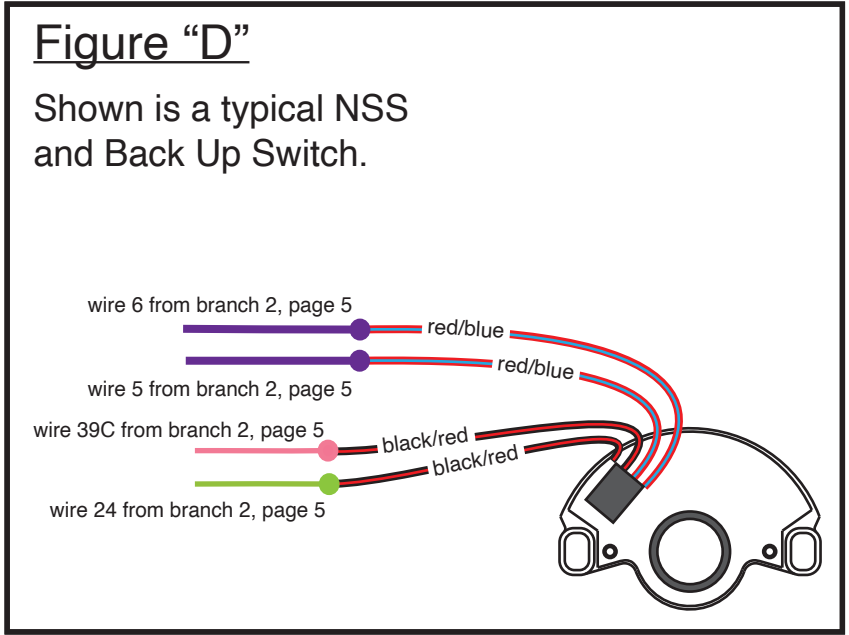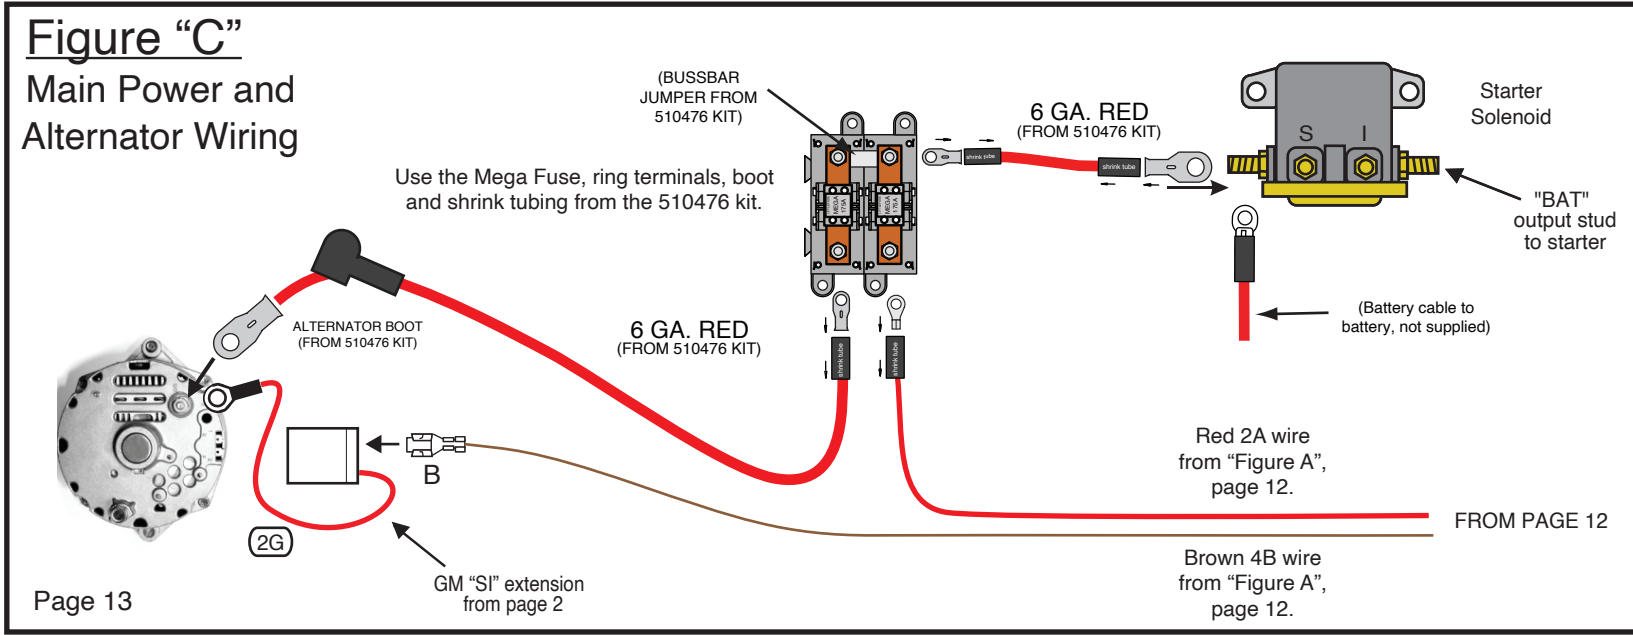

1962-65 Ford Fairlane
1962-63 Mercury Meteor
Classic Update Series
510553 92973561 Rev 0.0 2/1/2022

FUSE LOCATIONS

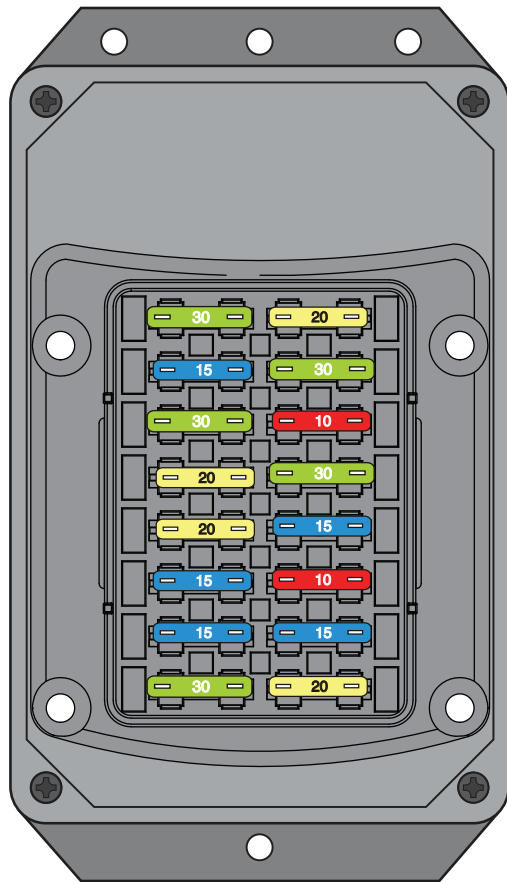


Batt - Spare 30A - BAT	1	9	Wiper 20A - ACC
Clock/Radio 15A - BAT	2	10	Heat/AC 30A - ACC
Power Seat 30A - BAT	3	11	Radio 10A - ACC
Cigar - Lighter 20A - BAT	4	12	Engine Fan 30A - ACC
Power Locks 20A - BAT	5	13	Turn 15A - IGN
Stop/Courtesy 15A - BAT	6	14	Gauges, B/U 10A - IGN
Hazard 15A - BAT	7	15	Elec. Choke 15A - IGN
Pwr. Window 30A - IGN	8	16	Fuel Pump 20A - IGN

Fuse label
on inside of
Fuse Box lid

NOTE: Above, is an image of the completed Fuse Box assembly, depicting the proper location for the installation of each fuse.

Figure "E"

Shown is 1964-65 Fairlane, single-speed wiper system factory wiring, for reference

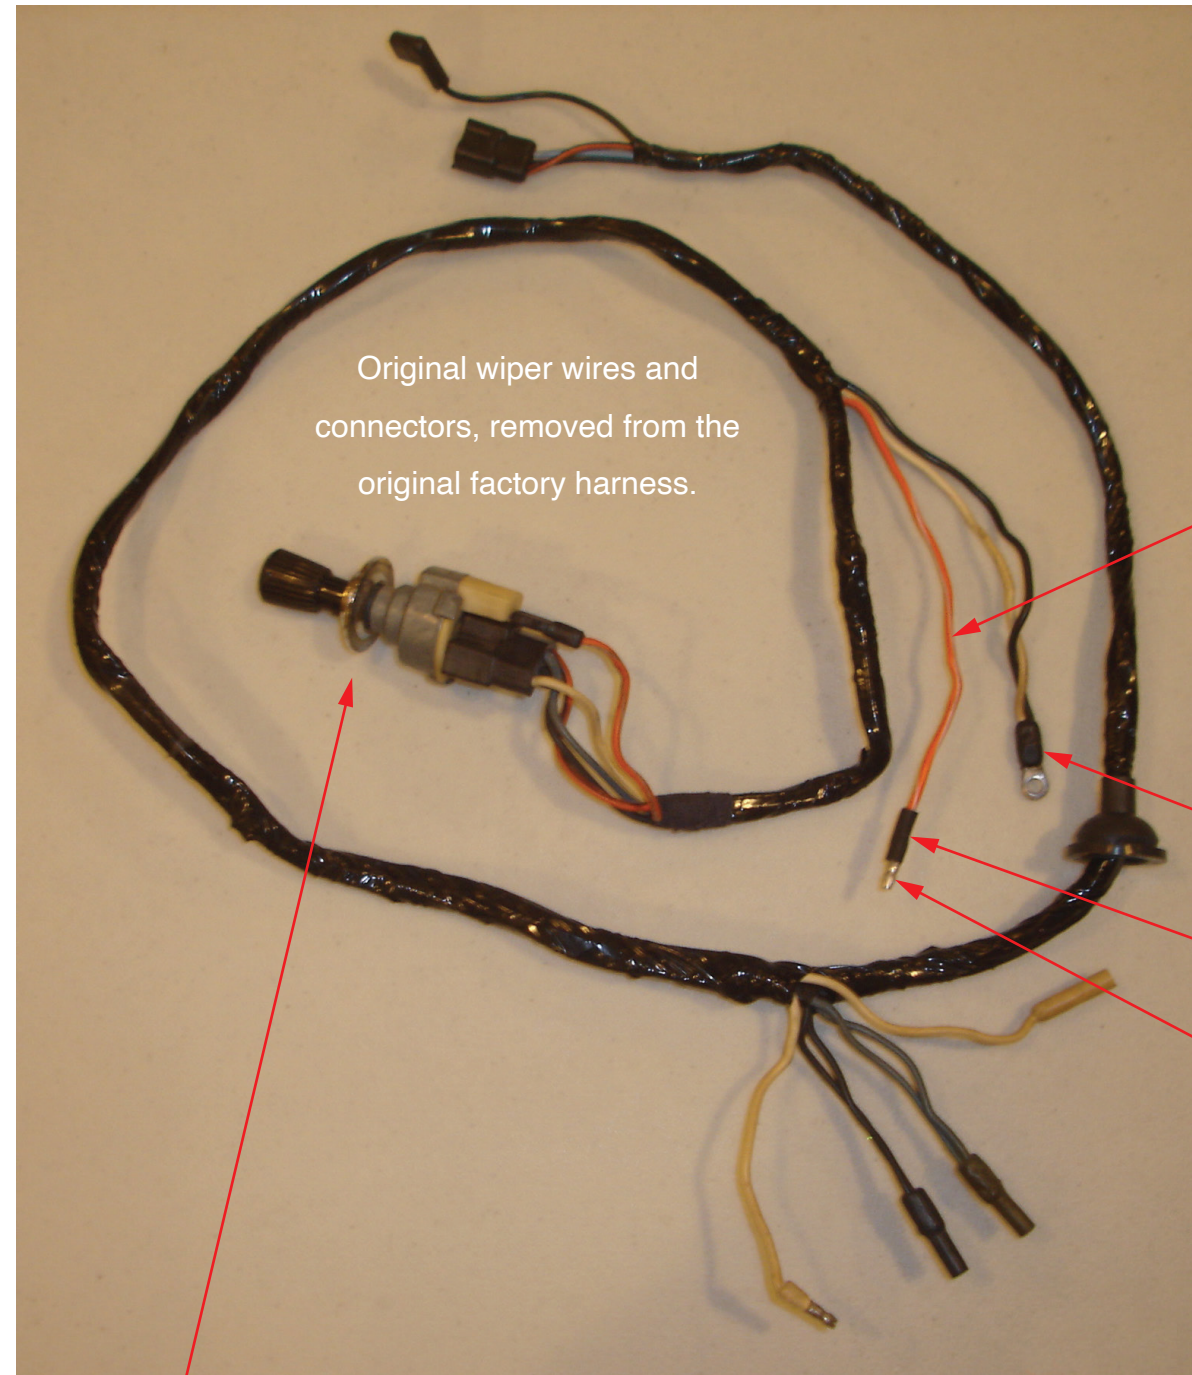

Original wiper wires and connectors, removed from the original factory harness.

Cut the orange with a white stripe wire, slide on sleeve **J** and crimp on terminal **H**, to this wire. This new male bullet connector, will eventually plug into the mating Wiper female bullet connector (wire 93 on Pg 9), on the Dash Harness.

Attach Ground wires, to Steering Column Support Bracket.

Sleeve **J**

Terminal **H**


Wiper Switch



www.americanautowire.com 856-933-0801


1962-65 Ford Fairlane
1962-63 Mercury Meteor
Classic Update Series
510553 92973561 Rev 0.0 2/1/2022

Fuse Box lid

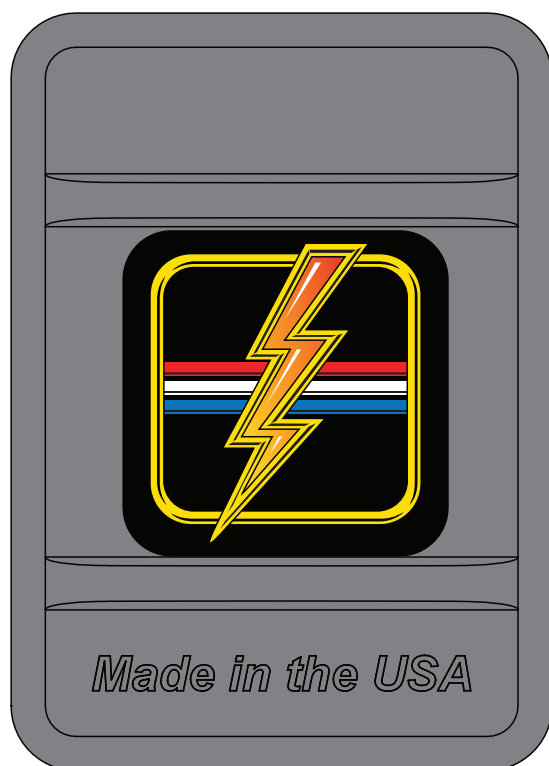

Fuse label on inside of Fuse Box lid

Batt - Spare 30A - BAT	1	9	Wiper 20A - ACC
Clock/Radio 15A - BAT	2	10	Heat/AC 30A - ACC
Power Seat 30A - BAT	3	11	Radio 10A - ACC
Cigar - Lighter 20A - BAT	4	12	Engine Fan 30A - ACC
Power Locks 20A - BAT	5	13	Turn 15A - IGN
Stop/Courtesy 15A - BAT	6	14	Gauges, B/U 10A - IGN
Hazard 15A - BAT	7	15	Elec. Choke 15A - IGN
Pwr. Window 30A - IGN	8	16	Fuel Pump 20A - IGN

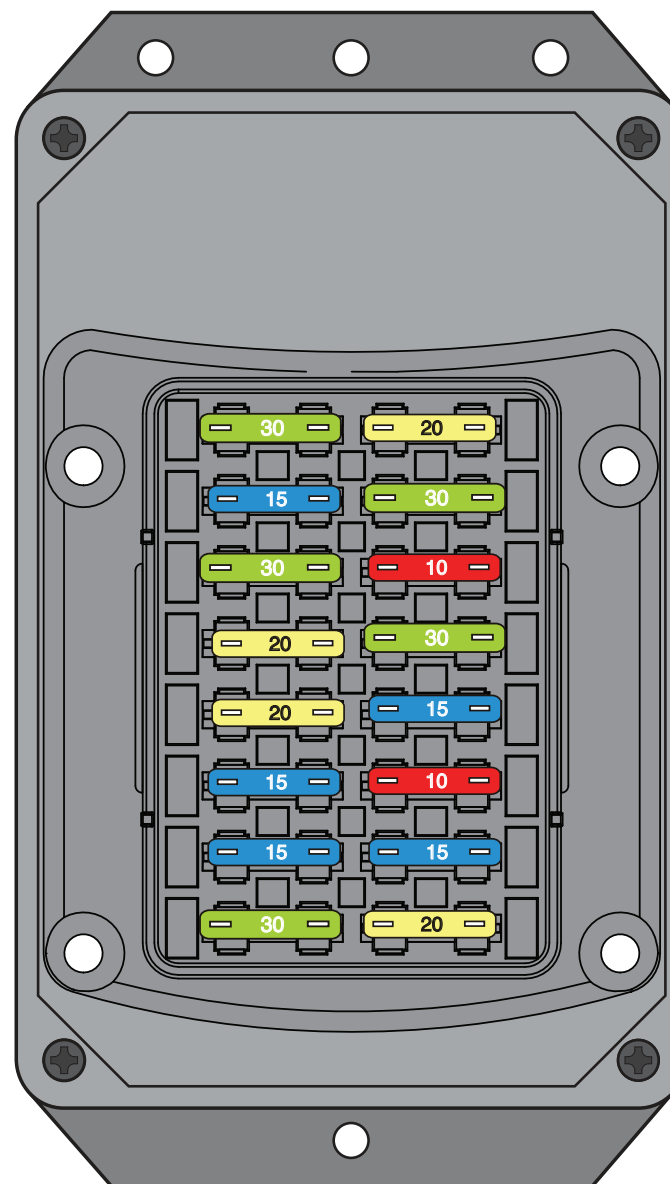

Fuse/Circuit table

Fuse #	Fuse Block Cover Label	Fuse Rating	Description
1	Bat-Spare	30A	Battery feed spare
2	Clock - Bat	15A	Battery feed for a Clock and a Radio.
3	Power Seats	30A	Battery feed for optional Power Seats.
4	Cigar - Lighter	20A	Battery feed for Cigar - Lighter.
5	Power Locks	15A	Battery feed to Power Locks.
6	Stop / Courtesy	15A	Battery feed for Brake Lights and Courtesy Lights.
7	Hazard	15A	Battery feed for optional Hazard Lights and optional battery feed.
8	Power Window	30A	Ignition feed for optional Power Windows.
9	Wiper	20A	12V Accessory feed for Wiper/Washer system.
10	Heat / AC	30A	12V Accessory feed for Heater/AC System.
11	Radio	10A	12V Accessory "on-off" feed to Radio.
12	Engine Fan	30A	12V Accessory for an optional Electric Fan System, Relay key-on trigger
13	Turn	15A	Ignition feed for the Turn Signals.
14	Gauges, B/U	10A	Ignition feed for Dash Gauges/Warning Lights, and Back Up Lamps
15	Electric Choke	15A	Ignition feed for an Electric Choke, ECM Ignition Feed
16	Fuel Pump	20A	Ignition feed for an Electric Fuel Pump

**THIS PAGE INTENTIONALLY
LEFT BLANK**




**American
Autowire**

www.americanautowire.com 856-933-0801

1962-65 Ford Fairlane
1962-63 Mercury Meteor
Classic Update Series

510553 92973561 Rev 0.0 2/1/2022

Electric Speedo VSS extension connection:

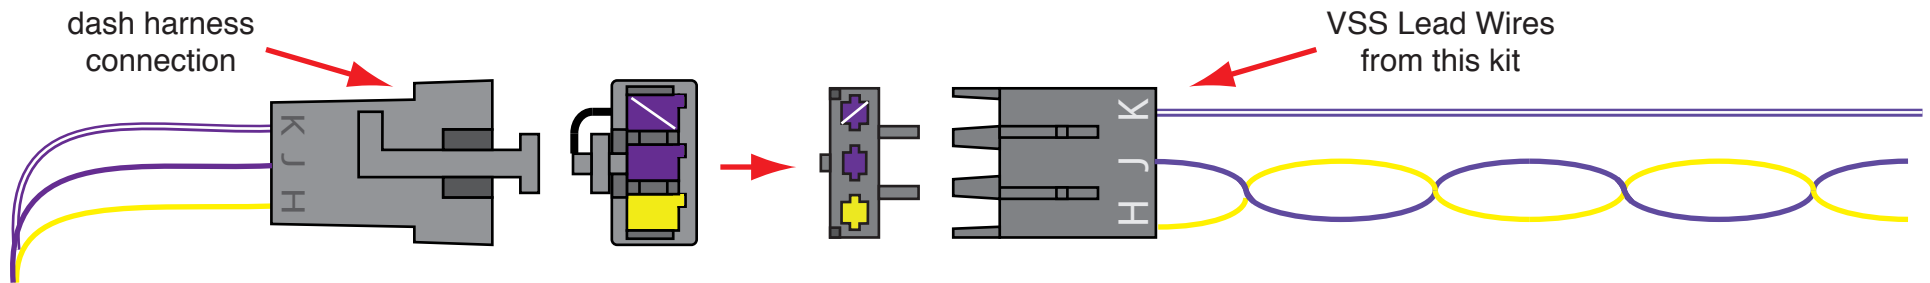

If you are using an aftermarket electric speedometer in your vehicle, you will need to connect the vehicle speed sensor (VSS) Lead Wires from this kit to the dash side connection of your dash harness. The yellow and solid purple wires must remain twisted together as shown above. These three wires will need to pass through the firewall or floor of your vehicle down to the vehicle speed sensor unit in the transmission. Generally, the solid purple wire connects to the “signal” lead, the yellow wire connects to the “ground” lead, and the purple/white stripe wire connects to the “12 volt power” lead on the vehicle speed sensor assembly. However, you should consult the directions that came with your gauges, and connect your vehicle speed sensor per the manufacturer’s instructions.



www.americanautowire.com 856-933-0801


VSS LEAD WIRES
Various Applications
Classic Update Series

510730


92972371 Rev 0.0 4/9/2019

bag
V

**1960-63 Falcon
& 1960-63, 1965
Comet ONLY!**

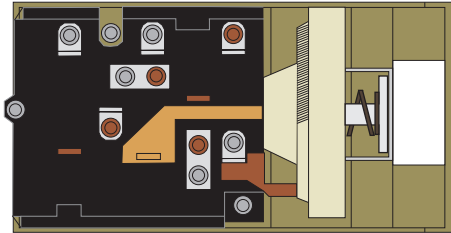

New AAW switch assembly

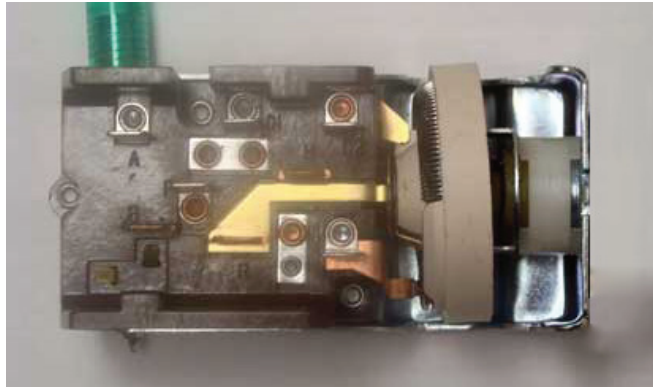

Original dash spacer
(Not Included with this kit)

Original dash facing


File shaft approximately as shown for proper fit on knob

end view

Original dash bezel and nut
(Not Included with this kit)

NOTE 1: Use this page of this instruction set if you are using this new AAW switch in a 1960 - 63 Falcon or a 1960 - 63 or 65 Comet. The switch installs into the dash with the connector area turned out to the LH driver's side as shown to the left.

1. Install the new switch into your dash using the original bezel and nut. It will be necessary to cut the shaft for a nice custom installation.
2. Install the shaft into the switch being certain that it is fully engaged inside the switch. Once the shaft is fully seated down inside the switch in the "off" position, place the knob on the end of the shaft. Measure how far away from the dash the bottom face of the knob (closest to dash) is. Allow for 1/4" or so extra so that the knob will not bottom out on the dash once the shaft has been cut to length.
3. Remove the shaft from the switch. To do this, pull the shaft completely out to the "headlight on" position. Reach up under the dash and depress the button on the RH side of the switch and pull the shaft out of the switch. Cut the shaft based on your measurements. It may be necessary to file the end of the shaft once it has been cut in order to reinstall the knob onto the shaft.
4. Attach the knob to the cut shaft and tighten the allen screw.
5. Reinstall your newly customized shaft into your headlight switch assembly.

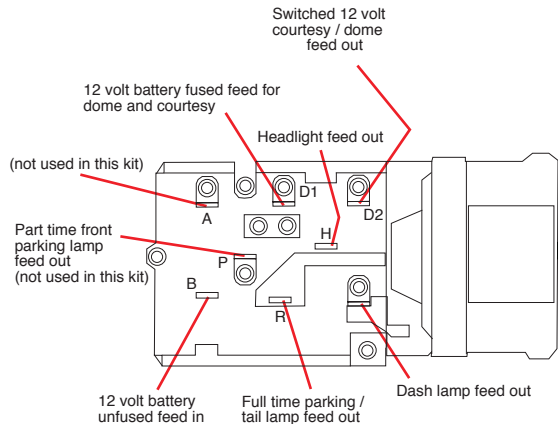

**American
Autowire**

www.americanautowire.com 856-933-0801

PART #

510385


DESCRIPTION:

**Headlight Switch Kit
Various Ford Applications
Classic Update Series**

92970577 Rev 2.0 1/17/2017

New AAW switch assembly

Original dash bezel and nut
(Not Included with this kit)

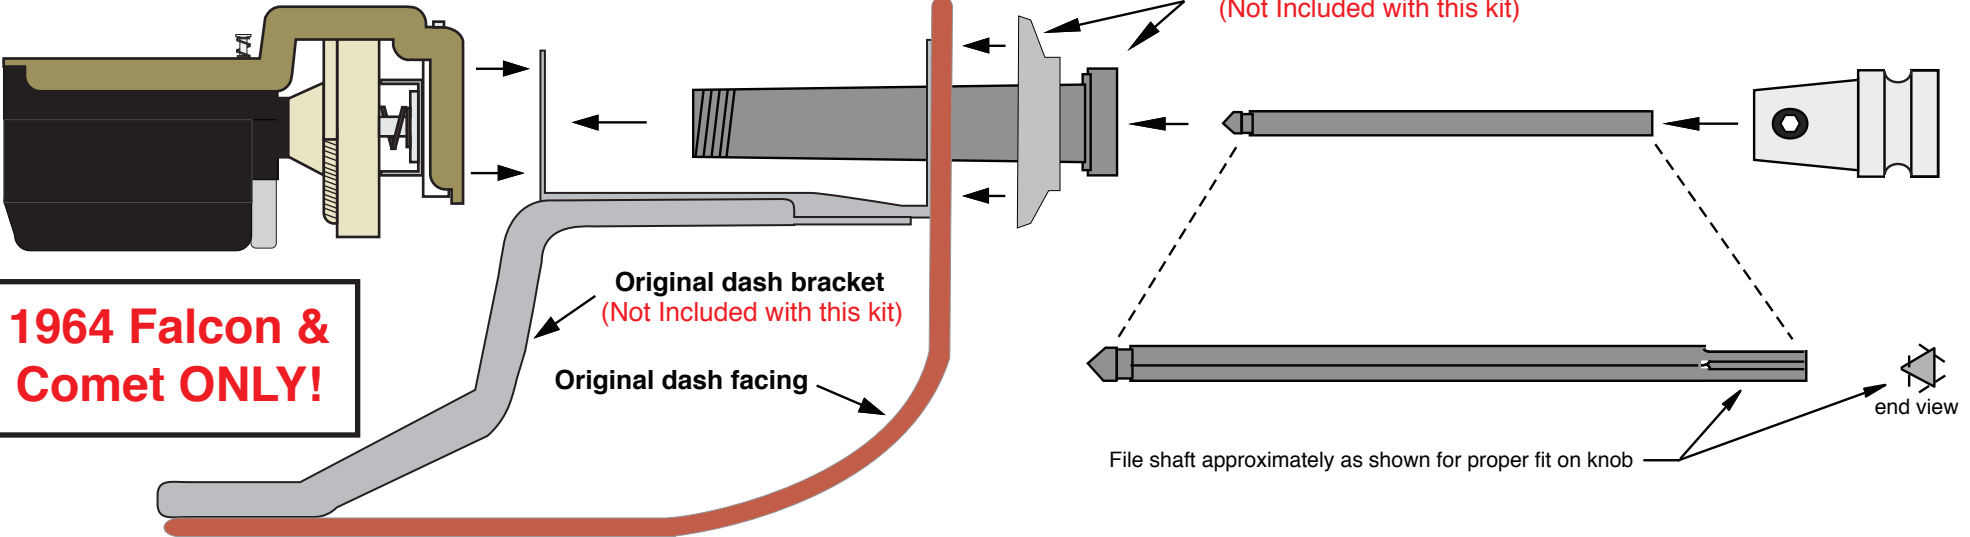



1964 Falcon & Comet ONLY!

File shaft approximately as shown for proper fit on knob

end view

NOTE 2: Use this page of this instruction set if you are using this new AAW switch in a 1964 Falcon or Comet. The switch installs into the dash with the connector area turned down toward the floor of the car as shown to the left.

1. Install the new switch into your dash using the original bezel and nut. It will be necessary to cut the shaft for a nice custom installation.
2. Install the shaft into the switch being certain that it is fully engaged inside the switch. Once the shaft is fully seated down inside the switch in the "off" position, place the knob on the end of the shaft. Measure how far away from the dash the bottom face of the knob (closest to dash) is. Allow for 1/4" or so extra so that the knob will not bottom out on the dash once the shaft has been cut to length.
3. Remove the shaft from the switch. To do this, pull the shaft completely out to the "headlight on" position. Reach up under the dash and depress the button on top of the switch and pull the shaft out of the switch. Cut the shaft based on your measurements. It may be necessary to file the end of the shaft once it has been cut in order to reinstall the knob onto the shaft.
4. Attach the knob to the cut shaft and tighten the allen screw.
5. Reinstall your newly customized shaft into your headlight switch assembly.

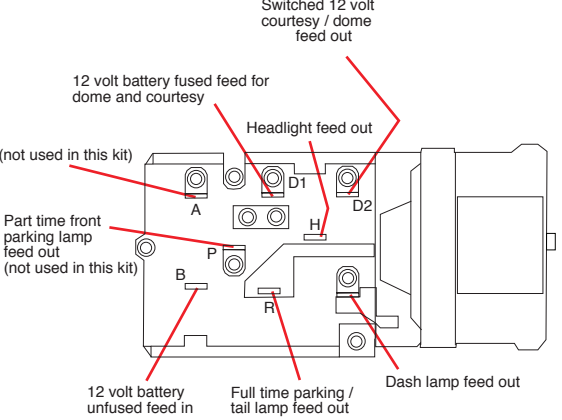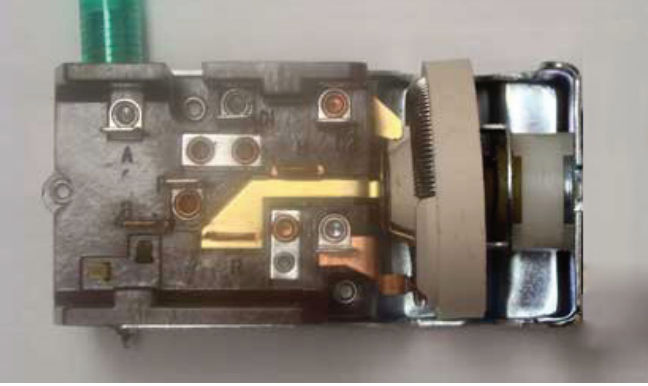


www.americanautowire.com 856-933-0801

PART #
510385


DESCRIPTION:
Headlight Switch Kit
Various Ford Applications
Classic Update Series

92970577 Rev 2.0 1/17/2017

**1962-64 Fairlane
& 1962-63 Meteor
ONLY!**

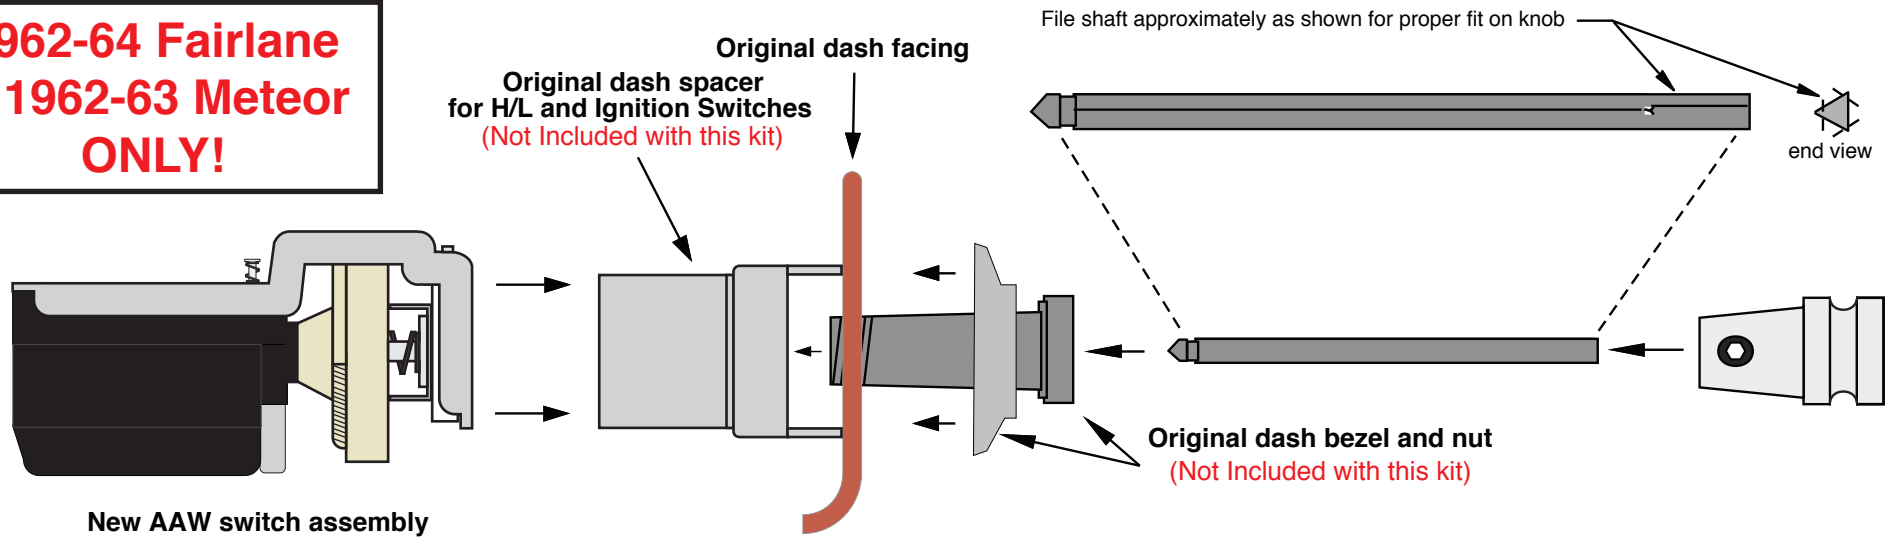


New AAW switch assembly

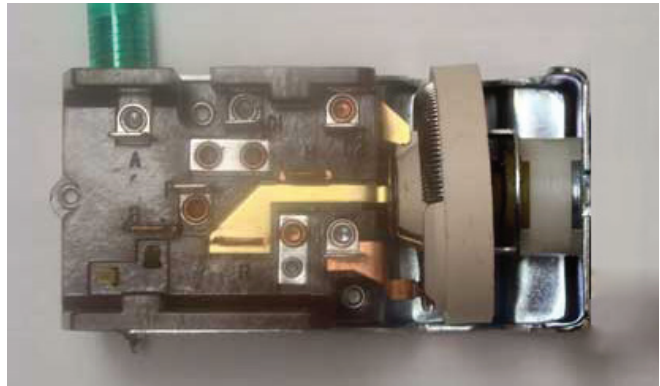

NOTE 3: Use this page of this instruction set if you are using this new AAW switch in a 1962 - 64 Fairlane or a 1962 - 63 Meteor. The switch installs into the dash with the connector area turned down toward the floor of the car as shown to the left.

1. Install the new switch into your dash using the original bezel and nut. It will be necessary to cut the shaft for a nice custom installation.
2. Install the shaft into the switch being certain that it is fully engaged inside the switch. Once the shaft is fully seated down inside the switch in the "off" position, place the knob on the end of the shaft. Measure how far away from the dash the bottom face of the knob (closest to dash) is. Allow for 1/4" or so extra so that the knob will not bottom out on the dash once the shaft has been cut to length.
3. Remove the shaft from the switch. To do this, pull the shaft completely out to the "headlight on" position. Reach up under the dash and depress the button on top of the switch and pull the shaft out of the switch. Cut the shaft based on your measurements. It may be necessary to file the end of the shaft once it has been cut in order to reinstall the knob onto the shaft.
4. Attach the knob to the cut shaft and tighten the allen screw.
5. Reinstall your newly customized shaft into your headlight switch assembly.

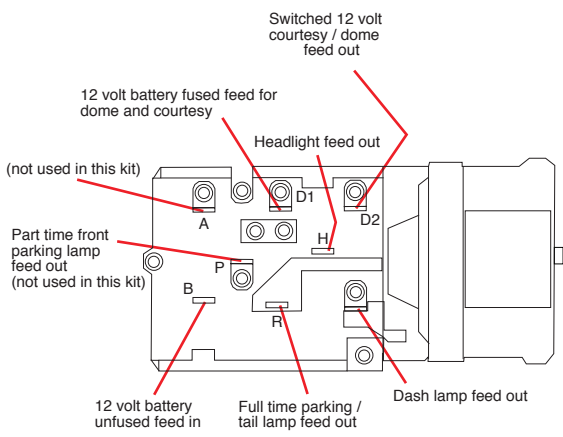

**American
Autowire**


www.americanautowire.com 856-933-0801

PART #
510385

DESCRIPTION:
**Headlight Switch Kit
Various Ford Applications
Classic Update Series**

92970577 Rev 2.0 1/17/2017

**1965 Fairlane
ONLY!**

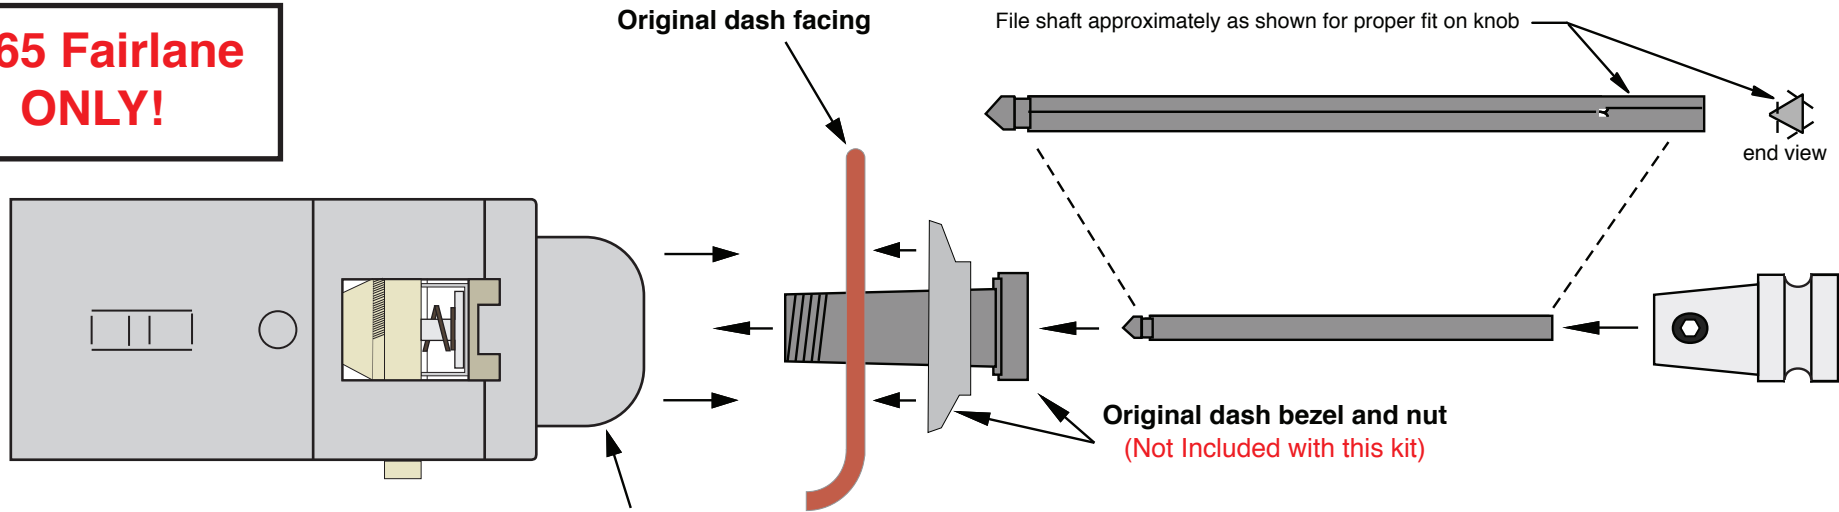



New AAW switch assembly

**Original dash spacer
(Not Included with this kit)**

**Original dash bezel and nut
(Not Included with this kit)**

NOTE 4: Use this page of this instruction set if you are using this new AAW switch in a 1965 Fairlane only. Assemble your original spacer assembly (not included with this kit) onto the new AAW switch assembly first as shown at the left. The assembled switch installs into the dash with the connector area turned out toward the RH passenger side of the car as shown to the left.

1. Install the new switch into your dash using the original bezel and nut. It will be necessary to cut the shaft for a nice custom installation.
2. Install the shaft into the switch being certain that it is fully engaged inside the switch. Once the shaft is fully seated down inside the switch in the "off" position, place the knob on the end of the shaft. Measure how far away from the dash the bottom face of the knob (closest to dash) is. Allow for 1/4" or so extra so that the knob will not bottom out on the dash once the shaft has been cut to length.
3. Remove the shaft from the switch. To do this, pull the shaft completely out to the "headlight on" position. Reach up under the dash and depress the button on the LH side of the switch and pull the shaft out of the switch. Cut the shaft based on your measurements. It may be necessary to file the end of the shaft once it has been cut in order to reinstall the knob onto the shaft.
4. Attach the knob to the cut shaft and tighten the allen screw.
5. Reinstall your newly customized shaft into your headlight switch assembly.

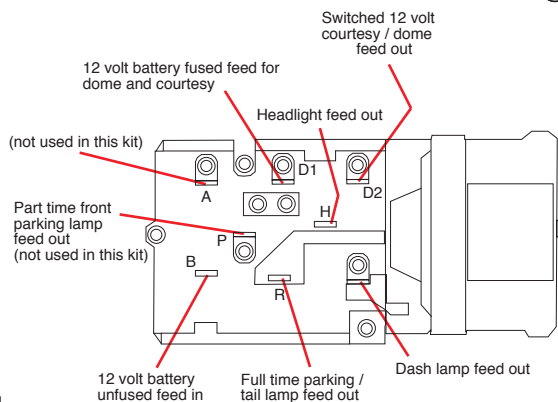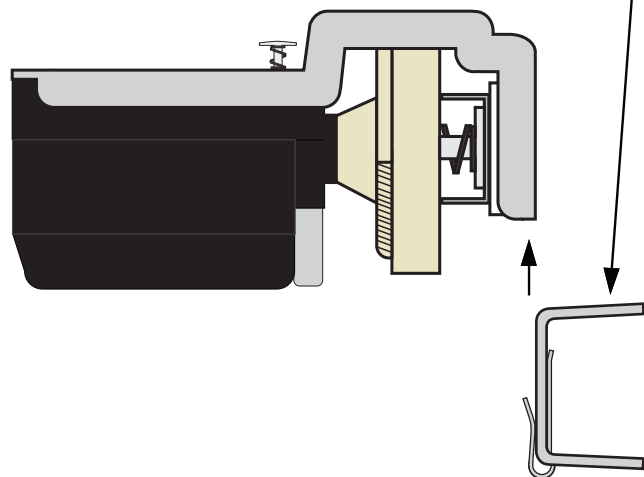

**American
Autowire**

www.americanautowire.com 856-933-0801

PART #


510385

DESCRIPTION:

**Headlight Switch Kit
Various Ford Applications
Classic Update Series**



92970577 Rev 2.0 1/17/2017

1971-73 Mustang ONLY!

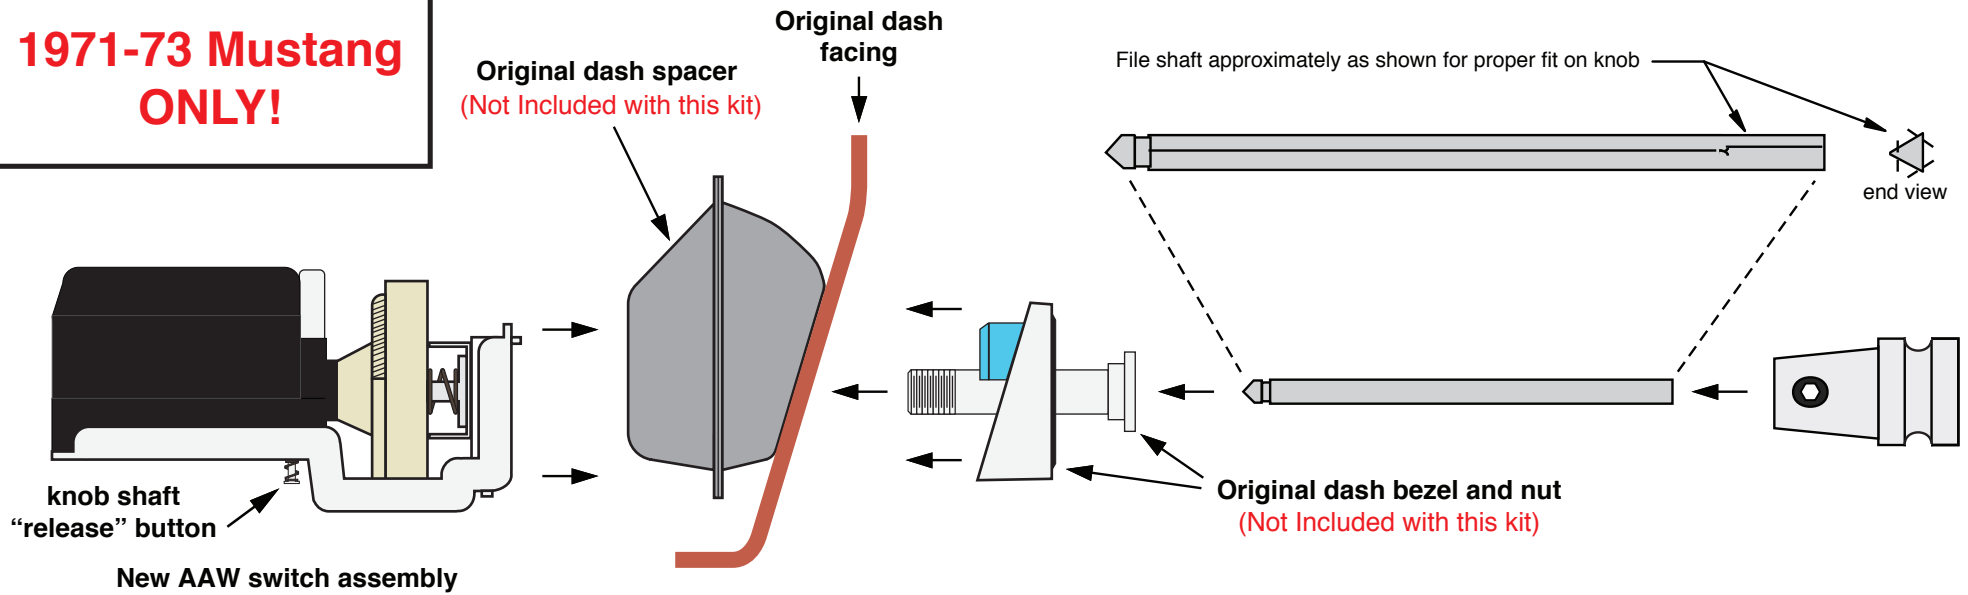

NOTE 1: Use this page of this instruction set if you are using this new AAW switch in a 1971 - 73 Mustang. The switch installs into the dash with the connector area of the switch assembly facing up, as shown to the left.

1. Install the new switch into your dash using the original bezel and nut (not included with this kit). It will be necessary to cut the shaft for a nice custom installation.
2. Install the shaft into the switch being certain that it is fully engaged inside the switch. Once the shaft is fully seated down inside the switch in the "off" position, place the knob on the end of the shaft. Measure how far away from the dash the bottom face of the knob (closest to dash) is. Allow for 1/4" or so extra so that the knob will not bottom out on the dash once the shaft has been cut to length.
3. Remove the shaft from the switch. To do this, pull the shaft completely out to the "headlight on" position. Reach up under the dash and depress the button on the bottom of the switch and pull the shaft out of the switch. Cut the shaft based on your measurements. It may be necessary to file the end of the shaft once it has been cut in order to reinstall the knob onto the shaft.
4. Attach the knob to the cut shaft and tighten the allen screw.
5. Reinstall your newly customized shaft into your headlight switch assembly.

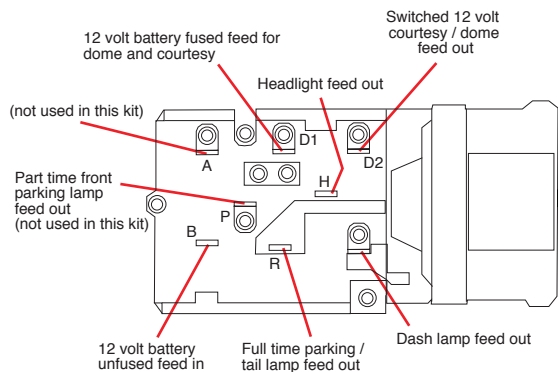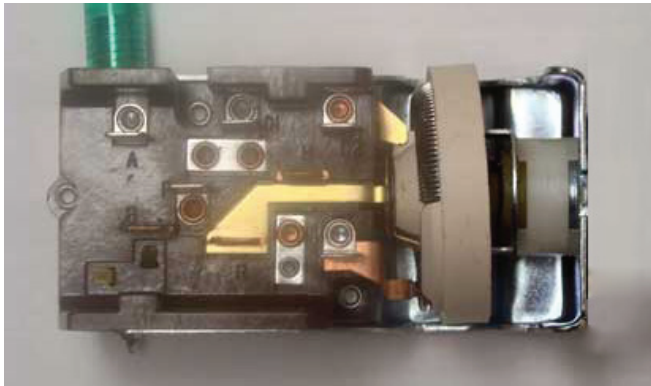

American Autowire

www.americanautowire.com 856-933-0801


PART #

510385

DESCRIPTION:

Headlight Switch Kit
Various Ford Applications
Classic Update Series

92970577 Rev 2.0 1/17/2017

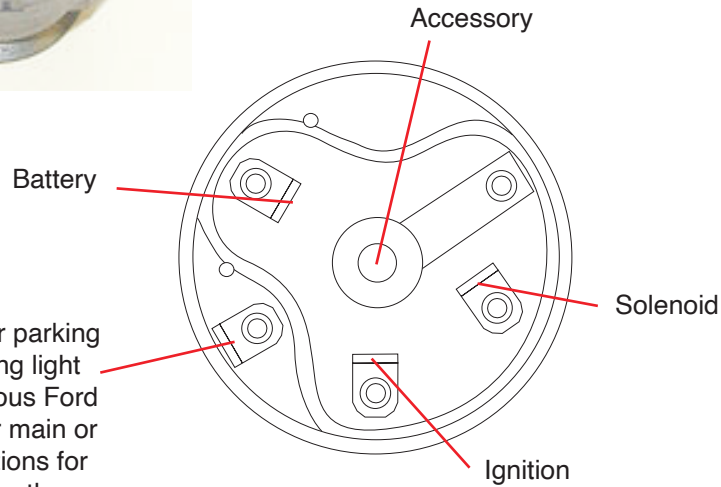

Bulb check for parking brake warning light (used on various Ford kits. See your main or dash instructions for details. Plug the connector containing the tan wires onto this blade assembly)



www.americanautowire.com 856-933-0801


PART #

510128

DESCRIPTION:

Ignition Switch
Various Ford Applications
Classic Update Series

92969235 instruction sheet rev 3.0 2/28/2023

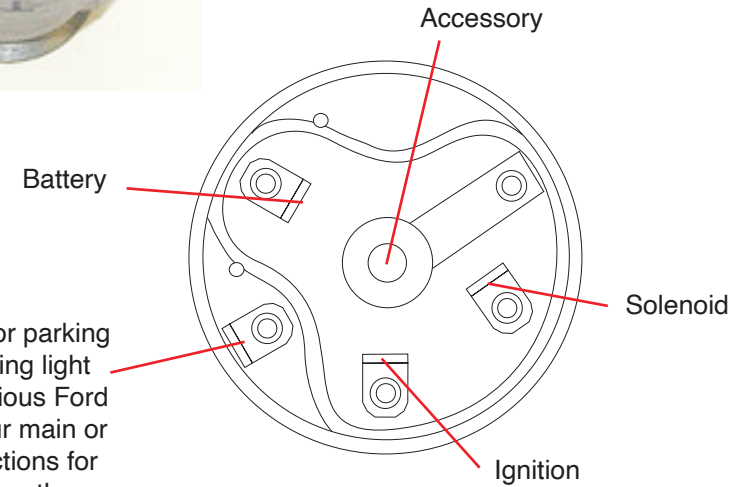

Bulb check for parking brake warning light (used on various Ford kits. See your main or dash instructions for details. Plug the connector containing the tan wires onto this blade assembly)



www.americanautowire.com 856-933-0801


PART #

510128

DESCRIPTION:

Ignition Switch
Various Ford Applications
Classic Update Series

92969235 instruction sheet rev 3.0 2/28/2023

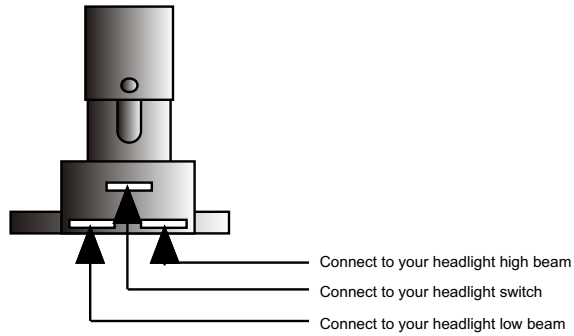

Connect the Dimmer Switch wires as shown above.

1. The top center terminal of the Dimmer Switch is connected to the Headlight switch.
2. The terminal on the right side is connected to your headlight high beam terminal.
3. The terminal on the left side is connected to your headlight low beam terminal.

another wiring product by...



150 Heller Pl #17 W Bellmawr, NJ 08031 856-933-0801


PART #

500042

DESCRIPTION:

DIMMER SWITCH

92964573 instruction sheet Rev 3.0 6/29/99

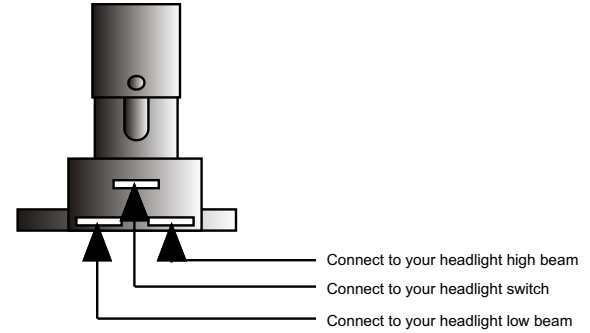

Connect the Dimmer Switch wires as shown above.

1. The top center terminal of the Dimmer Switch is connected to the Headlight switch.
2. The terminal on the right side is connected to your headlight high beam terminal.
3. The terminal on the left side is connected to your headlight low beam terminal.

another wiring product by...



150 Heller Pl #17 W Bellmawr, NJ 08031 856-933-0801

PART #

500042

DESCRIPTION:

DIMMER SWITCH

92964573 instruction sheet Rev 3.0 6/29/99