


- 2. Cut a 1 5/8" hole in the firewall sheet metal, in the area shown to the right in "Figure A" between the 2 dimples on the firewall. You may need to file the edge of this new opening a slight amount in order to pass the new 6-position connector through to the inside of the car.
- З. Route the 6-position connector and male jumper connection, along with the A/C compressor switch connector through the new 1 5/8" hole in the firewall and secure the grommet into that hole.
- 4. Under the dash, locate item #17 from the 510537 dash harness instruction set, 92972573, and plug that single brown A/C-Heater feed into the mating male jumper as shown above. Connect the 6-position connector to the A/C blower control switch on the A/C control head.
- 5. Connect the 2-position connector with the green and yellow wires to the A/C compressor switch located on the blower box.

Note: The Classic Update kit is equipped with heater wires in the 510537 Dash Harness. Since this A/C harness will handle connections to the heater controls (item #17, and #23) and blower resistor, the existing wires in the dash harness will not be used. Coil these heater wires and tuck them away under the dash.

Continue to page 2 for the underhood connections.

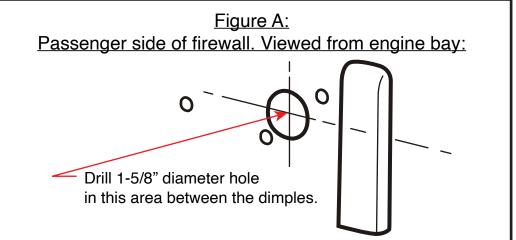




INSTALLATION INSTRUCTIONS (Cont'd)

ENGINE BAY CONNECTIONS:

- In the engine compartment, attach the red wire to the BAT stud on 6. the starter solenoid or any other battery un-fused 12v location.
- 7. Connect the 3-position connector with the yellow, It. blue, and dk. blue wires to the blower resistor.
- 8. Connect the 3-position connector with the purple, dk. blue, and orange wires, along with the single orange wire to the high-speed blower relay. Secure the ring terminal with a single black wire under one of the relay mounting bolts.
- 9. Secure the ring terminal with 2 black wires to the firewall as shown to the right. (Note: This will be the same location as the factory RH valve cover ground strap.)
- The compressor lead is extra long to accommodate either driver 10. or passenger-side mounted compressors. Connect this 2-position connector to the compressor, and then ground the ring terminal to the compressor mounting bracket.
- Connect the heavy gauge purple blower motor feed and black 11. blower motor ground to the blower motor. (Note: The orange "Heater / AIR" wire in the 510538 Engine kit will not be used since this A/C harness addresses that connection with the purple "Blower Feed" wire.)
- 12. Once all harness connections are completed, you can re-connect the battery.

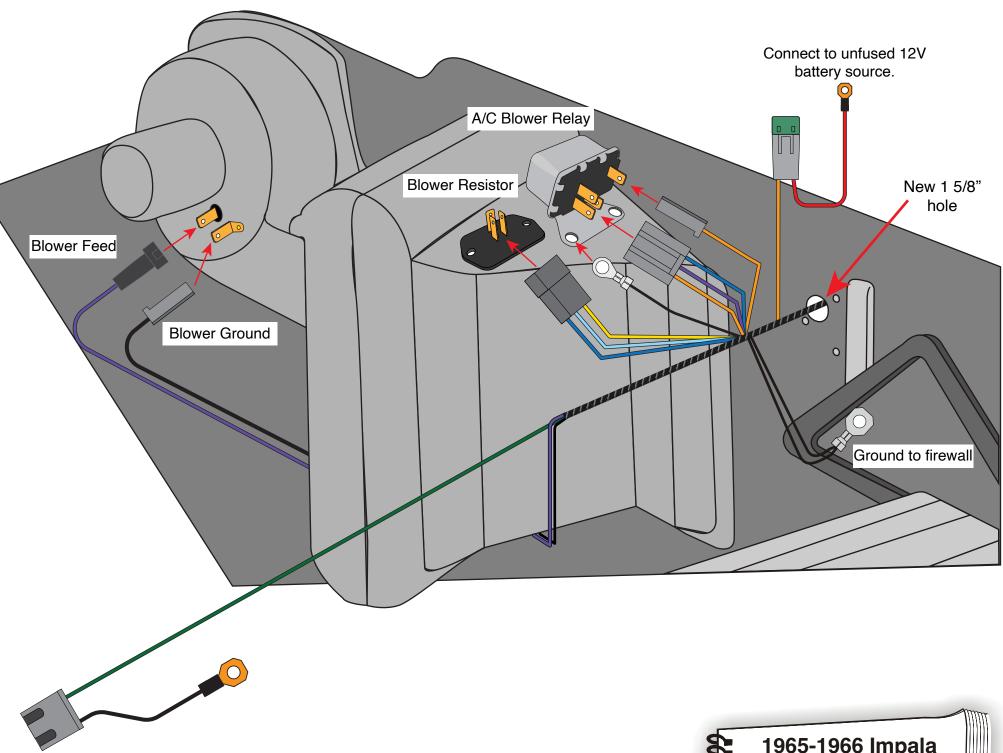

Connect to A/C Compressor

