
## Conversion from external to internal regulator alternator

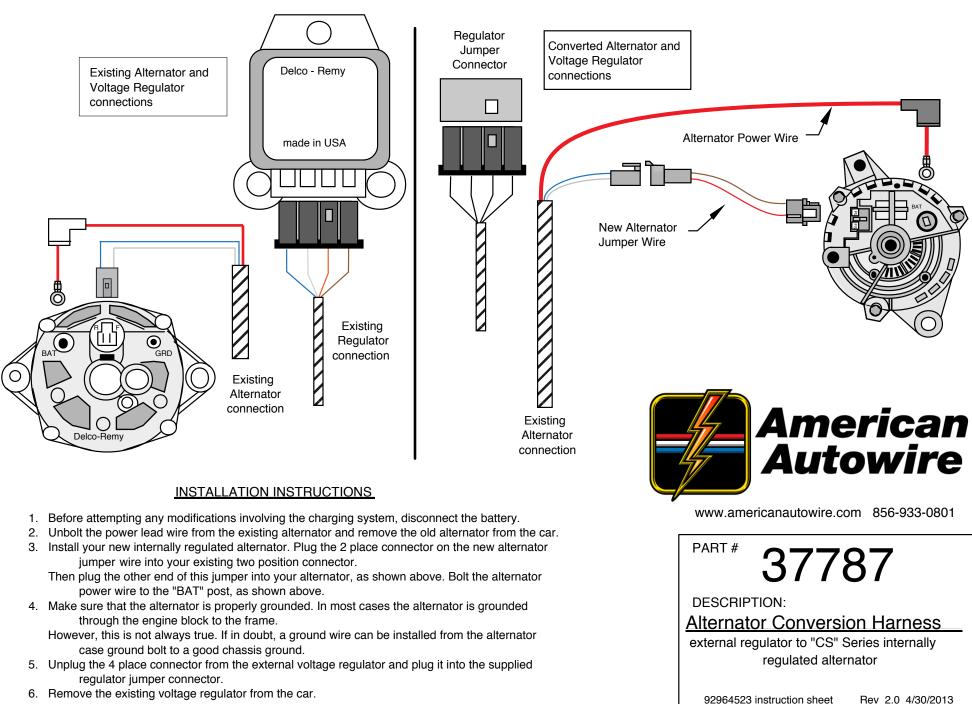

7. Reconnect the battery.