
The fuse values that are provided with the panel, and are noted below, may not be correct for the circuit that is being connected to it. It is the users responsibility to use the correct rated fuse for the circuit load.

<u>CIRCUIT</u> <u>FUSE</u>	<u>FUNCTION</u>
ACC 4 30 ACC 3 20 ACC 2 15 ACC 1 10 HAZARD 20 min TURN HORN OUT	Accessory power 12 volt (key on) Connect to turn signal switch - hazard feed Connect to turn signal switch - turn feed To horn
HORN SW ALT/OUTIGN 10 mir	To horn switch (button)
BAT 3 30 BAT 2 20 BAT 1 10	Battery power 12 volt Battery power 12 volt Battery power 12 volt

RED To 12 volt battery source
BROWN PINK To IGNITION switch - accessory terminal
To IGNITION switch - ignition terminal
To a good chassis GROUND

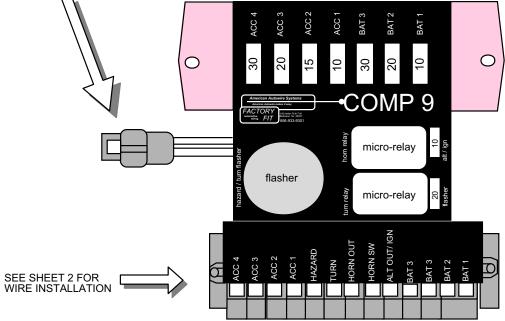

another wiring product by...



150 Heller PI #17 W Bellmawr, NJ 08031 856-933-9301 www.americanautowire.com www.factoryfit.com




92964885 instruction sheet

Rev 1.0 8/1/02

sheet 1 of 2

CONNECTING WIRE TO THE "CAGE CLAMP" TERMINAL BLOCK

- Insert a 1/8" blade screwdriver into the "cage clamp" spring compression hole located in the top of each terminal block as shown in STEP 1.
- 2. Push down on the spring until the "wire access hole" in the spring is visible through the side of the terminal block.
- 3. While maintaining tension on the spring, insert the wire into the terminal block through the "wire access hole" in the "cage clamp spring" until the wire hits the wire stop as shown in STEP 2. Be sure that the wire is stripped to 1/4" 5/16" and that the wire strands are not frayed before insertion into the terminal block. The wire should slide in without restriction.
- 4. With the wire firmly positioned in the terminal block, release the tension on the screwdriver and withdraw it as shown in STEP 3. The wire is now firmly compressed against the terminal block bus bar forming a secure air tight connection.

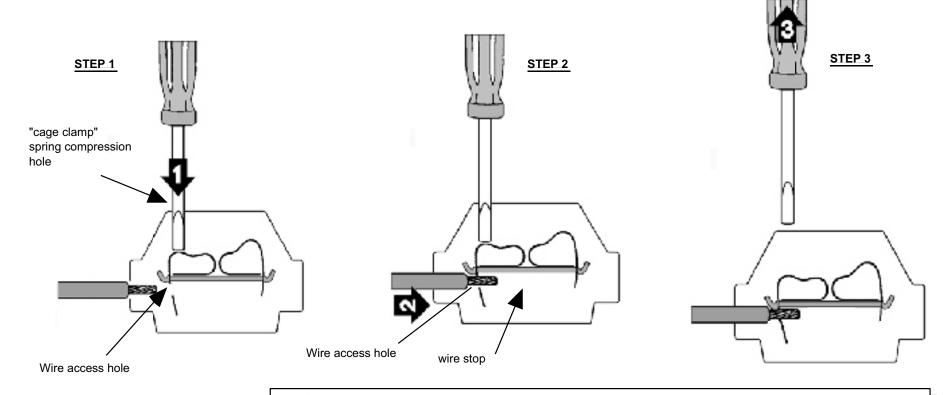

COMP 9
FUSE PANEL

500345

92964885 instruction sheet Rev

Rev 0.0 12/23/99

sheet 2 of 2