

Note: Terminals are provided for most connections on your wiring kit. Use the provided terminals and connector to install the following wires:

DIMMER SWITCH Yellow 12 volt feed to dimmer switch.

REAR BODY

Low beam feed from dimmer switch to front light connector.

Lt Green Hi beam feed from dimmer switch to front light connector and dash cluster indicator.

ACCESSORIES Use the provided connector R and terminals S if you wish to connect to the accessory connector.

FUEL 15 amp Fused 12-volt IGNITION feed for fuel pump (may also be used to feed power to another ignition circuit). Dark Blue P.SEATS 30 amp Fused 12-volt BATTERY feed for power seats (may also be used to feed power to another battery circuit). PLOCKS 30 amp Fused 12-volt BATTERY feed for power door locks (may also be used to feed power to another battery circuit). Pink CRUISE 15 amp Fused 12-volt IGNITION feed for cruise control (may also be used to feed power to another ignition circuit). Yellow PWDOS 30 amp Fused 12-volt BATTERY feed for power windows (may also be used to feed power to another battery circuit).

5 amp Fused 12-volt ACCESSORY feed (may also be used to feed power to an accessory circuit). Tan

HEADLIGHT SWITCH NOTE: On some cars, it may be necessary to open up the round mounting hole in the dash a very small amount to install the new AAW H/L Switch 500682

12 volt battery feed to light switch for H/L circuit.

Secondary fused 12 volt battery feed to light switch for tail/parking lamp circuits, and output to dk. green dash lamp circuit. Orange

Brown Fused 12 volt feed out to tail and parking lamp circuits Yellow Feed out to dimmer switch for headlights.

12 volt feed out from light switch to fuse box for dash lamp circuit. Dk. Green

White Ground lead for courtesy and dome lamp circuits.

This connector will mate to the main rear body harness (510404, bag M) connector.

Fuel tank sender wire.

Feed to the tail and license plate lamps. Brown Feed to LH stop and turn lamp. Yellow Dk Green Feed to RH stop and turn lamp Orange Feed to dome and courtesy lamps. White Ground to dome and courtesy lamps. Feed to back-up lamps. Lt. Green

Lt. Blue Feed to third brake lamp.

5 FRONT LAMP This connector will mate to the front lamp harness (500432, bag L). Feed to lo beam H/L circuit.

Lt. Green Feed to hi beam H/L circuit. Brown Feed to LH and RH parking lamps. It Blue Feed to LH turn signal lamp Dk Blue Feed to RH turn signal lamp.

Dk Green Feed to horns

Orange Fused 12 volt ignition feed for electric fan relay (DO NOT CONNECT DIRECTLY TO ELECTRIC FAN).

6 LH COURTESY This connector will mate to one of the courtesy lamp extensions (500471, bag N). Orange

12 volt feed to LH courtesy lamp. White Ground feed to LH courtesy lamp and LH door jamb switch.

WIPER FEED White Fused 12 volt feed for windshield wipers (on an original 55-56 application, this will connect directly to the wiper motor. The dash switch

will control the function. For all aftermarket wiper systems, consult the manufacturers directions for installation.

CLUSTER GROUND Black This is the ground wire for the instrument cluster. Connect to a good known chassis ground (do not connect with #17 speedo ground).

Orange BRAKE SWITCH Fused 12 volt feed into brake switch 9

12 volt feed out of the brake switch to the turn signal switch for brake lights. White Lt Blue 12 volt out of the brake switch to the rear body connection for the third brake light.

GAUGE DISCONNECT These connectors will mate to the gauge cluster harness (510409, bag H) connectors. Wire identifications will be found in that kit.

This connector will mate to the new AAW ignition switch (510632). IGNITION SWITCH

12 volt unfused battery feed into the ignition switch. Red Pink

12 volt unfused ignition feed out of the ignition switch to the fuse panel and engine harness connector.

12 volt unfused accessory feed out of the ignition switch to the fuse panel. Brown

Purple 12 volt unfused starter solenoid feed out to the starter connection

This harness has been manufactured using the more common 1969-1976 GM steering column connections as were used by GM and 12 TURN SIGNAL SWITCH most aftermarket steering column manufacturers. If you are using a stock 1955-56 steering column, or a 1977 or later GM steering

column, please see "Figure A" on sheet 4, and using the provided connector L and terminals M found in the 500414 loose piece dash,

connect your column to the new AAW dash harness.

White 12 volt feed into the turn signal switch from the brake switch for your brake lights.

Dk Green Feed out of the turn signal switch to the rear body connector for the RH rear turn signal. Feed out of the turn signal switch to the rear body connector for the LH rear turn signal. Yellow

12 volt ignition feed into the turn signal switch for turn signals. Purple

Brown 12 volt battery feed into the turn signal switch for hazard lamps.

Dk. Blue Feed out of the turn signal switch to the front light and cluster connectors for the RH front turn signal. Feed out of the turn signal switch to the front light and cluster connectors for the RH front turn signal. Lt. Blue

Horn relay ground wire from horn switch to horn relay connector.

13 LIGHTER Orange Fused 12 volt feed for cigarette lighter.

Black

14 HORN RELAY Plug the horn relay (found in the fuse, relay, and flasher bag, 510565) into this connector.

Red 12 volt battery for relay.

Relay ground circuit from steering column horn switch. Black


Dk. Green Triggered 12 volt feed from the relay to the front lamp connector for the horns.



1955-56 Chevy Custom Fuse Panel Harness 500414

92965033 Rev. 20.0 4/12/2021 CD

www.americanaurowire.com 856-933-0801

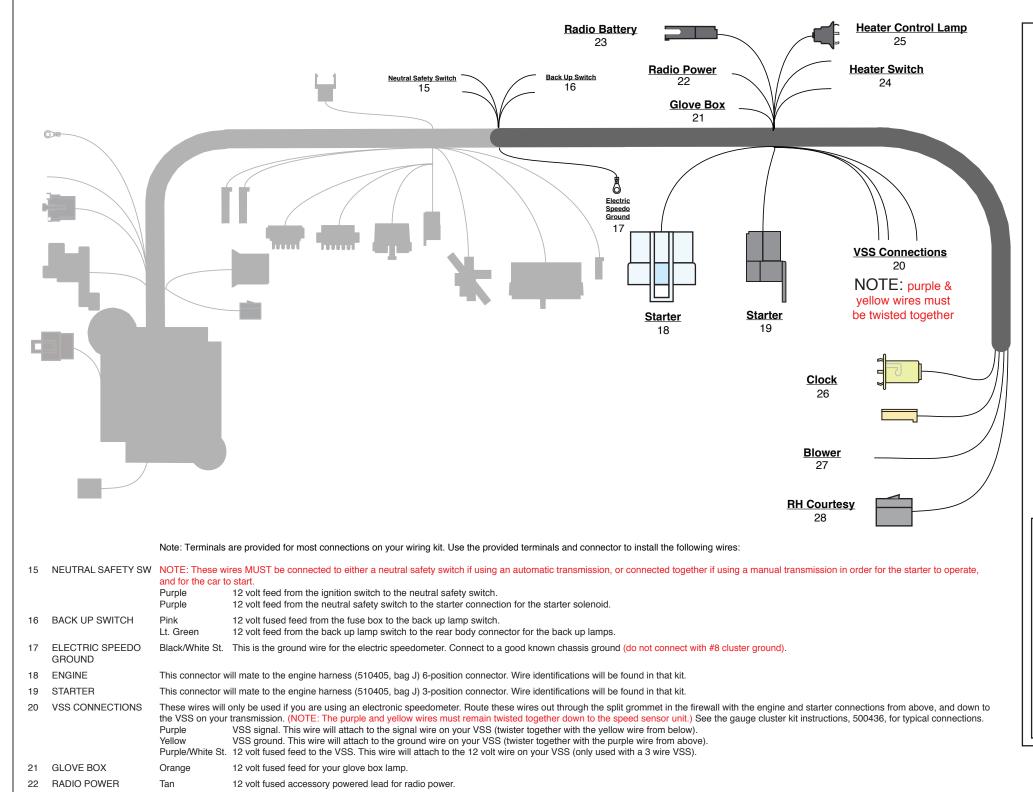

1955 stock heaters used 2 single cavity connectors with a separate lamp feed and socket. 1956 stock heaters used a single 3-cavity connector that incorporated the lamp wire into it. We have provided

terminals, connectors, and a lamp socket (1955 application only) for either application. Details for their assembly can be found in "Figure B" on sheet 3 of this instruction set.

12 volt fused accessory feed to heater/A-C switch. (NOTE: This is also the "key on" power feed for any aftermarket heater or A/C system.

12 volt feed from heater switch to blower motor (used only with stock heater switch and blower assembly)

Yellow

Brown

Orange

Gray

Yellow

Orange

Orange

White

Gray

RADIO BATTERY

HEATER SWITCH

HEATER LAMP

HEATER BLOWER

RH COURTESY

CLOCK

12 volt fused battery powered lead for radio memory.

12 volt feed out of the switch to the blower motor.

12 volt fused battery feed for clock power.

12 volt feed to RH courtesy lamp.

This connector will mate to one of the courtesy lamp extensions (500471, bag N).

12 volt feed for lamp circuit. Uses #57 bulb (not included)


12 volt feed for clock lamp. Uses #67 Bulb (not included)

Ground feed to RH courtesy lamp and RH door jamb switch.

"Figure A" AAW Turn Signal Switch wires to stock 1955-56 Chevy turn signal switch.

AAW	AAW	AAW	Stock
Wire #	Wire color	Wire Printing	Wire Color
14A,B 15A,B 16B 17A,B 18 19 27B 28	Light Blue Dark Blue Purple Blue & White Yellow Dark Green Brown Black	Left Front Turn Right Front Turn Turn Switch Feed Brake Switch Left Rear Turn Right Rear Turn Turn Sw - Hazard Horn Relay Ground	

NOTE: The stock 1955-56 Chevy turn signal switches did not have a horn ground wire located in them. That wire was a separate wire that was attached to the steering column upper mast jacket bushing and came out through an opening in the steering column. That wire was typically black, tan, or dark green and had a small male blade crimped onto it. If you are using the factory steering column in your car, crimp one of the loose piece terminals "M" found in the loose piece kit of the 500414 dash harness onto that wire, and plug it into the adapter "L" when building your turn signal switch adapter to complete the horn ground circuit.

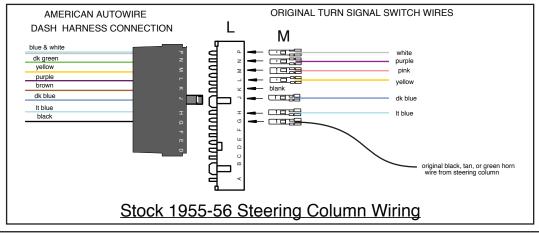



www.americanaurowire.com

856-933-0801

1955-56 Chevy Custom Fuse Panel Harness

500414

92965033 Rev. 20.0 4/12/2021 CD