



Gauge disconnect connectors are provided for ease of installing and removing the gauge cluster and can be located at a convenient point between the gauge cluster and the under dash harness. A gauge terminal kit, 92965220, is provided for the gauge connections. It is recommended that all ring terminal and blade terminals be soldered. Do not solder the bare wires that are connected to the panel. This connection is made to work with bare stranded wire.

| WHITE - RED TRACER | TACH | System. Solder all connections. Connect this wire to the tach sending unit post using sup end to the ignition coil. Solder all connections. This wire is included in the headlight connection bag (50 type terminals. Solder all connections. | 00461), and is connected using supplied ring/boot or blade |
|--------------------|-----------------|---|--|
| WHITE | INSTRUMENT LAMP | | PART # 500460 E |