

## INSTALLATION INSTRUCTIONS:

Disconnect connectors are supplied to plug into your steering column. Install 8 position FEMALE connector on the wires from your wiring kit. Using the supplied male terminals, plug in the wires from your turn signal switch into the supplied 8 position MALE, matching wire functions with the wires from this kit.

NOTE: American Autowire Systems has plug in adapter kits available for most GM applications.

Be sure to SOLDER all connections! Install the remaining wires as follows:

<b>3</b>		000050404 4 44 5 5 00 5440/0004	
WIRE COLOR	CIRCUIT	INSTALLATION	92965249 instruction sheet Rev 0.0 5/16/2001
YELLOW	LEFT TAIL LAMP	Route and connect this wire to your left tail light (stop, and turn location)	
GREEN	RIGHT TAIL LAMP	Route and connect this wire to your right tail light (stop, and turn location)	
BLACK - BLUE TRACER (long)	LEFT FRONT TURN	Terminate this wire with the shorter BLACK - BLUE TRACER (left dash ind) wire below and plug into the steering column connector (as shown on sheet 1) and solder. Route and connect this wire to the left front turn signal lamp (turn location).	
BLACK - BLUE TRACER (short)	LEFT TURN SIGNAL INDICATOR	After terminating this wire with the longer BLACK - BLUE TRACER (left front turn) wire above, route this wire to the left turn signal indicator light in dash.	
BLACK -YELLOW // TRACER (long)	RIGHT FRONT TURN		OW TRACER (right dash ind) wire below and plug into 1) and solder. Route and connect this wire to the right
BLACK - YELLOW // TRACER (short)	RIGHT TURN SIGNAL INDICATOR	After terminating this wire with the longer BL/ route this wire to the right turn signal indicator light	ACK - YELLOW TRACER (right front turn) w ire above, in dash.
WHITE - ORANGE TRACER	BRAKE SWITCH FEED OUT	<u> </u>	th. If you are using a third brake light, terminate with the supplied female terminal and connector, and plug into
BLACK-WHITE TRACER	HORN GROUND	Route this wire to the panel and insert it into the "F	IORN SW" location on panel.
YELLOW - PURPLE TRACER	TURN SIGNAL FLASHER	Route this wire to the panel and insert it into the "T	URN" location on panel.
BROWN	HAZARD FLASHER	Route this wire to the panel and insert it into the "H4-way flasher.	AZARD" location on panel. This wire is only used with a
ORANGE	DOME / CTSY LAMP FEED	terminal, (12V battery) terminate with the ORANGE single plastic connector. This "12V battery fused" v	interior courtesy lamps.) Using the supplied female E "brake sw" wire below, and solder. Plug into the supplied vire will then be routed to the dome and/or courtesy lamp. ACK TRACER wire from your headlight switch (500461 off using the headlight ground circuit.
ORANGE	BRAKE SWITCH FEED IN (Brake Sw)		male terminal and connector. Plug this wire into your e panel and insert it into one of the "BAT 3" locations on

500463

STEERING COLUMN / TURN SIGNAL

**CONNECTION KIT**