

This output of the unit **IS** controlled by the relay and will only switched on when the relay is triggered. This circuit is protected by a 60A fuse.

This output of the unit **IS NOT** controlled by the relay, it is strictly a pass through. This circuit is protected by a 60A fuse.

This wire can be used to trigger the relay with a ground when the pink wire is connected to an ignition source This is the typical method to trigger the relay.

OPTION: If you are triggering the relay with power than this wire will go to a chassis ground. This ring terminal is provided if you are grounding this wire.



 
This wire gets connected to an ignition power source when using a ground to trigger the relay.

OPTION: If you are triggering the relay with power then this wire will go to your powered trigger source.


Thread protector for outputs.




BATTERY POWER



shrink tube

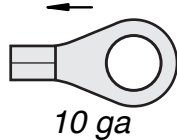


10 ga

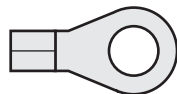

8 ga



Boot

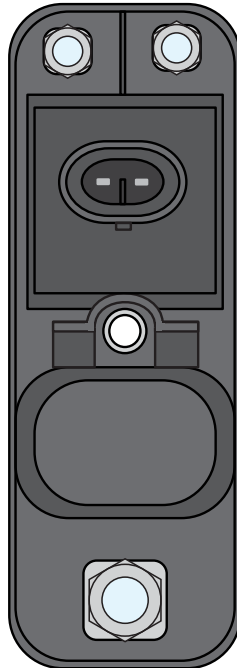

**American
Autowire**

www.americanautowire.com 856-933-0801

PART #	510602
DESCRIPTION:	60 Amp Weatherproof Relay Kit
92971199 Instruction Set	Rev 0.0 4/6/2015