

Before you begin:

Read the entire instruction sheet before starting. Ensure all components are present. If anything is missing, stop and contact American Autowire at 856-933-0801. Always disconnect the negative battery cable before beginning installation.

Fuse Block Mounting and Assembly:

- 1. Choose a mounting location close to the battery power source, under the hood, and secure the fuse block using mounting screws (not included) of your choice.
 - Ensure both the 12 ft. 6Ga. charging wire and the 10Ga. main power feed can reach this location. The 6Ga. charging wire will need to connect to the alternator, the megafuse block, and the starter/battery junction.
- 2. Detach the fuse block cover and remove the factory-installed nuts and lock washers from the studs.
- 3. Place the busbar jumper (Item “D”) across the designated studs.
 - Important: The jumper must be installed on the side that connects to your main power source (starter solenoid or battery junction).
- 4. Install one 175A megafuse (Item “C”) onto each fuse position in the block.
- 5. Reinstall the nuts and lock washers loose over the jumper and fuses.

Battery Feed Wiring:

Route the 6Ga. Charge Wire (Item “A”) from the mounted Megafuse Block (Item “B”) to the battery stud on the starter solenoid, or a similar battery junction, under the hood and cut to length. Cut the 3/8” Shrink Tubing into 1 inch lengths. Slide one of these smaller lengths over each end of the charge wire.

- **At the starter end:** Crimp and solder a 6Ga. Starter Ring Terminal (Item “G”) and then insulate the crimp with the previously installed shrink tube. Secure the newly crimped end to the battery stud on the starter solenoid or battery junction.
- **At the megafuse block end:** Crimp and solder a 6Ga. Megafuse Ring Terminal (Item “H”) and then insulate the crimp with the previously installed shrink tube. Attach the crimped end to the megafuse block on the **busbar** side of the fuses. Tighten securely.

Alternator Feed Wiring:

Route the remaining length of the 6Ga. Charge Wire (Item “A”) from the mounted Megafuse Block (Item “B”) to the battery stud on the alternator and cut to length. Slide one of the cut, 1 inch lengths of shrink tube (Item “F”) over the end of the charge wire closest to the megafuse block.

- **At the alternator end:** Slide the Alternator Boot (Item “E”) on the end of the wire. Crimp and solder a 6Ga. Alternator Ring Terminal (Item “J”) and secure the newly crimped end to the battery stud on the alternator.
- **At the megafuse block end:** Crimp and solder a 6Ga. Megafuse Ring Terminal (Item “H”) and then insulate the crimp with the previously installed shrink tube. Attach the crimped end to a fuse stud on the **side opposite the busbar**. Tighten securely.

Panel Feed Wiring:


Locate the 10Ga. “12V Battery Feed” wire from the engine or panel subkit, route it to the Megafuse block, cut to length, and slide a piece of the cut shrink tubing (Item “F”) over the cut end. Crimp and solder a 10 GA. megafuse ring terminal (Item “K”) on the end and insulate the crimp with the shrink tubing. Attach to the remaining open fuse stud on the side **opposite the busbar**. Tighten securely.

Parts Legend:


A




B

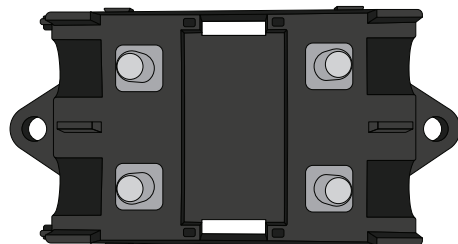

C



D




E




F




G



H



J



K



bag

Z

6 Gauge Charge Wire - QTY (1)
(144.0" Length)

Megafuse Block - QTY (1)
(Lid not shown)

175A Megafuse - QTY (2)

Megafuse Block Busbar - QTY (1)

Alternator Boot - QTY (1)

3/8" Shrink Tubing - QTY (1)
(8.0" Length)

6Ga. Starter Ring Terminal - QTY (2)
Fits 3/8" Stud

6Ga. Megafuse Ring Terminal - QTY (3)
Fits 5/16" Stud

6Ga. Alternator Ring Terminal - QTY (2)
Fits 1/4" Stud

10Ga. Megafuse Ring Terminal - QTY (2)
Fits 5/16" Stud



www.americanautowire.com 856-933-0801


Alternator and Main Power
Connection Kit

510476

Classic Update Series


92974822 Rev 0.0 05/05/2026

Typical GM or MOPAR Connections

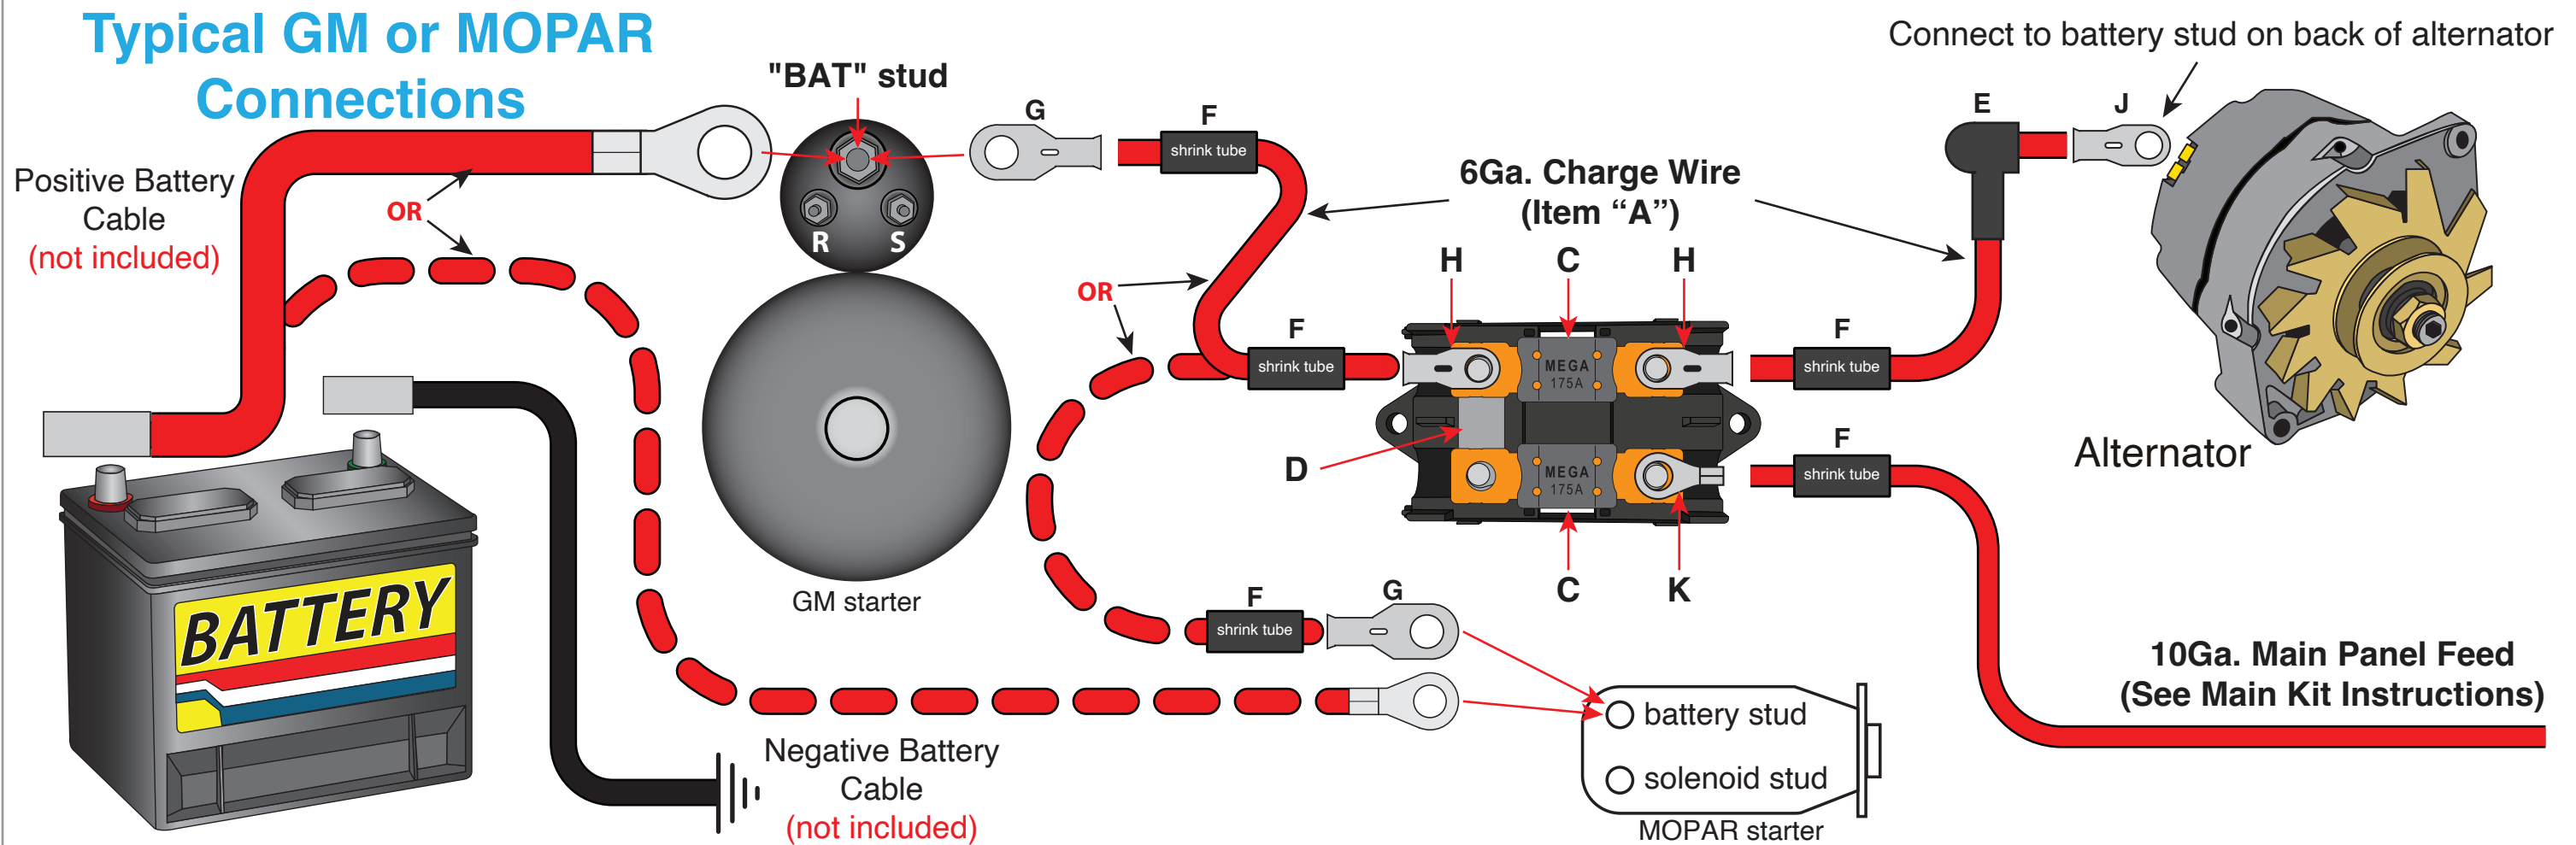

bag
Z

Typical Ford Connections

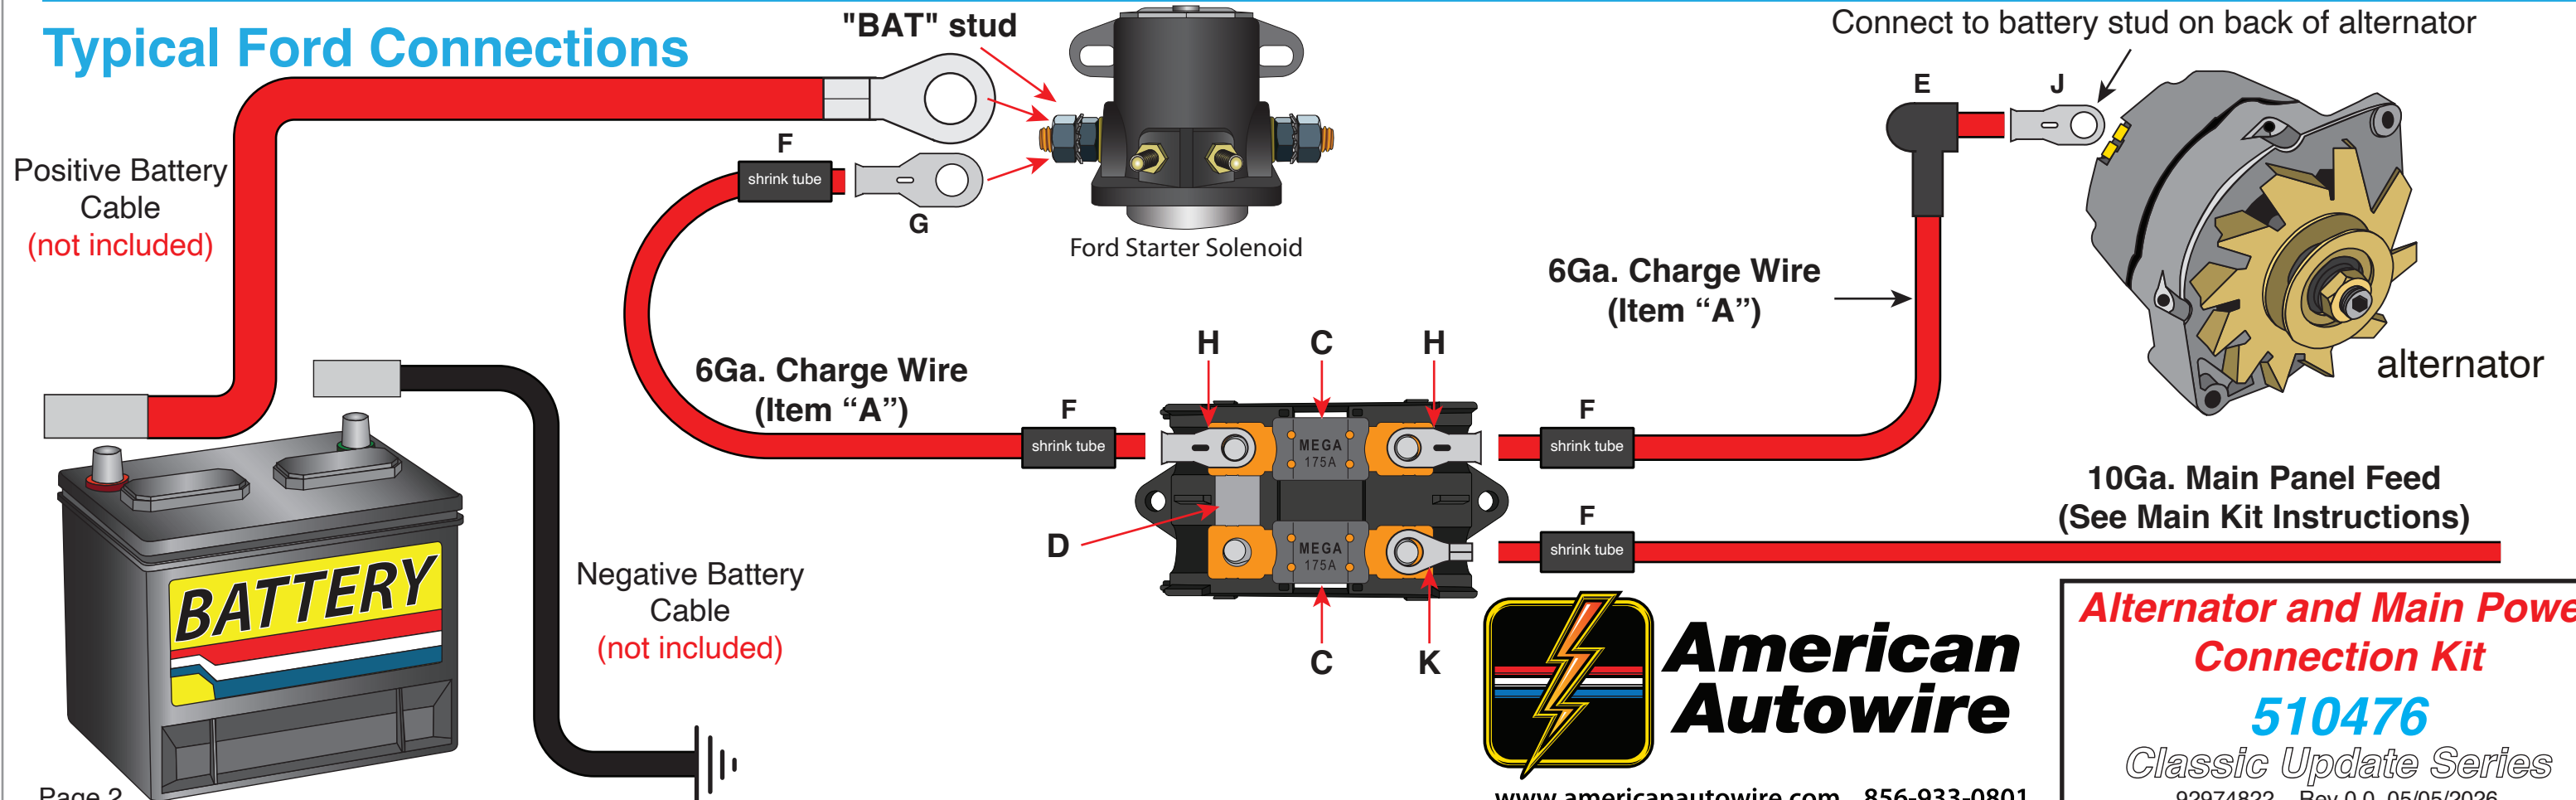

**American
Autowire**

www.americanautowire.com 856-933-0801

**Alternator and Main Power
Connection Kit**

510476

Classic Update Series

92974822 Rev 0.0 05/05/2026