

On the next 3 pages, you will find several detailed specialized instructions that will help you install a stock automatic or 4 speed 1963 Impala SS console assembly into your 1963 Impala using this harness kit along with our dash harness kit, P/N 510065, from our 510063 1961-64 Impala Classic Update wiring kit. On sheet 2 you will find the console and courtesy connections, and on page 3 you will find the neutral safety and back up lamp switch connections. All necessary connectors and terminals needed to complete this installation are included in this kit. Nothing more will be needed.



**American
Autowire**


www.americanautowire.com 856-933-0801



Classic Update Series
1963 IMPALA SS KIT
Console Extension
Installation Instructions

510416

92971315 instruction rev 0.1 11/17/2023

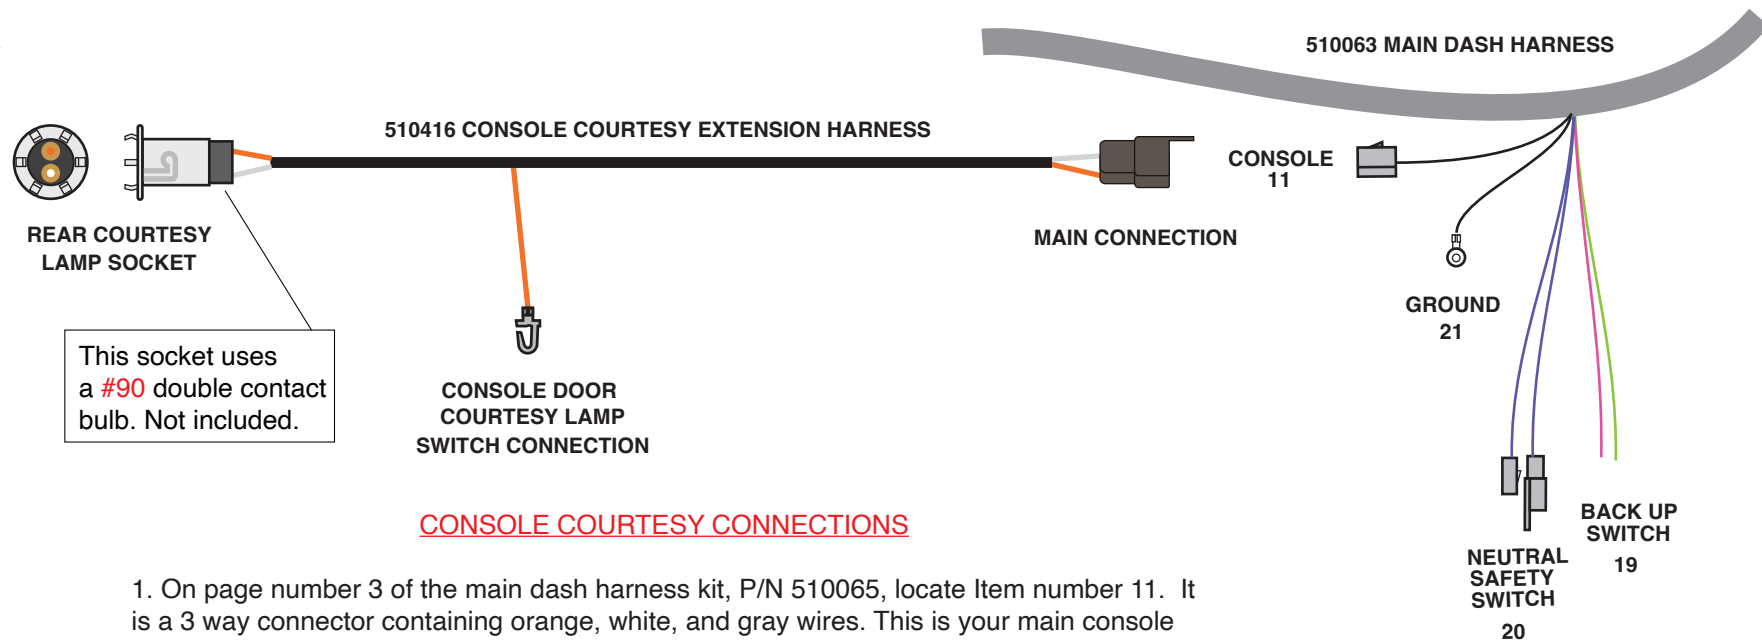

CONSOLE COURTESY CONNECTIONS

1. On page number 3 of the main dash harness kit, P/N 510065, locate Item number 11. It is a 3 way connector containing orange, white, and gray wires. This is your main console connection.
2. Plug the 3 way main connector of this new “console courtesy extension harness (510416)” that contains the orange, and white wires onto item number 11 from the main dash harness as referenced above. Route this extension harness under the rug, the forward metal console plate, and up into the console box.
3. Pull the “fish hook” terminal shown above on the orange wire, up through the round opening that the console light door harness and switch assembly (**not included in kit, but can be ordered separately, AAW P/N CF15206**) installs into. Install the “fish hook” terminal into the console light door switch and then snap the completed console light door harness and switch assembly into the console. (**NOTE:** Be sure to attach the ring terminal that is part of the ground wire of the console light door harness and switch assembly to the floor of the car to complete the grounding circuit.)
4. Snap the rear courtesy lamp socket into the courtesy lamp housing at the back of the console just as original.



**American
Autowire**


www.americanautowire.com 856-933-0801

Console Courtesy
Lighting Connections

1963 Impala SS

510416

92971315 instruction rev 0.1 11/17/2023

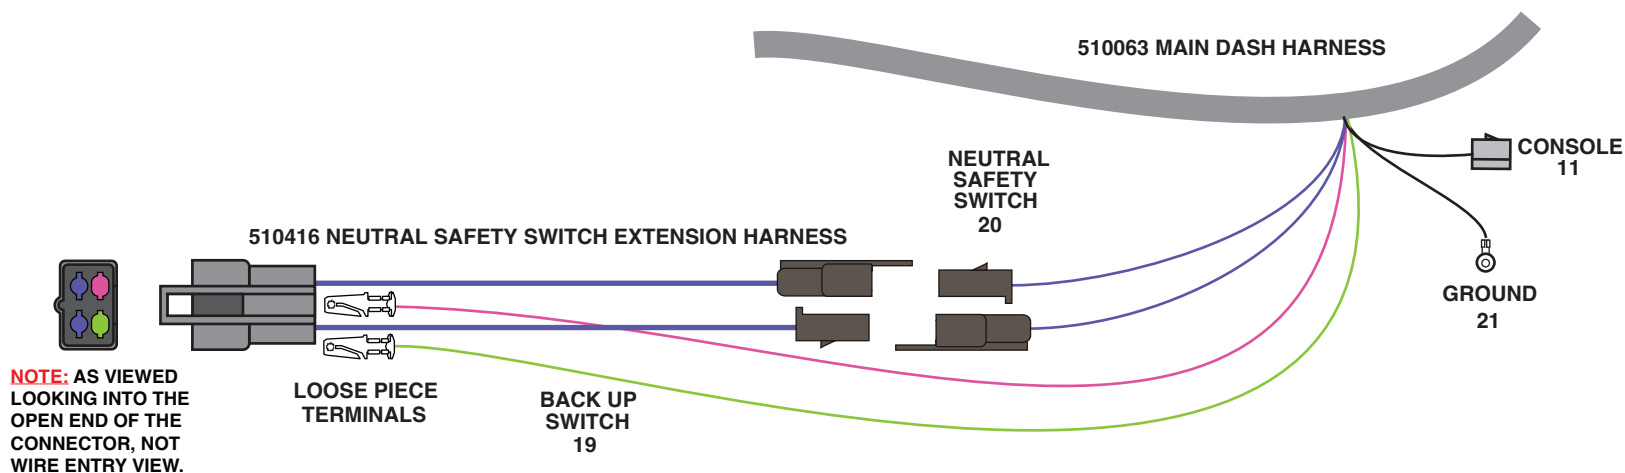

NEUTRAL SAFETY AND BACK UP CONNECTIONS

1. On page number 3 of the main dash harness kit, P/N 510065, locate Items number 19 and 20. Items 19 are the back up lamp switch wiring, and items 20 are the neutral safety switch wiring.

2. If your car has a **manual transmission**, take the 2 purple wire connectors on the 510065 dash harness at location number 20 and simply plug them together to complete the starter circuit. The light green and pink wires at location number 19 should be routed to the firewall area and should be mated up with the back up lamp switch or wiring from your transmission mounted back up switch assembly. No further assembly is required. Skip to item 4 below!

3. THE NEUTRAL SAFETY SWITCH WIRING WILL ONLY BE USED WITH AN AUTOMATIC TRANSMISSION! If your car has an **automatic transmission**, plug the mating purple wires and connectors on the new “neutral safety switch extension harness (510416)” into your dash harness at location number 20. Route the other end of the new extension harness (4 way connector) over to your original Neutral Safety and Back Up Lamp Switch and Wiring Assembly area (**not included with this kit**) where it comes through the split grommet in your firewall (Do not plug this extension into the original assembly at this time). Route the light green and pink wires at location number 19 on the 510065 dash harness over to your original Neutral Safety and Back Up Lamp Switch and Wiring Assembly area (**not included with this kit**) where it comes through the split grommet in your firewall. Cut the light green and pink wires to length, and using the loose piece terminals provided with the new “console extension harness”, crimp them onto the light green and pink wires. Take the two completed wires and plug them into the 2 open cavities on the “510416 neutral safety switch extension” harness as shown above maintaining color continuity (the factory wires may be black with a light green and black with a pink stripes) with the 4 way plug on your original Neutral Safety and Back Up Lamp Switch and Wiring Assembly. Once these wires are plugged into the clear connector on the new extension harness, you may then plug this completed 4 way connector onto the 4 way connector from your original Neutral Safety and Back Up Lamp Switch and Wiring Assembly.

4. Congratulations! Once you have completed the appropriate steps for your application on pages 2 and 3, you have successfully connected your factory console assembly into your 510065 Classic Update dash harness for your 1963 Impala SS.



www.americanautowire.com 856-933-0801

Neutral Safety and
Back Up Lamp
Switch Connections

1963 Impala SS

510416

92971315 instruction rev 0.1 11/17/2023

THIS PAGE HAS
INTENTIONALLY BEEN
LEFT BLANK

