


Template for modification of the firewall on a 1967-75 Mopar A-Body with a Classic Update Kit

Note: Please confirm all measurements on this template before cutting or drilling any holes.

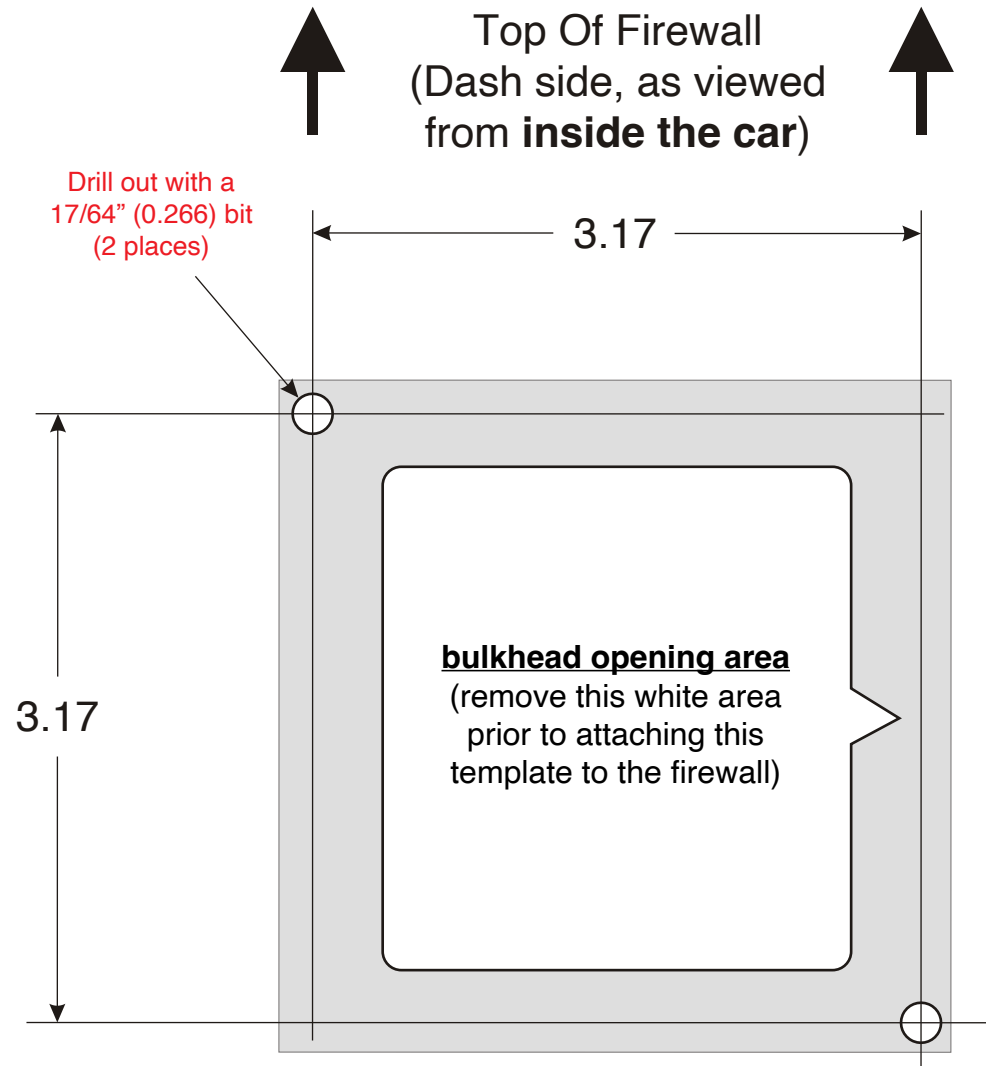

**PRINT ON ADHESIVE
LABEL SHEET**

The only firewall modification needed with this new kit is to drill 2 new 0.266 mounting holes. The stock opening in the firewall is already the proper size for the new bulkhead assembly to fit through. This template can be affixed directly to the firewall or it can be applied to a stiff piece of cardboard or thin plastic, then mounted to the firewall. Be sure to clean any wax, grease, or oil from the area so that the template will stick.

1. Remove the white "bulkhead opening area" from the template and align this open area with the factory firewall opening.
2. Mark the 2 screw holes that need to be drilled out onto the firewall using a marker or other similar means.
3. Using a center punch, slightly dimple the 2 screw marks that you have transferred onto the firewall so that your drill will not walk when making the new holes. Re-check your 2 marked areas with the template to be sure that they are correct before drilling the 2 new holes.
4. Drill your new mounting holes.
5. Using the provided screws, washers, and locking nuts found in the loose piece kit for the 510604 dash harness, from inside the car, install the bolts through the fusebox and then through the firewall. Use the washers and nuts on the engine bay side to complete the installation.
6. Your mounting procedure is now complete. You may now continue with the installation of your new fuse panel harness.

92971477

92971477 instructions Rev 2.0 9/19/2024