


Plug this connector onto the stator terminal on the alternator.

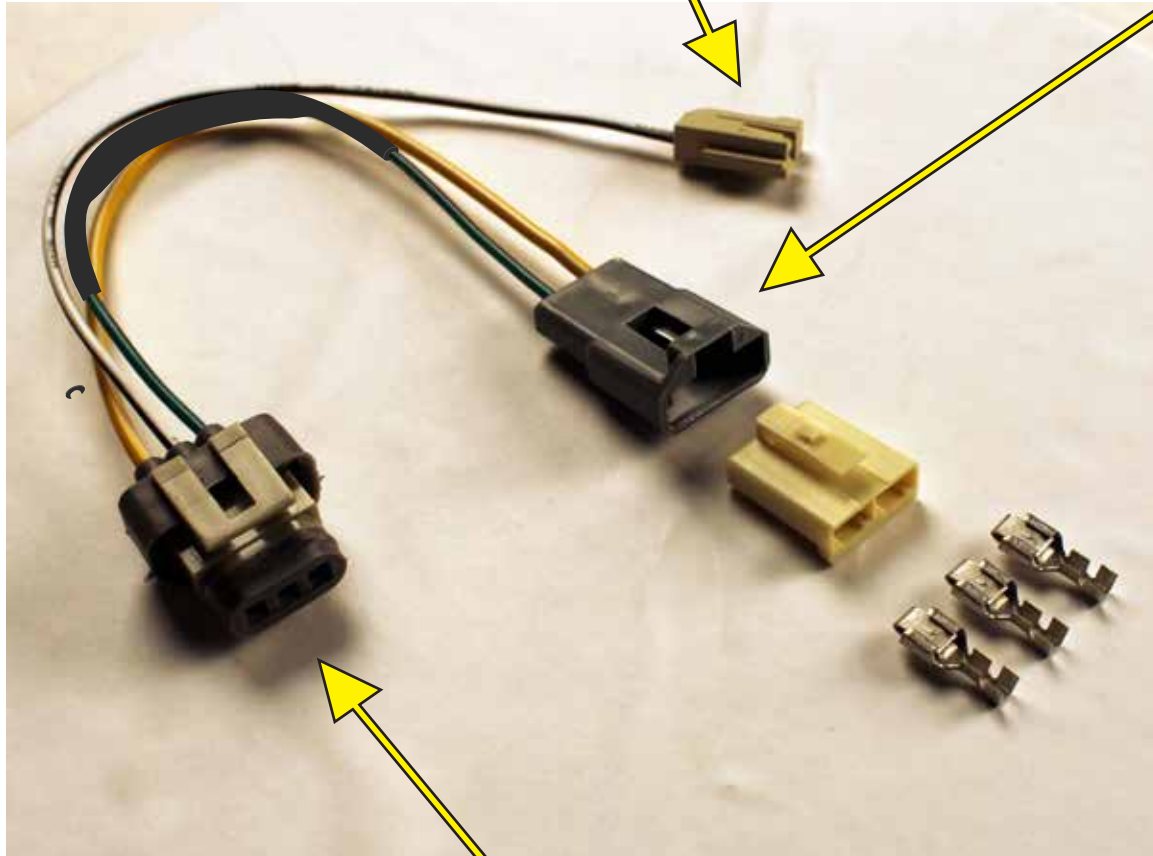

Plug this connector onto the main plug connection on the alternator.

If you have an American Autowire (AAW) harness that comes with an "SI" series, internally regulated alternator connector, simply plug that alternator connector into this adapter. The "SI" series alternator connector is a white connector wired with a brown and a red wire.

If you do not have an AAW harness, or have an AAW harness with only a brown exciter wire, use the white plastic connector and metal terminals that are included with this kit to make your connections.

Connect a 12v battery source (hot all the time) to the yellow wire on this adapter, then connect a 12v switched "exciter" wire (only hot when the key is turned to "on" or "accessory") to the green wire with red stripe. Note: The alternator exciter wires will be brown on all AAW wiring kits, but might be a different color on OEM or non- AAW applications.



**American
Autowire**

www.americanautowire.com 856-933-0801

ALTERNATOR ADAPTER KIT

GM "SI" series to FORD "3G"
internally regulated alternator

500802

92966837

Rev 4.0

5/9/2023