
## **INSTRUCTIONS:**

 Insert the bare terminal on the tan wire into the mating accessory connector as shown below, then plug that connector back into the dash harness accessory connection.

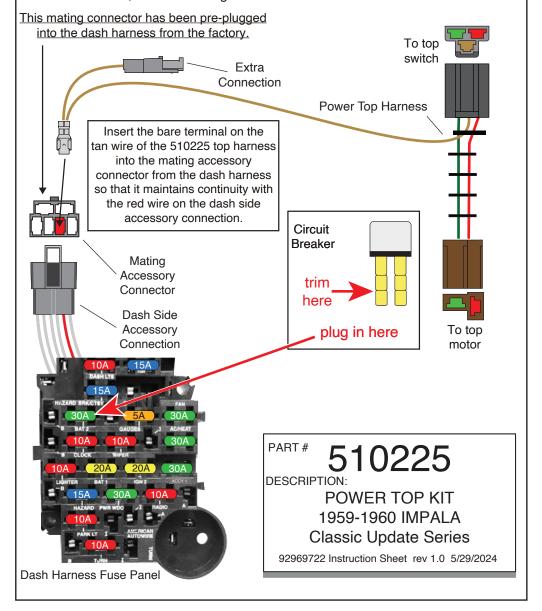

www.americanautowire.com 856-933-0801

- Plug the power top harness into the motor connection and into the power top switch.
- 3. Remove the 30A fuse from the "BAT 2" location in the fuse panel and replace it with the provided 30 A circuit breaker. This breaker will need to be trimmed as shown below, before inserting.



## **INSTRUCTIONS:**

 Insert the bare terminal on the tan wire into the mating accessory connector as shown below, then plug that connector back into the dash harness accessory connection.



www.americanautowire.com 856-933-0801

- Plug the power top harness into the motor connection and into the power top switch.
- 3. Remove the 30A fuse from the "BAT 2" location in the fuse panel and replace it with the provided 30 A circuit breaker. This breaker will need to be trimmed as shown below, before inserting.

