


**NOTE:** If the fuse panel on your 510063 61-64 Impala kit **HAS** a sticker like the photo at the left, you have the second design harness and your instructions are listed below and follow this page.

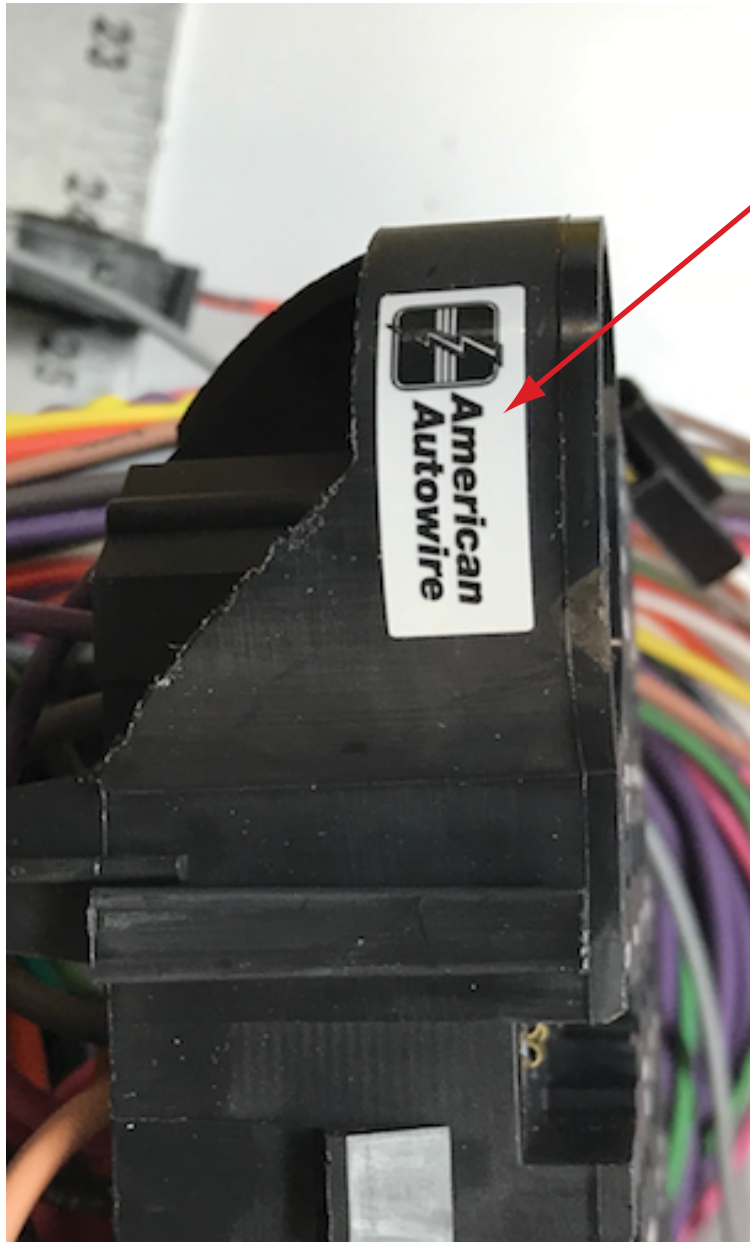

| Number   | Description                              |
|----------|------------------------------------------|
| 500332   | Headlight Switch                         |
| 500707   | Fuse, Relay, and Flasher Kit             |
| 500471   | Courtesy Light Kit                       |
| 500684   | Ignition Switch                          |
| 500919   | Practice Terminal Crimping Set           |
| 510530   | Dash Harness Kit                         |
| 510532   | Engine Wiring Kit                        |
| 510533   | Front Light Wiring kit                   |
| 510531   | Instrument Cluster Wiring Kit            |
| 520001   | Digital Gauge System Dim Wire            |
| 510073   | Deck Lid - Rear Body Kit                 |
| 510761   | Rear Body Wiring Kit                     |
| 510476   | Alternator and main power Connection Kit |
| 510730   | VSS Connection Kit                       |
| 500042   | Floor Dimmer Switch                      |
| 92968980 | Firewall Mod. Template Sheet             |
| 92972581 | Kit Introduction Instruction Sheet       |
| 92972582 | Warning Sheet                            |



**American  
Autowire**

www.americanautowire.com 856-933-0801

## 61-64 Impala Second Design Instructions

92972893 rev. 1.0 10/15/2025



## WARNING:

Validate the kit contents with the component list included on page 2 of this sheet before proceeding. This kit is intended to be used in a modified vehicle. Please read this sheet thoroughly and be sure that you understand everything explained on it prior to opening any of the enclosed packages, or before attempting to install any of the components. Once this kit has been opened or a component installed, the kit is not returnable.

1. This kit should typically be used in a **MODIFIED** application only.
2. This kit supports the use of factory heater systems and aftermarket heater and A/C systems. The kit supplies power to a factory A/C control head but **DOES NOT** include the actual A/C harness for an original factory A/C vehicle. Factory original A/C harnesses are available under our Factory Fit product line as they are self contained harnesses made to fit and work with the stock A/C component configuration.
3. This kit requires the use of a high-current, self-exciting 1-wire alternator or other internally regulated alternator. An adapter may be necessary in some applications. The use of the stock, externally-regulated alternator or generator is **NOT** supported as these cannot handle the higher current requirements of updated ignition systems, electric fans, aftermarket A/C systems, stereo systems, air ride suspensions, and other power hungry accessories and will ultimately create performance issues with the system.
4. This kit **WILL NOT** support the use of a factory ammeter. All AAW kits are engineered to supply the optimum charge to the battery. To achieve this performance, we route our 6ga. charge wire directly from the alternator output charge terminal to the starter battery terminal. Due to the path of the charge being altered from the stock configuration, the gauge can no longer see a charge vs. a discharge, so it will not work properly. When ammeters were originally used, most generator or alternator current outputs were rated at a maximum of about 25-60 amps. Modified cars being built today typically utilize a 100 amp or higher output alternator. With these higher current units, ammeters, generally speaking, become a safety hazard. Ammeters are usually wired in parallel to the charging circuit, are typically unfused, and can short very easily causing a fire. A voltmeter is recommended as a good alternative.
5. This kit **IS NOT** set up with a resistance wire for a standard points-type ignition system. It is wired with a full 12 volt primary ignition feed that is hot in the run and crank position. Primary ignition voltage in the starting position is handled via a full 12 volt bypass wire. Our system will support HEI, MSD, other electronic ignition systems, as well as most all computerized Fuel Injection systems. If you wish to run a points type system, there are illustrations on the engine connection pages to do so. Extra parts (ballast resistor) that are not included in this kit will be required to complete that operation.
6. This kit **DOES NOT** include the rear body wiring, power rear window or tail light sockets for the station wagon, El Camino, or sedan delivery applications.



**American  
Autowire**

www.americanautowire.com 856-933-0801

**510063**

92972582 Rev 2.1 07/11/2025

## 510063 - Classic Update Series Kit 1961-64 Chevrolet Impala

This kit contains the following components:

| <u>Bag</u> | <u>Part<br/>Number</u> | <u>Description</u>                       | <u>Quantity</u> |
|------------|------------------------|------------------------------------------|-----------------|
|            | 500042                 | Floor Dimmer Switch                      | 1               |
|            | 500332                 | Headlight Switch                         | 1               |
| N          | 500471                 | Courtesy Light kit                       | 1               |
|            | 510632                 | Ignition Switch                          | 1               |
|            | 500707                 | Fuse, Relay, and Flasher kit             | 1               |
|            | 500919                 | Practice Terminal Crimping Set           | 1               |
| G          | 510530                 | Dash Harness kit                         | 1               |
| J          | 510532                 | Engine Wiring Kit                        | 1               |
| L          | 510533                 | Front Light Wiring kit                   | 1               |
| H          | 510531                 | Instrument Cluster wiring kit            | 1               |
| M          | 510761                 | Rear Body Wiring kit                     | 1               |
| P          | 510073                 | Deck Lid wiring kit                      | 1               |
| V          | 510730                 | VSS Connection Kit                       | 1               |
| Z          | 510476                 | Alternator and Main Power Connection kit | 1               |
|            | 520001                 | Digital Gauge System Dim Wire - GM Kits  | 1               |
|            | 92968980               | Firewall Modification Template           | 1               |
|            | 92972581               | Kit Introduction Instruction Sheet       | 1               |
|            | 92972582               | Warning Sheet                            | 1               |

Validate the kit contents with this component list. If there are any discrepancies with incorrect or missing parts, stop your installation and notify the supplier you purchased the kit from before proceeding.



**American  
Autowire**

www.americanautowire.com 856-933-0801

**510063**

92972582 Rev 2.1 07/11/2025

# Classic Update Series

1961-1964 Impala

# START HERE !

PLEASE READ THIS BEFORE STARTING INSTALLATION !

This wiring kit is designed for ease of installation. Please read the guidelines below, BEFORE STARTING your installation to guarantee a successful job!! Use an appropriate crimping tool which folds the crimp wings on the terminals as shown below. Top quality crimping tools are available from American Autowire or American Autowire authorized dealers.

NOTE: ALL TERMINALS THAT YOU INSTALL SHOULD BE PROPERLY SOLDERED. Our factory terminations are installed by GM approved termination presses, and soldering is not necessary on these terminations.



STEP 1: DISCONNECT YOUR BATTERY:  
Disconnect the battery before installing the wiring kit to prevent any accidental shorting caused by loose bare wire ends.

STEP 2: START INSTALLING KIT:  
This kit is broken down into individual steps that are identified by a letter printed on the instruction sheets visible through each bag. These letters are the order of operator for installing your kit. Start with the bag letter G, then H, etc. The order of installation is shown below.

- G 510530 Dash Harness Kit
- H 510531 Instrument Cluster Kit
- J 510532 Engine Kit
- L 510533 Front Light Kit
- M 510761 Rear Body Kit
- N 500471 Courtesy Light Kit
- P 510073 Trunk Lid Kit
- V 510730 VSS Connection Kit
- Z 510476 Alternator and Main Connection Kit

STEP 3: RECONNECT YOUR BATTERY:  
When you have completed the installation and are ready to reconnect the battery, make sure that the following electrical system grounds are in place:

- A. Battery is grounded to the ENGINE BLOCK.
- B. Battery is grounded to the frame.
- C. Engine block is grounded to the frame.
- D. Body is grounded to the frame.

STEP 4: CHECK ALL ELECTRICAL FUNCTIONS:  
Any non-functioning items should be checked for proper installation. Any problems with your wiring and electrical circuit functions should be addressed to American Autowire Systems, Inc. as soon as possible to avoid any warranty problems.

If you have any questions concerning this or any of our products, please feel free to call us at 1-800-482-WIRE.

AMERICAN AUTOWIRE MAKES IT EASY !!


We carry many accessories for your 61-64 Impala

p/n R0067108  
OEM style non-stick harness tape



OEM style wiper switch.

p/n 01993543 (59-63) 2 spd w/washer  
p/n 01993541 (59-63) 1 spd w/washer  
p/n 01993643 (64) 2 spd w/washer

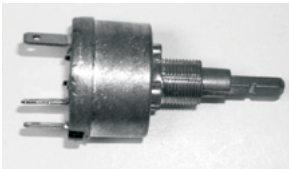

p/n 01998728 (61-2)  
p/n 01997929 (63)  
p/n 01993661 (64)  
Muncie 4 speed back up lamp switch.



p/n 510585 OEM multi  
terminal crimping tool  
(20-14 gauge).



p/n 510586 OEM large  
gauge terminal and double  
crimping tool (20-8 gauge).




p/n 38131  
Breakerless Ignition Module,  
GM V-8 POINT CONVERSION KIT



p/n 36320 (1961)  
p/n 36321 (1962)  
p/n 36322 (1963)  
p/n 36323 (1964)

Factory assembly manual.  
(It's what they used on the assembly  
line to build your Impala!)

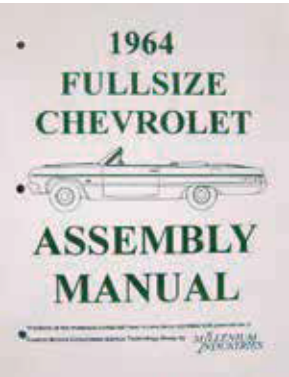

THIS KIT DOES NOT SUPPORT STOCK (ORIGINAL) GENERATORS. THE DESIGN OF THE KIT IS DESIGNED TO SUPPLY MORE POWER THAN A GENERATOR IS CAPABLE OF SUPPLYING.



www.americanautowire.com 856-933-0801

Classic Update  
Series

1961-1964 Impala

510063

© COPYRIGHT 2004 American Autowire / Factory-Fit  
Used with express permission of  
American Autowire / Factory-Fit  
92972581 instruction sheet rev. 0.0 10/3/2019




# CLASSIC UPDATE SERIES

1961-64 IMPALA




www.americanautowire.com 856-933-0801

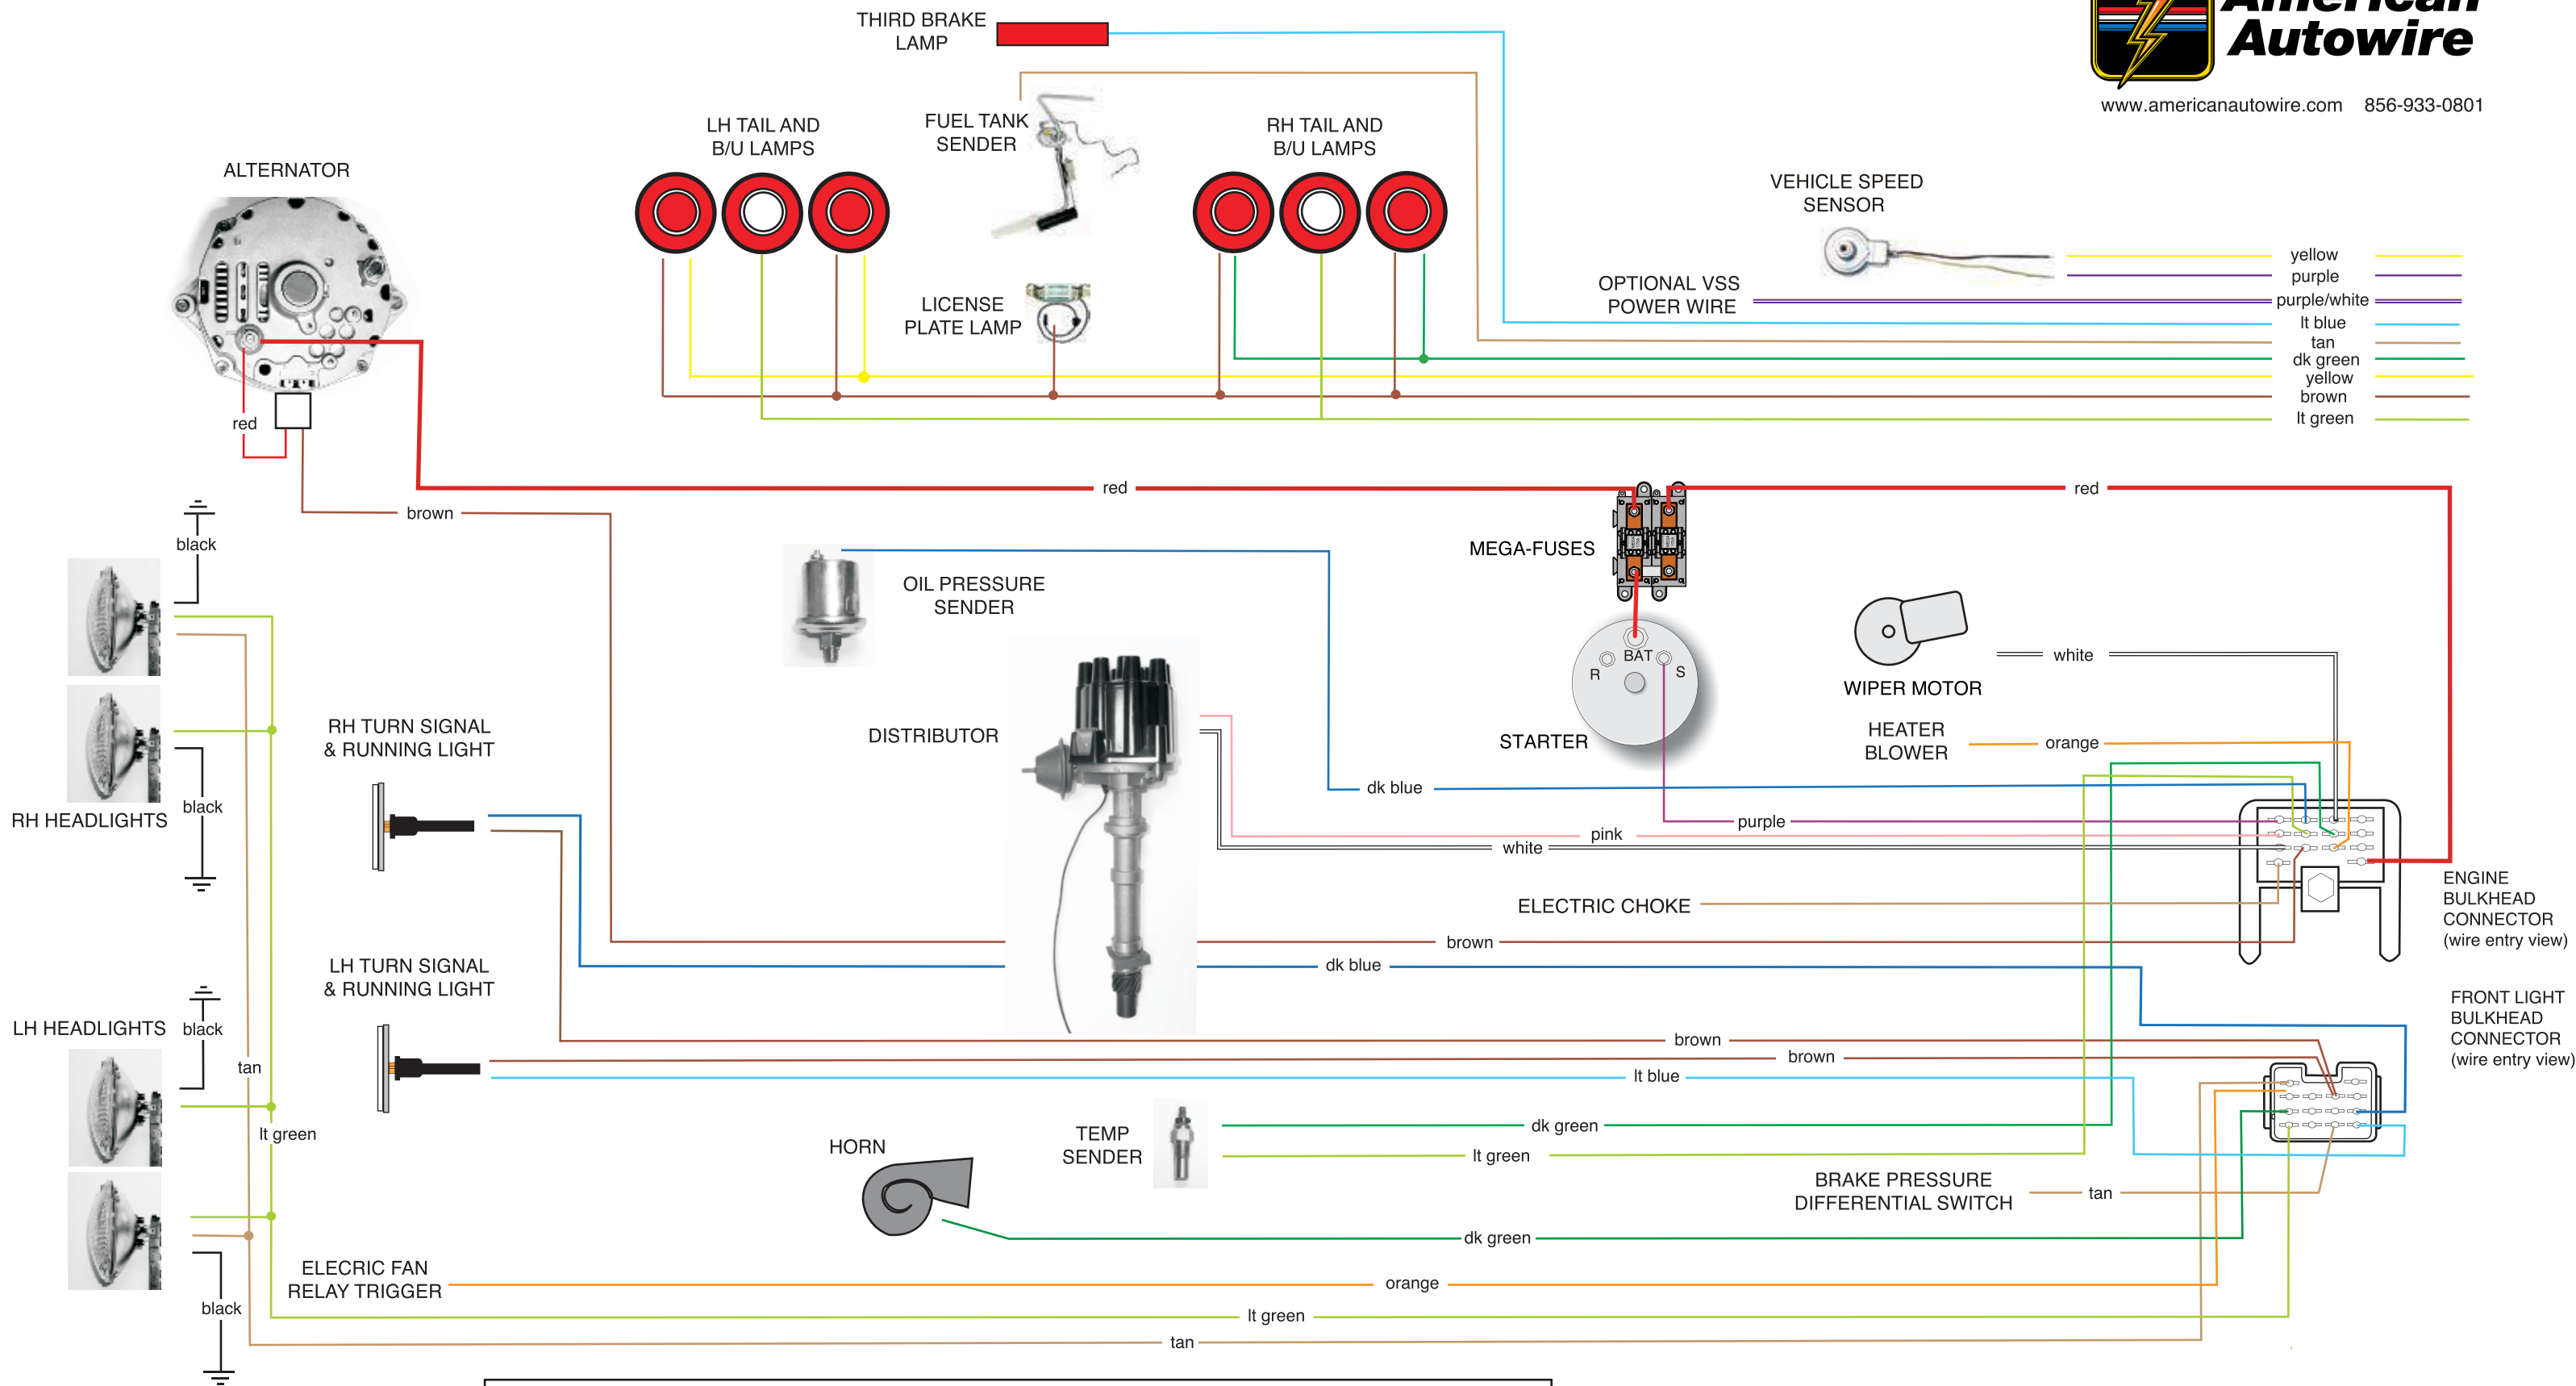


NOTICE: This schematic drawing is for reference only! DO NOT use the schematc to install this wiring kit. Use the instruction sheets that are included in each of the separate sub-kit bags as they include directions for proper terminations, and various specific applications.

510063

© COPYRIGHT 2004 American Autowire / Factory-Fit  
Used with express permission of American Autowire / Factory-Fit  
92972581 instruction sheet rev. 0.0 10/3/2019

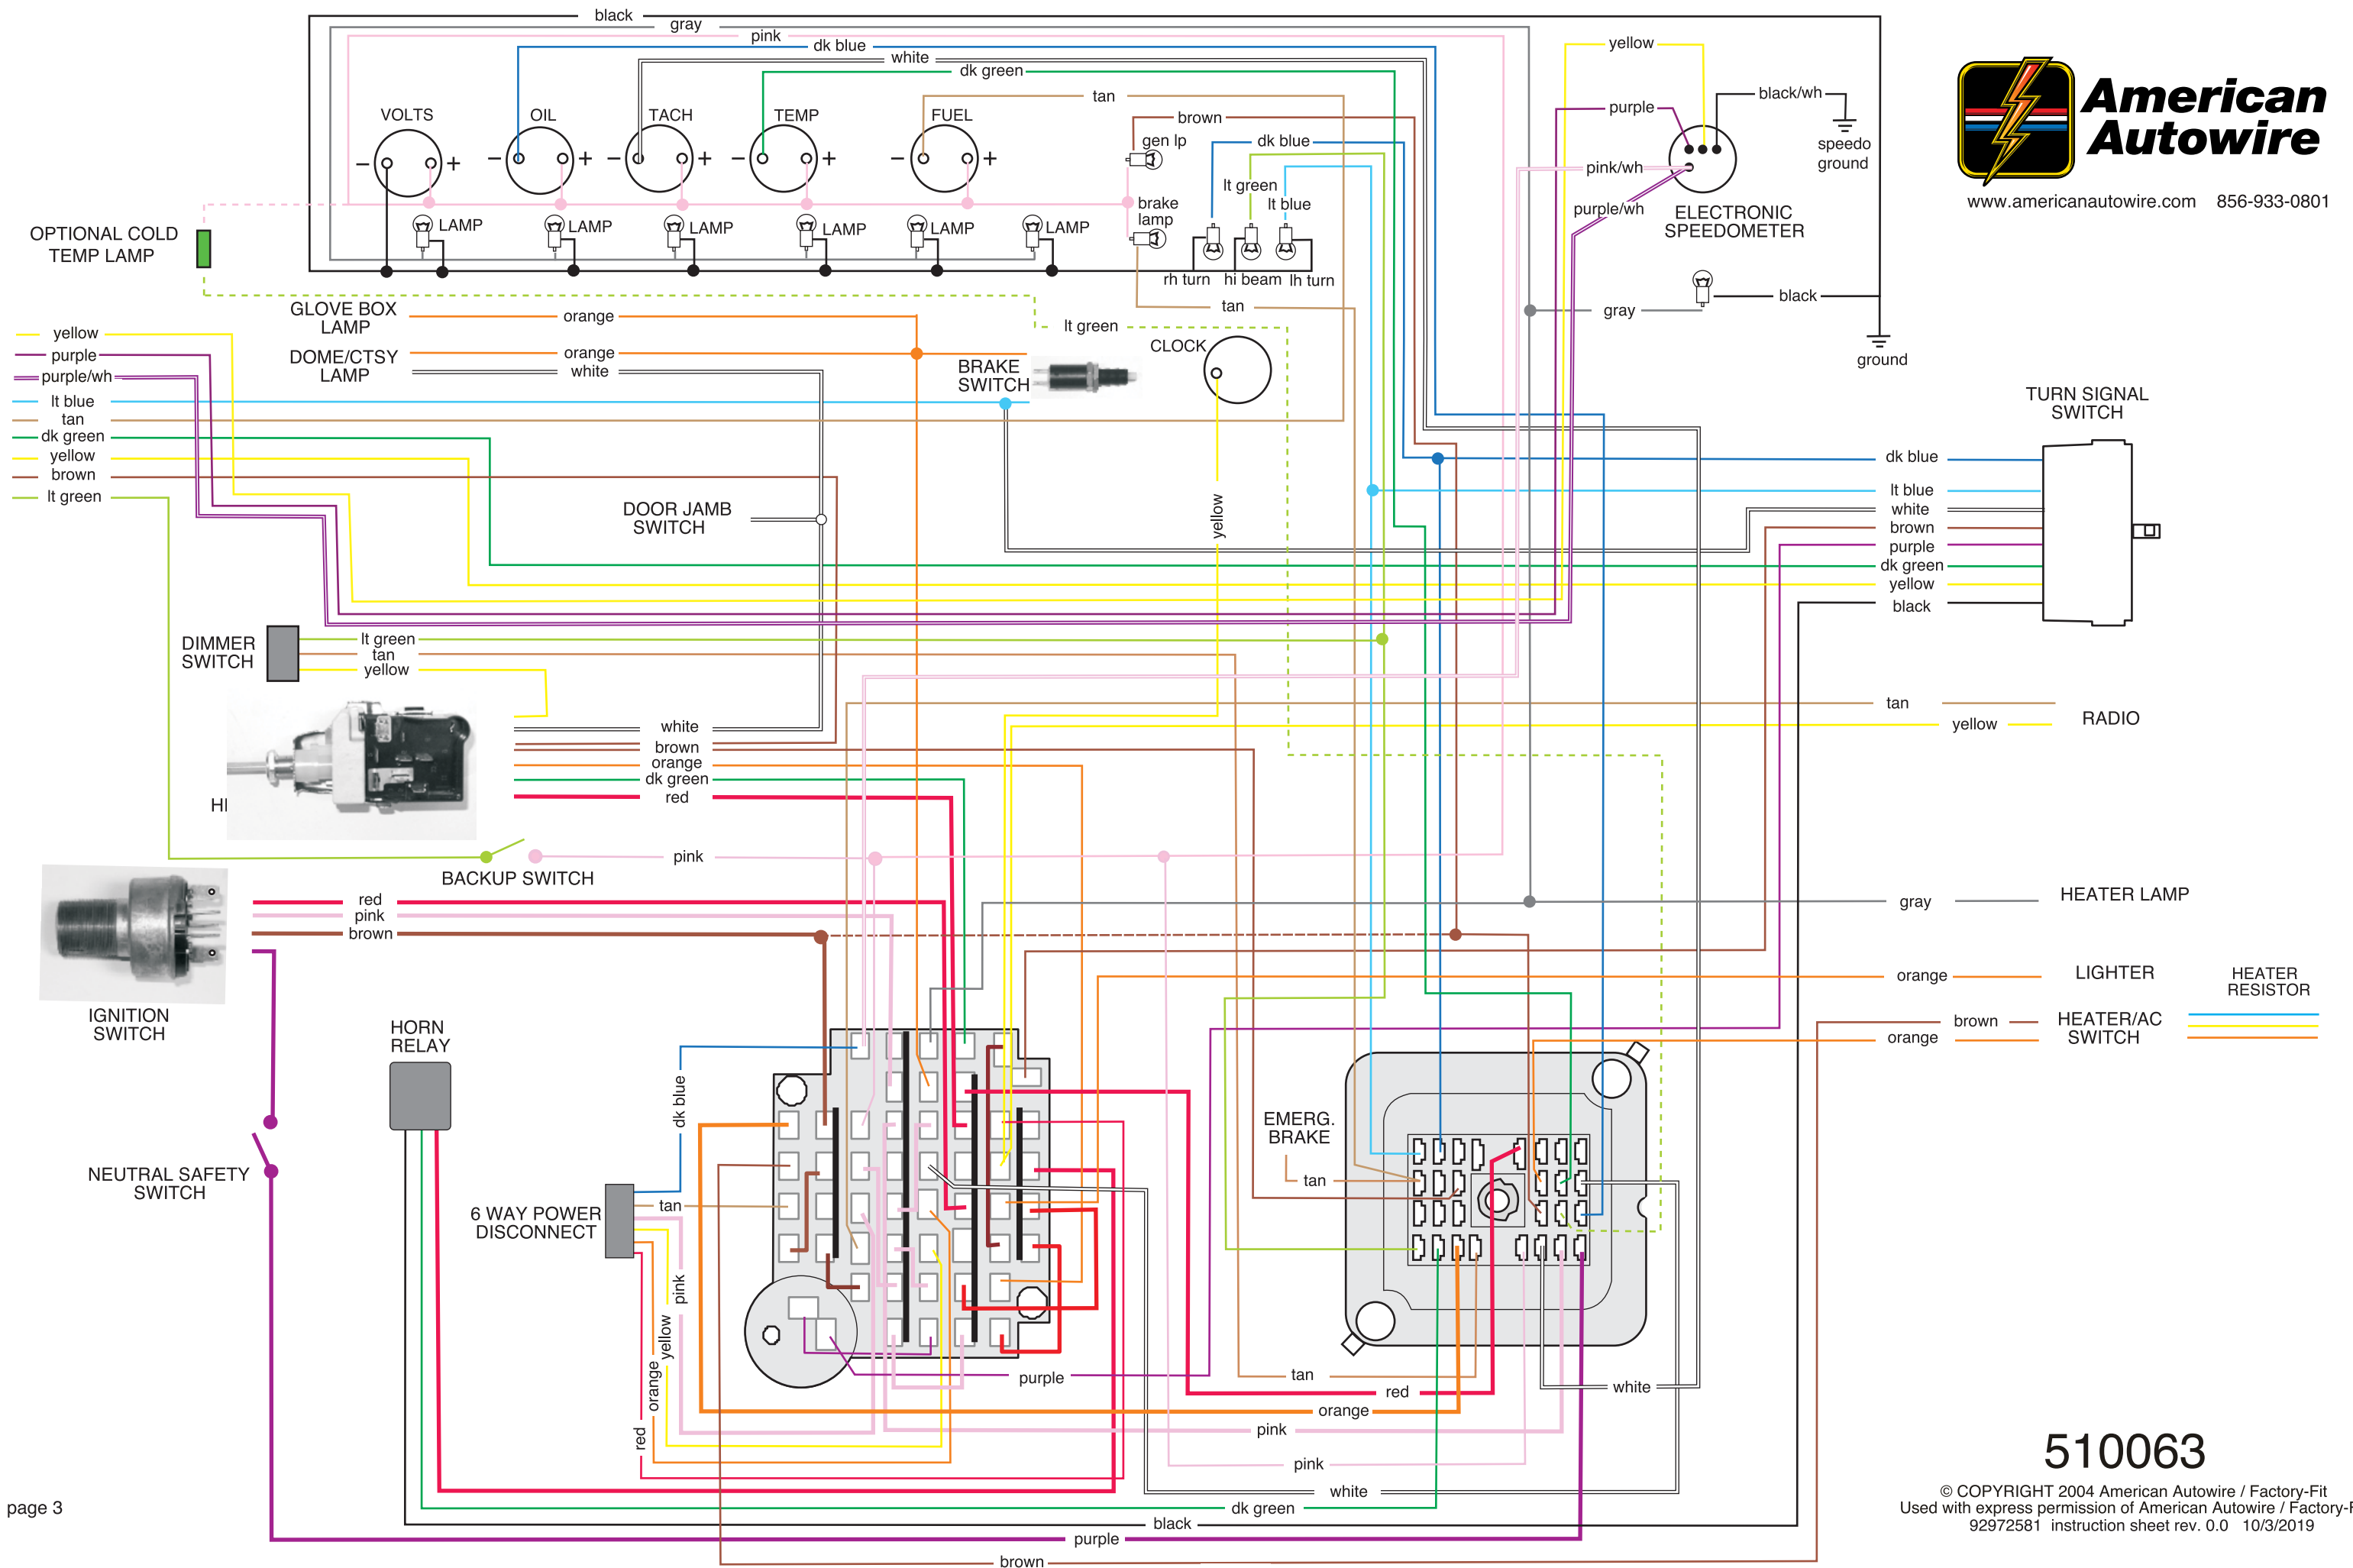

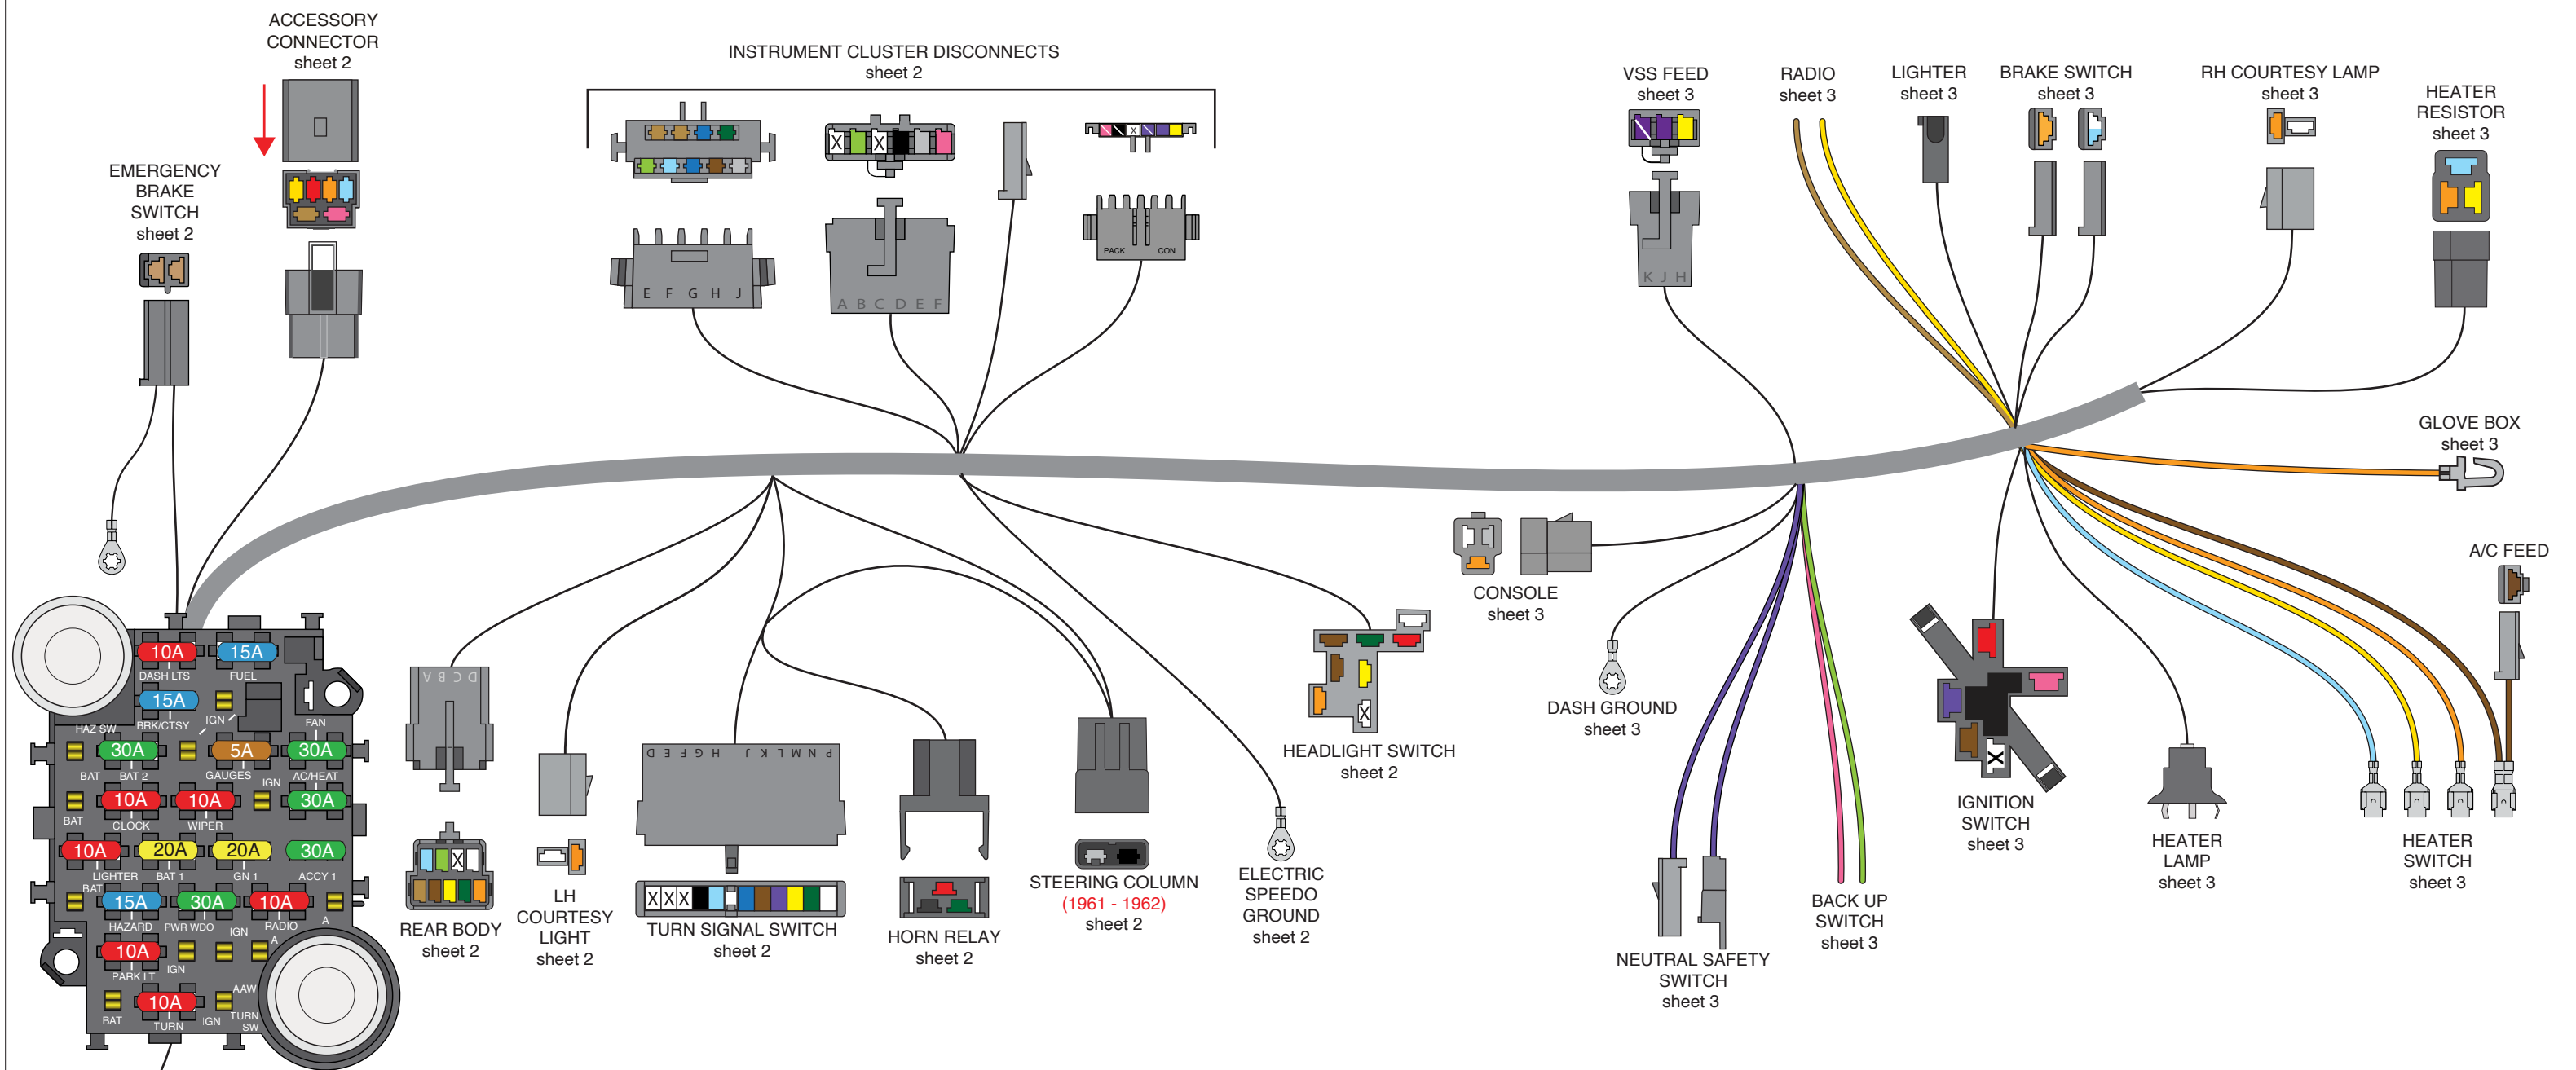

## Dash Kit Installation Instructions

Following these instructions will guarantee a successful installation of your American Autowire fuse panel harness.

1. Study the diagram above to familiarize yourself with the dash harness.
2. Modify your firewall opening and install the fuse box (see "INSTALLING THE FUSE BOX" on sheet 2, and the 92968980 template).
3. Route the dash harness using the factory support straps.
4. Make all connections as shown on the following pages of this dash harness kit.
5. Once this harness is installed, continue to bag 'H', and install the rest of the kit (bags H,J,K,L,M).



**American  
Autowire**


www.americanautowire.com 856-933-0801

1961-64 Impala

bag  
**G**

**DASH KIT  
510530**

92972552 instruction rev 2.0 JDM 05/12/2023

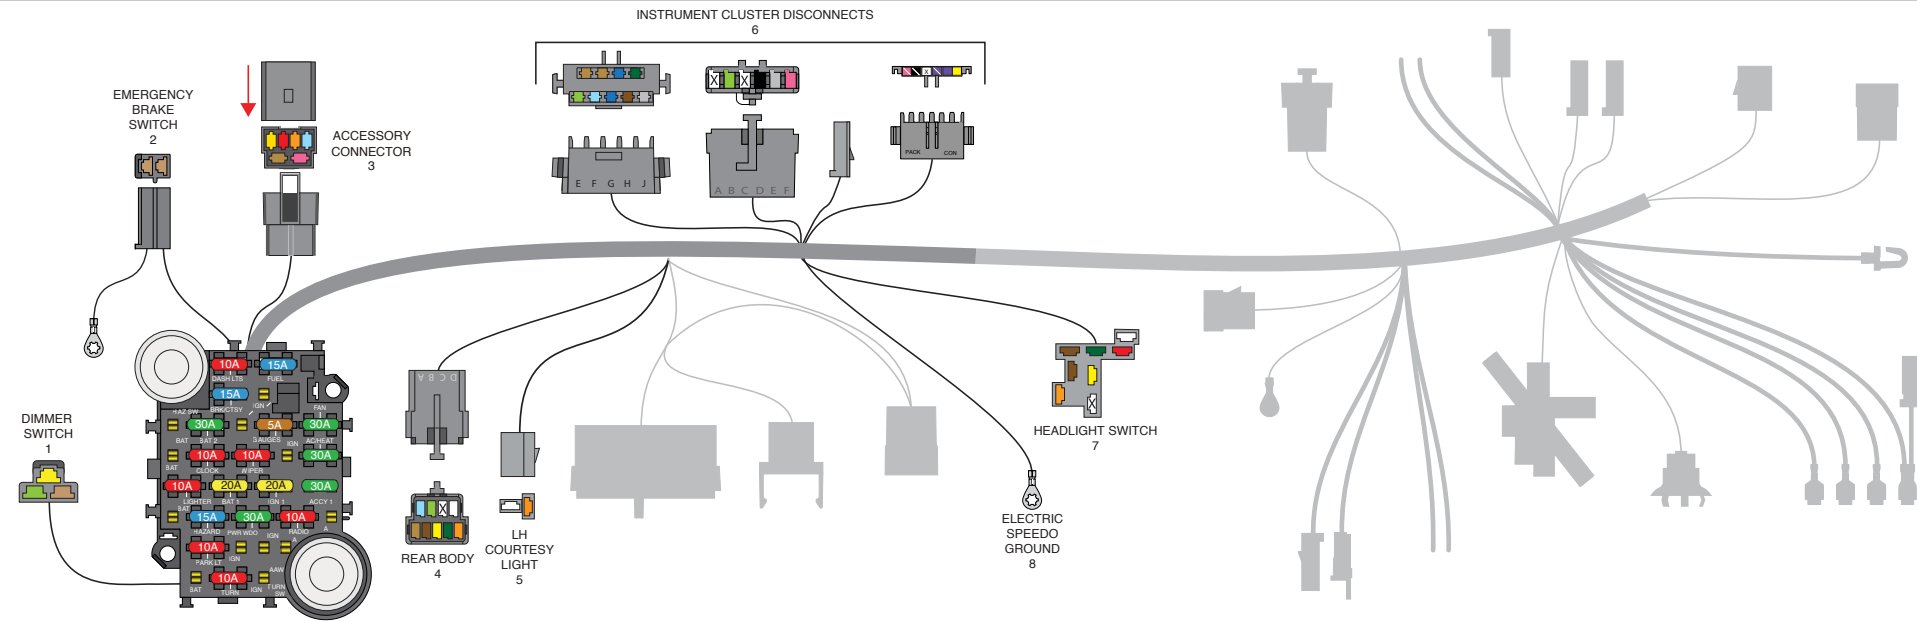

1. DIMMER SWITCH

This connector will mate to the floor mounted dimmer switch.

|             |                                                       |
|-------------|-------------------------------------------------------|
| Yellow      | 12 volt feed into dimmer switch from Headlight Switch |
| Light Green | 12 volt feed out to high beam on Headlight Switch     |
| Tan         | 12 volt feed out to low beam on Headlight Switch      |
2. EMERGENCY BRAKE

|     |                                                                                                                       |
|-----|-----------------------------------------------------------------------------------------------------------------------|
| Tan | Connect to the emergency brake switch. This is the ground circuit to the cluster assembly for the brake warning lamp. |
| Tan | Connect to the emergency brake switch. Connect the wire with the ring terminal to a good chassis ground.              |
3. ACCESSORIES

Use connector J and included terminals S (shown to the right of thissheet) for wires to be added to the in-dash accessory connector pigtail. The mating connector “J” for these circuits will be pre-inserted into the dash pigtail, and terminals can be located in the dash loose piece kit along with the fuse panel mounting hardware.

**NOTE:** Not all installations will require use of these connections. It was added to your kit as a convenient source for 12 volt power.

|           | Fuse   | Rating |                                                                                                               |
|-----------|--------|--------|---------------------------------------------------------------------------------------------------------------|
| Dark Blue | FUEL   | 15 amp | Fused 12 volt IGNITION feed for fuel pump (may also be used to feed power to another ignition circuit)        |
| Orange    | BAT1   | 20 amp | Fused 12 volt BATTERY feed for power seats (may also be used to feed power to another battery circuit)        |
| Red       | BAT2   | 30 amp | Fused 12 volt BATTERY feed for power door locks (may also be used to feed power to another accessory circuit) |
| Pink      | IGN1   | 20 amp | Fused 12 volt IGNITION feed for cruise control (may also be used to feed power to another ignition circuit)   |
| Yellow    | PWRWDO | 30 amp | Fused 12 volt IGNITION feed for power windows (may also be used to feed power to another ignition circuit)    |
| Tan       | ACCY1  | 30 amp | Fused 12 volt ACCESSORY feed (may also be used to feed power to an accessory circuit)                         |
4. REAR BODY

This connector will mate to the connector from the Rear Body harness found in bag M.

|             |                             |
|-------------|-----------------------------|
| Tan         | Fuel tank sender lead       |
| Brown       | Tail lamp feed              |
| Yellow      | LH turn / brake feed        |
| Dark Green  | RH turn / brake feed        |
| Orange      | Dome / courtesy lamp feed   |
| White       | Dome / courtesy lamp ground |
| Light Green | Back up lamp feed           |
| Light Blue  | Third brake light           |
5. LH COURTESY LAMP

Plug this connector into the mating connector from the courtesy lamp kit bag N (500471).

**Note:** If you are working on a 1963 or 1964 vehicle, a loose piece terminal has been provided in this dash kit for you to crimp onto the door jamb switch wire.

|        |                              |
|--------|------------------------------|
| Orange | 12 volt battery feed fo lamp |
| White  | Ground circuit for lamp      |
6. INSTRUMENT CLUSTER DISCONNECTS


These connectors will plug into the gauge disconnect harness from bag H (510531). Wire identifications are described on the instruction sheets from bag H (510531).
7. HEADLIGHT SWITCH

**NOTE:** We suggest notching out a new key slot on your dash cluster at about 10 o'clock (as seen to the right) to help clear the headlight switch connection behind the dash


|          |                                |                                                                                               |
|----------|--------------------------------|-----------------------------------------------------------------------------------------------|
| Red      | 12 volt feed to switch         | 'BAT' location on headlight switch                                                            |
| Orange   | 12 volt feed 'in' to park/tail | 'PARK / TAIL FEED IN' location on headlight switch (commonly found on GM headlight switches). |
| Brown    | Park lamp feed 'out'           | 'PARK LAMP OUT' location on headlight switch.                                                 |
| Yellow   | Dimmer feed                    | 'DIMMER FEED' location on headlight switch.                                                   |
| Dk Green | Instrument lamp feed'          | INSTRUMENT LAMP' location on headlight switch.                                                |
| White    | Dome / courtesy ground         | 'GROUND' location on headlight switch.                                                        |
8. ELECTRIC SPEEDO GROUND

Connect to a good chassis ground. This ground must be at a different location than the DASH GROUND.

INSTALLING THE FUSE BOX

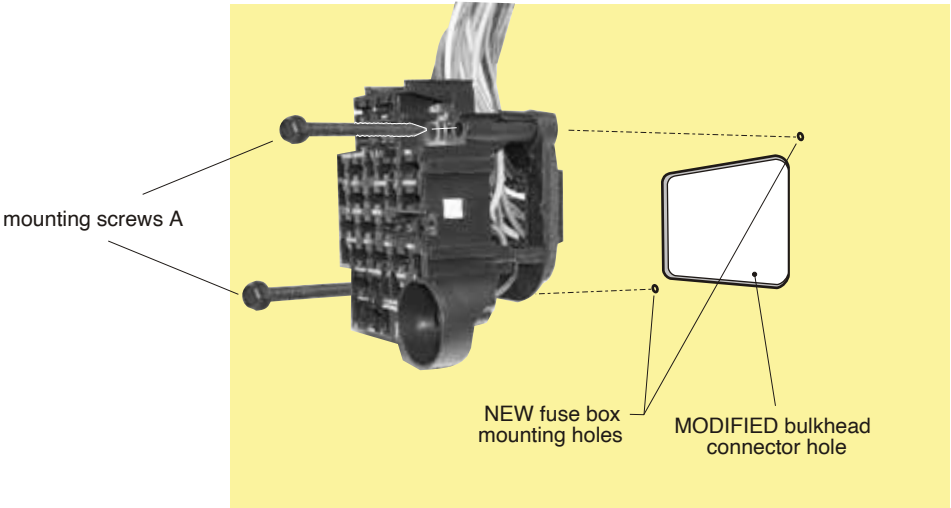

1. Locate the stock OEM bulkhead hole in the driver side of the firewall.
- NOTE:** You will need to modify the opening in the firewall by making it larger. See firewall template 92968980 to help with this operation.
2. Mount the fuse box with the flasher can in the bottom right corner, as shown above.
3. Using the two mounting screws A, attached the fuse panel to the firewall.




Example showing new notch for headlight switch:




American Autowire

www.americanautowire.com 856-933-0801

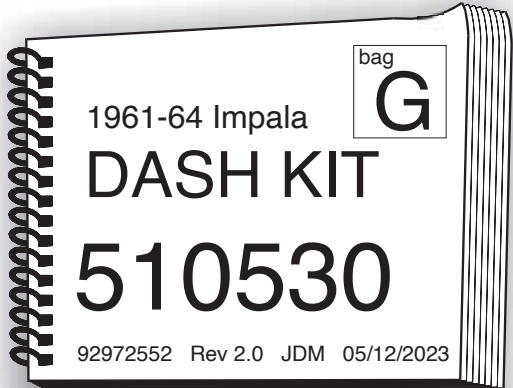



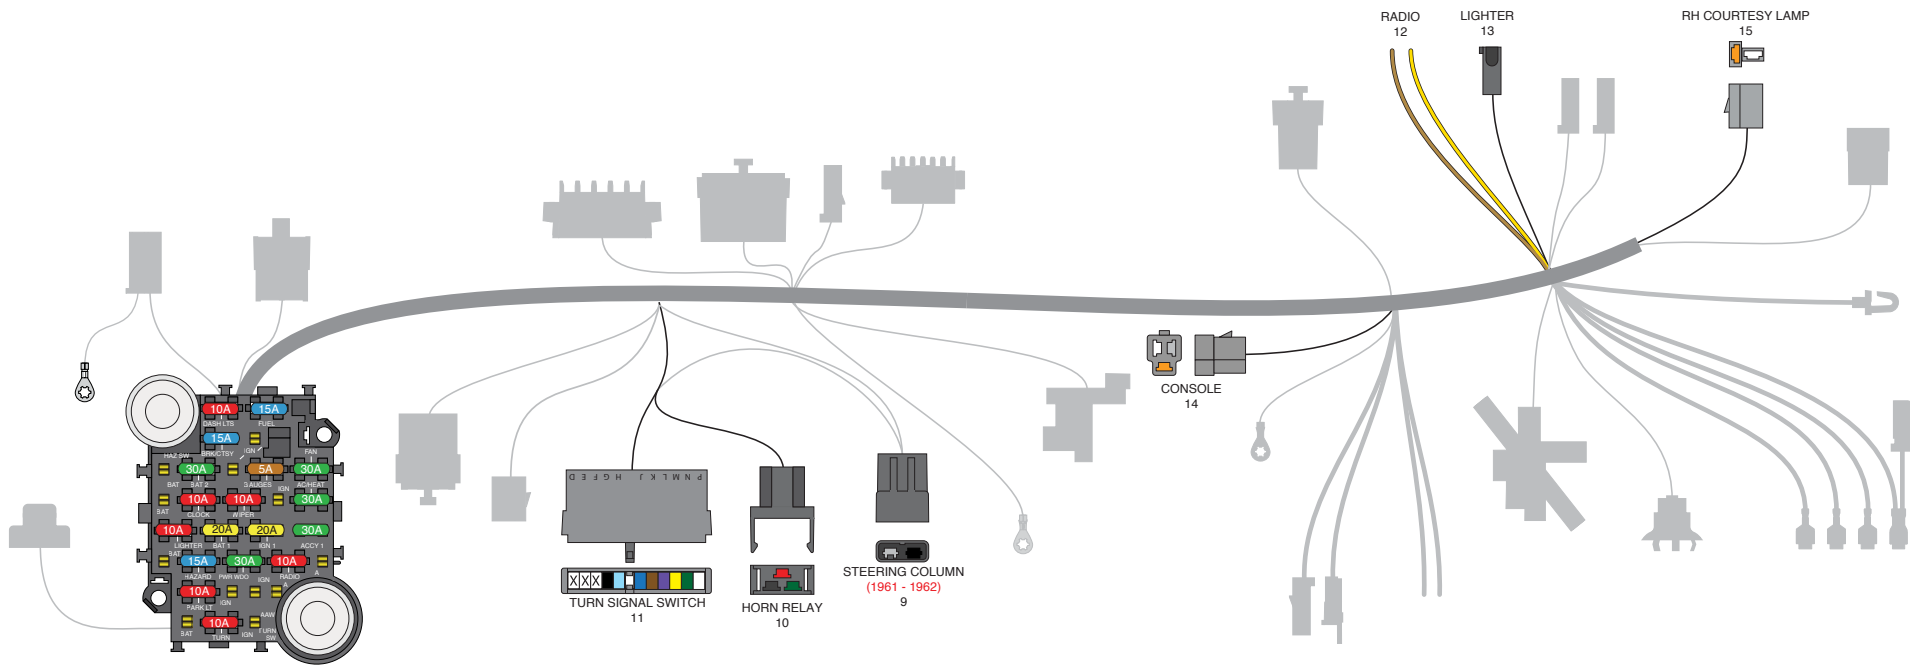

9. STEERING COLUMN CONNECTION (1961-62 only)

Gray

Transmission selector lamp wire for column automatic cars.

Black

Horn relay ground wire if using stock 1961-62 column.
10. HORN RELAY

Plug the horn relay (found in the fuse bag) into this connector.

Red

12 volt battery

Black

Relay ground circuit (to steering column)

Dk Green

Triggered 12 volts to horn

11. TURN SIGNAL SWITCH

mentioned

This harness is set up for a 1969-74 GM or Ididit Steering column utilizing a 3 7/8" turn signal switch connector. If you are using your car's original column, we have provided you with the proper connector (L) and terminals (M) for you to cut your existing connector off of your 1963-64 steering column and adapt it into our new dash harness. For a 1961-62 car, the turn signal switch is a mechanical unit mounted on top of the column up under the dash. There was no electrical wiring coming from the switch as your original dash harness contained the connector that plugged directly into the switch. A new connector pigtail is included to build an adapter that will allow for the use of the original 1961-62 mechanical turn signal switch. The adapter will use the same connector and terminals as the 1963-64 configuration

above to connect to the under dash harness. If using a 1975 or later GM steering column or an after-market steering column using a GM turn signal switch with the 4-1/4" GM turn signal connector, it will be necessary to replace the 4 1/4" turn signal switch connector with the included 3 7/8" connector L, matching wires by color.

White

12 volt feed from brake switch

Dark Green

RH tail lamp

Yellow

LH tail lamp

Purple

12 volt feed from turn flasher

Brown

12 volt feed from hazard flasher

Dark Blue

RH front park lamp

Light Blue

LH front park lamp

Black

Horn relay ground wire to horn switch (1963-64)

12. RADIO

Tan

Radio accessory feed.

Yellow

Radio 12 volt clock lead (battery feed)

13. LIGHTER

Orange

Connect to lighter. (battery feed)

14. CONSOLE CONNECTION

These wires are for use on a console vehicle.

Orange

12 volt battery feed

Grey

Console illumination lamp

White

Courtesy ground

15. RH COURTESY LAMP

Plug this connector into the mating connector from the courtesy lamp kit bag N, 500471.

Special Note: If you are working on a 1963 or 1964 vehicle, a loose piece terminal has been provided in this dash kit for you to crimp onto the door jamb switch wire.

Orange

12 volt battery feed fo lamp

White

Ground circuit for lamp

DIAGRAM 'A' - 1961-62 Steering Columns


DIAGRAM 'B' - 1963 Steering Columns

DIAGRAM 'C' - 1964 Steering Columns


**American  
Autowire**

www.americanautowire.com 856-933-0801


sheet 3

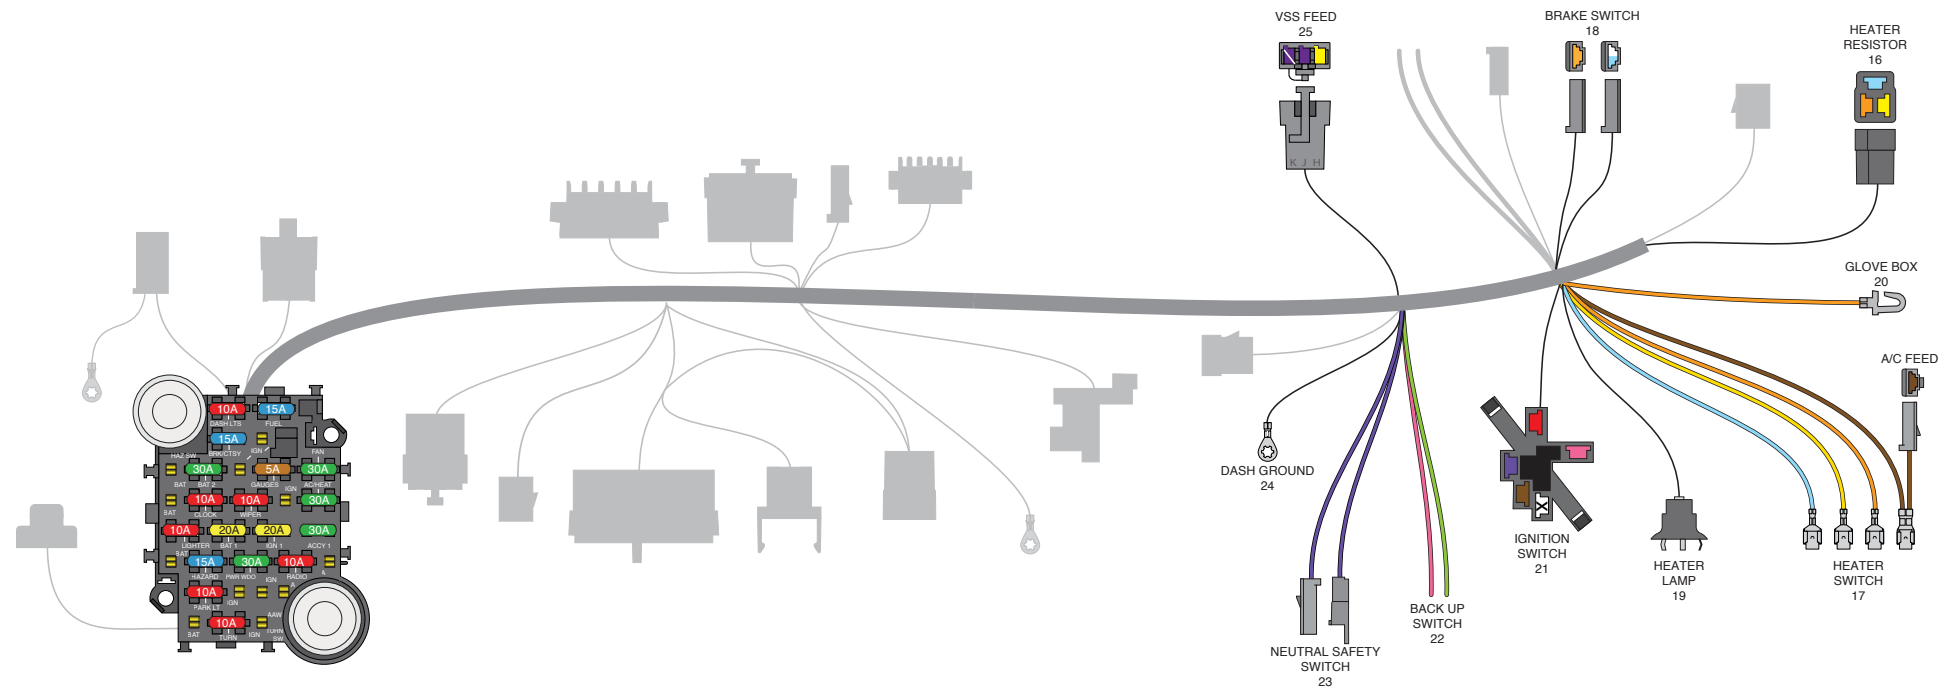

- |                           |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 16. HEATER RESISTOR       | Plug this connector into the factory heater resistor located on top of the heater box of a non A/C car.                                                                                                                                                                                                                                                                                                                                                     |
| 17. HEATER SWITCH         | Plug this connector into the factory heater switch. See Diagrams D and E for connector indexing.<br>Brown 12 volt accessory feed to heater / ac switch (if using aftermarket a/c, use the short brown wire as the accessory feed wire to a/c harness.).<br>Yellow Heater resistor<br>Lt Blue Heater resistor<br>Orange Heater resistor                                                                                                                      |
| 18. BRAKE SWITCH          | Plug these connectors onto the factory brake switch.<br>Orange 12 volt feed 'in' to switch.<br>White 12 volt feed 'out' to steering column switch.<br>Lt Blue 12 volt feed 'out' to third brake light.                                                                                                                                                                                                                                                      |
| 19. HEATER LAMP           | Gray Heater lamp                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| 20. GLOVE BOX LIGHT       | Orange Connect to the original factory glove box lamp switch. If not using, just unplug and tape back.                                                                                                                                                                                                                                                                                                                                                      |
| 21. IGNITION SWITCH       | Red 12 volt battery feed<br>Pink 12 volt ignition feed<br>Brown 12 volt accessory feed<br>Purple 12 volt starter feed                                                                                                                                                                                                                                                                                                                                       |
| 22. BACK UP SWITCH        | Connect these wires to the back up switch on the column or console shifter.<br>Pink 12 volt ignition feed 'in' to back up lamp switch<br>Lt Green 12 volt feed 'out' to back up lamps                                                                                                                                                                                                                                                                       |
| 23. NEUTRAL SAFETY SWITCH | If using a column mounted automatic transmission, plug these wires into the NSS jumper harness in Diagram F at the right, then plug onto the neutral safety switch on the column. If using with console mounted automatic transmission, plug these wire into the NSS wires on the console harness. If using a manual transmission, plug these wires together.<br>Purple 12 volt feed 'in' to neutral safety switch.<br>Purple 12 volt feed 'out' to starter |
| 24. DASH GROUND           | Black Connect to a good chassis ground. This must be at a different location than the ELECTRIC SPEEDO GROUND.                                                                                                                                                                                                                                                                                                                                               |
| 25. VSS EXTENSION         | These wires are for use with an aftermarket electric speedometer only. The VSS Lead Wires, 510730, bag V, will plug In here. Refer to that instruction sheet for wire functions and additional directions                                                                                                                                                                                                                                                   |

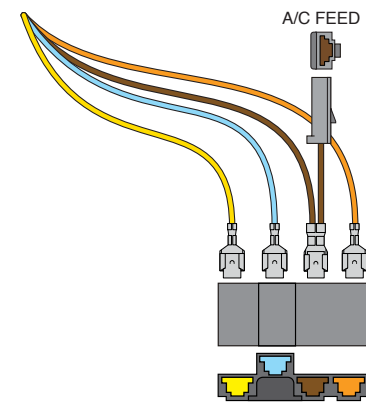


**DIAGRAM "D"**  
1961-62 Original heater switch connector indexing. Viewed looking into open end of the connector with the wires going away from you.

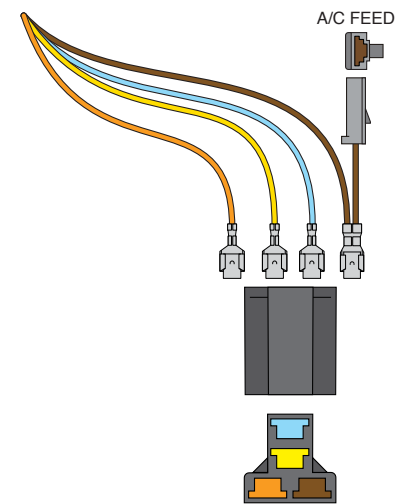

**DIAGRAM "E"**  
1963-64 Original heater switch connector indexing. Viewed looking into open end of the connector with the wires going away from you.

### DIAGRAM "F"

Automatic Transmission Neutral Safety Switch Jumper Harness for a car with a column mounted automatic transmission. Plug onto #23 below left

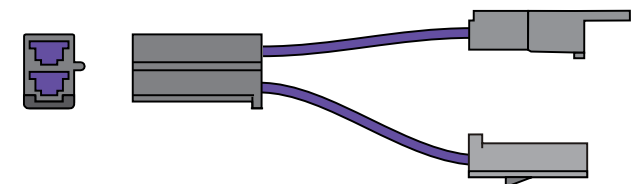

**American  
Autowire**

www.americanautowire.com 856-933-0801

1961-64 Impala

DASH KIT

510530

92972552 Rev 2.0 JDM 05/12/2023


bag  
**G**

## Template for firewall modification for some Classic Update Kits

Classic Update Series kits are based on the 1968 and later GM bulkhead assembly which has a different mounting footprint than earlier bulkhead connectors. Therefore, it will be necessary to modify the firewall of the 1961-1964 Chevy Fullsize cars, the 1967-1968 Chevy and GMC trucks, and the 1969-1972 Chevy and GMC trucks to accept the 1968 and later design bulkhead. This enclosed template must be used for this purpose.

The white area should be cut out with a razor knife to define the area of material that needs to be removed from the existing bulkhead area. We suggest that this template be glued to stiff cardboard or a thin piece of plastic or be applied directly to the cleaned firewall on the inside of the car then proceed as follows:

1. Position the template against the firewall aligning the top and right hand edges with the top and right hand edges of the existing bulkhead hole.
2. Trace the opening area onto the existing bulkhead and cut out the area.
3. Drill the two .125 holes for the new bulkhead mounting screws.
4. Mount the fuse box assembly from the passenger compartment side and check the fit into the new bulkhead hole. It may be necessary to do some fine tuning on the hole size for an exact fit.
5. Screw in the new fuse box retaining screws to complete securing the new fuse box assembly to the firewall

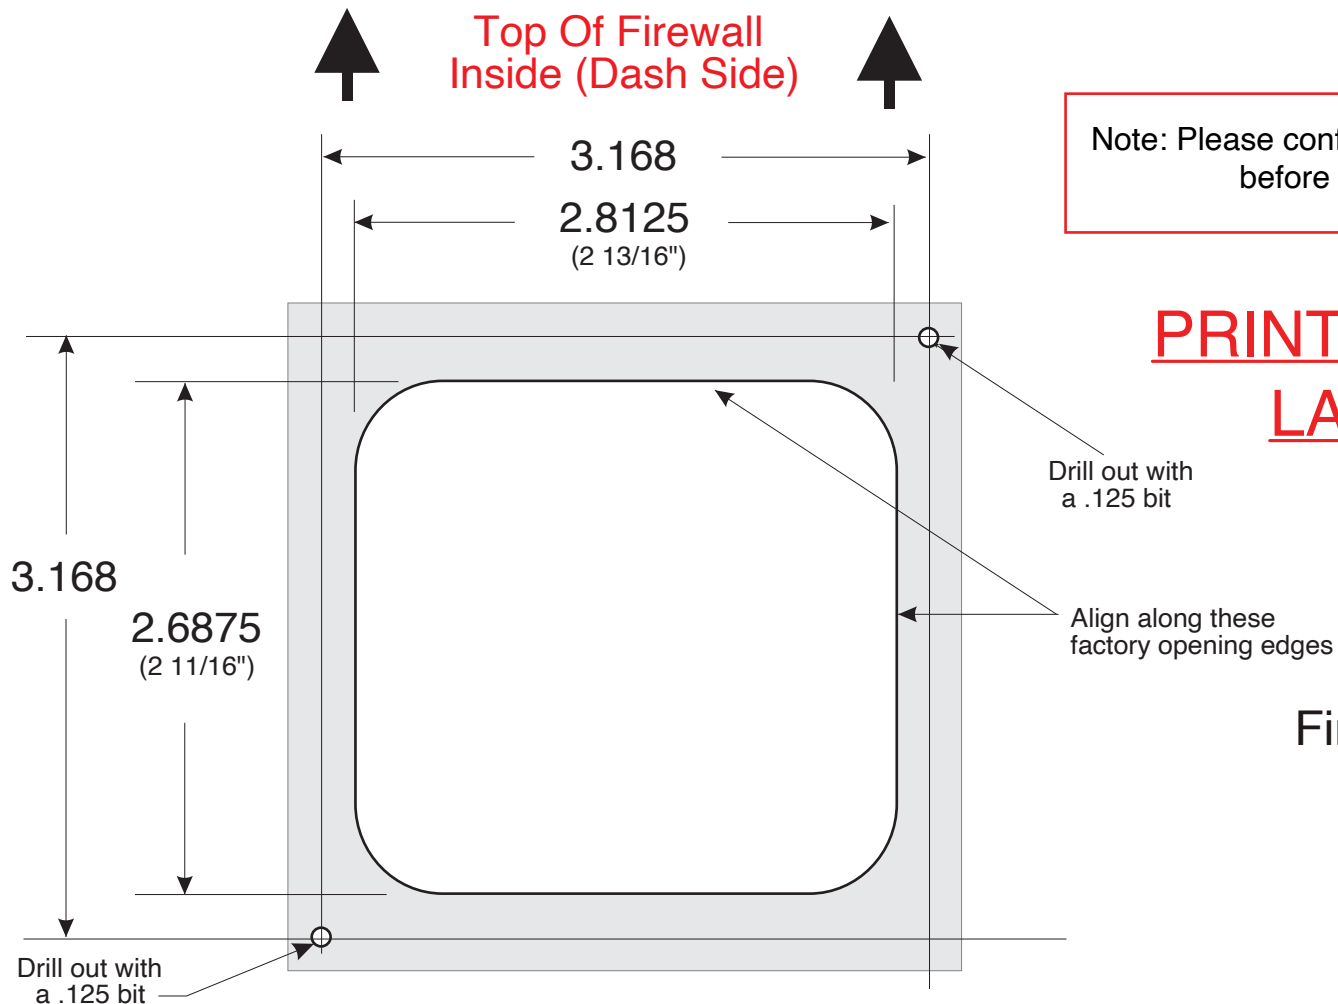

Note: Please confirm all measurements on this template before cutting or drilling any holes.

**PRINT ON ADHESIVE LABEL SHEET**



**American  
Autowire**

www.americanautowire.com 856-933-0801

**Firewall Modification Template**

**92968980**

92968980 instructions Rev 4.0 9/18/2024

# Classic Update Series

\*\*\* These are special instructions for connecting your wiring system to a stock instrument cluster. \*\*\*  
(Note: This kit does not support the use of a stock ammeter.)

REFER TO THE ATTACHED DIAGRAMS FOR YOUR APPLICATION YEAR. USE THE ENCLOSED PARTS AND INFORMATION BELOW FOR WIRE TERMINATION AND GAUGE CONNECTION.

NOTE: If you are using aftermarket gauges, follow the instructions from the after market gauge package included in this kit (92965220).

## CONNECTOR A

|          |                                |                                                                                                                                                                                                  |
|----------|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TAN      | Brake Warning Lamp             | Install components shown on the following sheets, and plug into the brake light hole in cluster.                                                                                                 |
| DK BLUE  | Right Turn Indicator           | Install components shown on the following sheets, and plug into the right turn indicator hole in the cluster.                                                                                    |
| LT BLUE  | Left Turn Indicator            | Install components shown on the following sheets, and plug into the left turn indicator hole in the cluster.                                                                                     |
| LT GREEN | Hi Beam Indicator Lamp         | Install components shown on the following sheets, and plug into the high beam hole in cluster.                                                                                                   |
| TAN      | Fuel Gauge                     | Install components shown on the following sheets, and plug into the fuel gauge.                                                                                                                  |
| DK BLUE  | Oil Gauge / Lamp               | Install components shown on the following sheets, and plug into the oil gauge or lamp.                                                                                                           |
| DK GREEN | Temp Gauge / Lamp              | Install components shown on the following sheets, and plug into the temp gauge or lamp.                                                                                                          |
| WHITE    | Tach (loose wire)              | This wire is used on factory gauge applications. Install components shown on the following sheets, and plug into the tachometer.                                                                 |
| BROWN    | Generator Lamp<br>(loose wire) | This wire is used on warning lamp applications. This wire is stamped "ALT-IGN". Install components shown on the following sheets, and plug into the generator (alternator) lamp hole in cluster. |


## CONNECTOR B

|          |                                |                                                                                                                          |
|----------|--------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| PINK     | 12V ignition                   | Install components shown on the following sheets, and connect to gauges or warning lights requiring a 12V ignition feed. |
| LT GREEN | Temp Cold Lamp<br>(loose wire) | Install components shown on the following sheets, and plug into the temp cold warning lamp. (Used on 62-64 models only). |
| GREY     | Instrument Lamps               | Install components shown on the following sheets, and plug into the instrument lamps.                                    |
| BLACK    | Ground                         | Connect to the back of the instrument cluster housing.                                                                   |

## CONNECTOR C

This connector is used when using an aftermarket electronic speedometer. Follow the manufacturer's instructions when installing these wires. **The purple and yellow wires must remain twisted together!**

|              |               |                                     |
|--------------|---------------|-------------------------------------|
| YELLOW       | Speedo Ground | Connect to VSS "-." on speedometer. |
| PURPLE       | Speedo Signal | Connect to VSS input on speedometer |
| PURPLE/WHITE | VSS power     | Connect. to VSS requiring a power   |
| BLACK/WHITE  | Speedo Ground | Connect to a unique chassis ground  |
| PINK/White   | Speedo power  | Connect to speedometer power        |

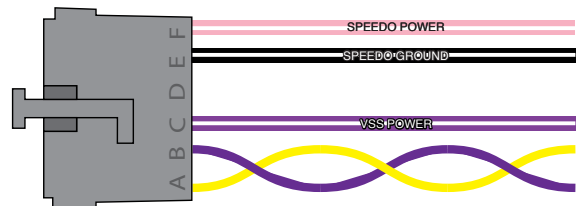

## CLOCK EXTENSION


This wire assembly will plug into your factory dash mounted clock.

|        |                         |                                                                                          |
|--------|-------------------------|------------------------------------------------------------------------------------------|
| YELLOW | Clock 12V battery power | Connect this wire onto the power stud on the back of your clock and to the Dash harness. |
|--------|-------------------------|------------------------------------------------------------------------------------------|





**American  
Autowire**

www.americanautowire.com 856-933-0801

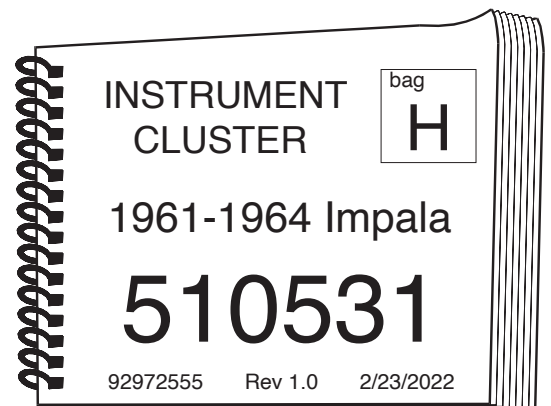






## How to install lamp sockets and lamp socket terminals.

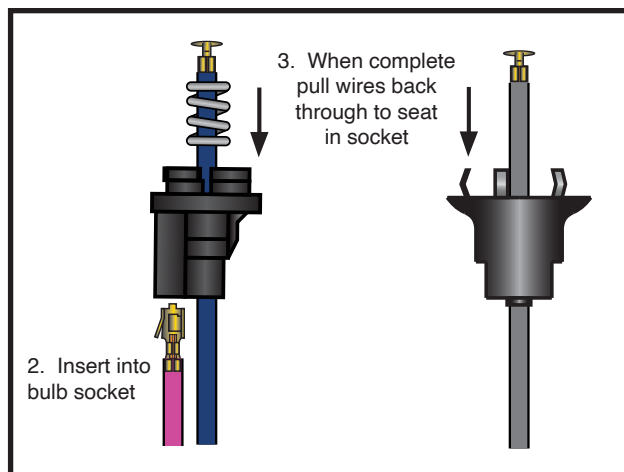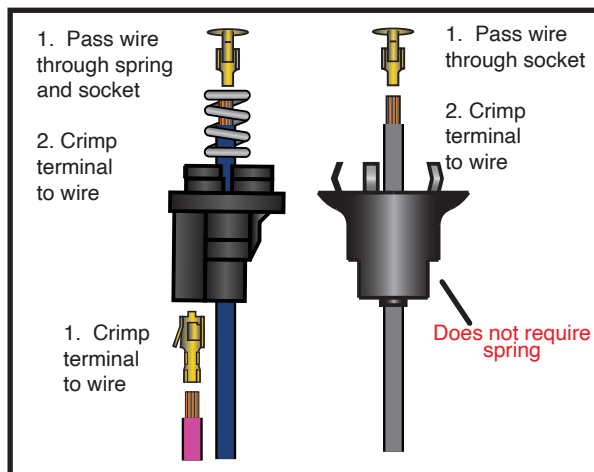

## How to use the splice clip to join multiple wires.

Below is just an **EXAMPLE** of how to use the splice clip and shrink tubing; see your specific application on the following pages for actual splice information.

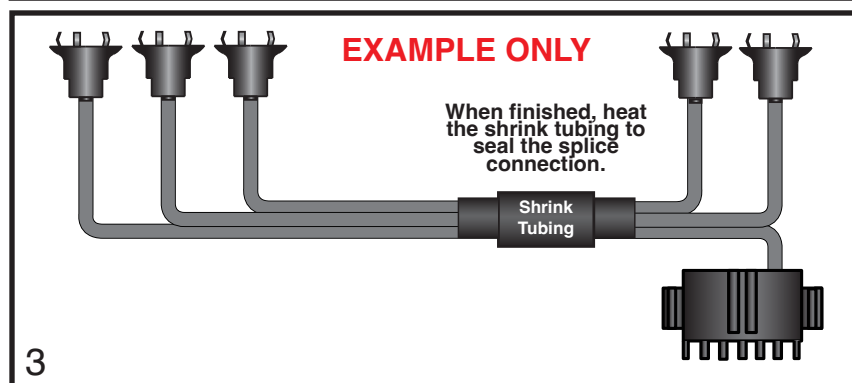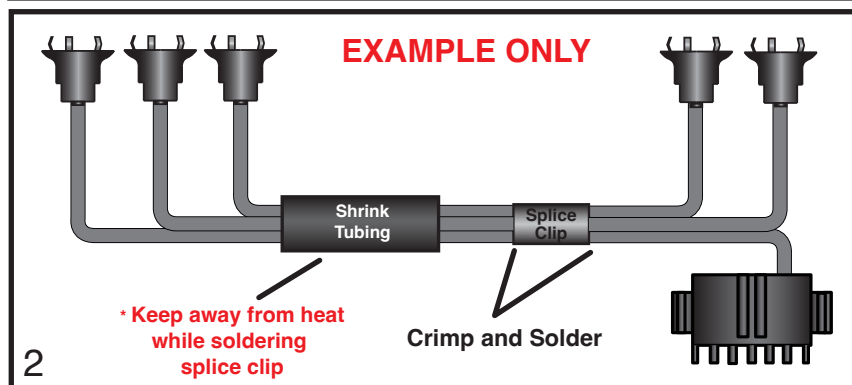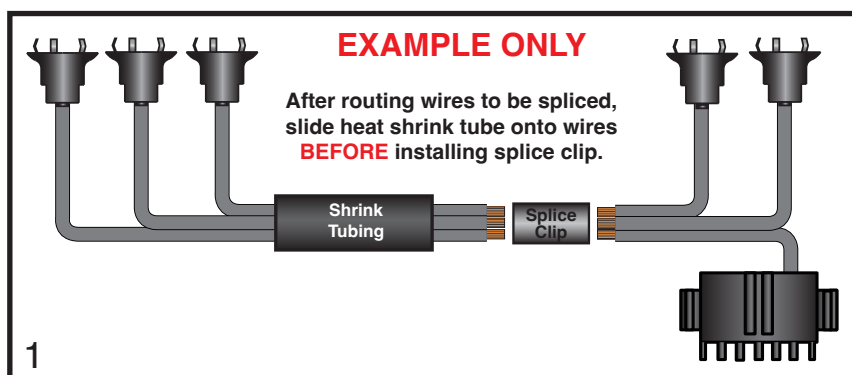


**American  
Autowire**

www.americanautowire.com 856-933-0801

510531

92972555  
Rev 1.0  
2/23/2022

# 1961 Impala Cluster

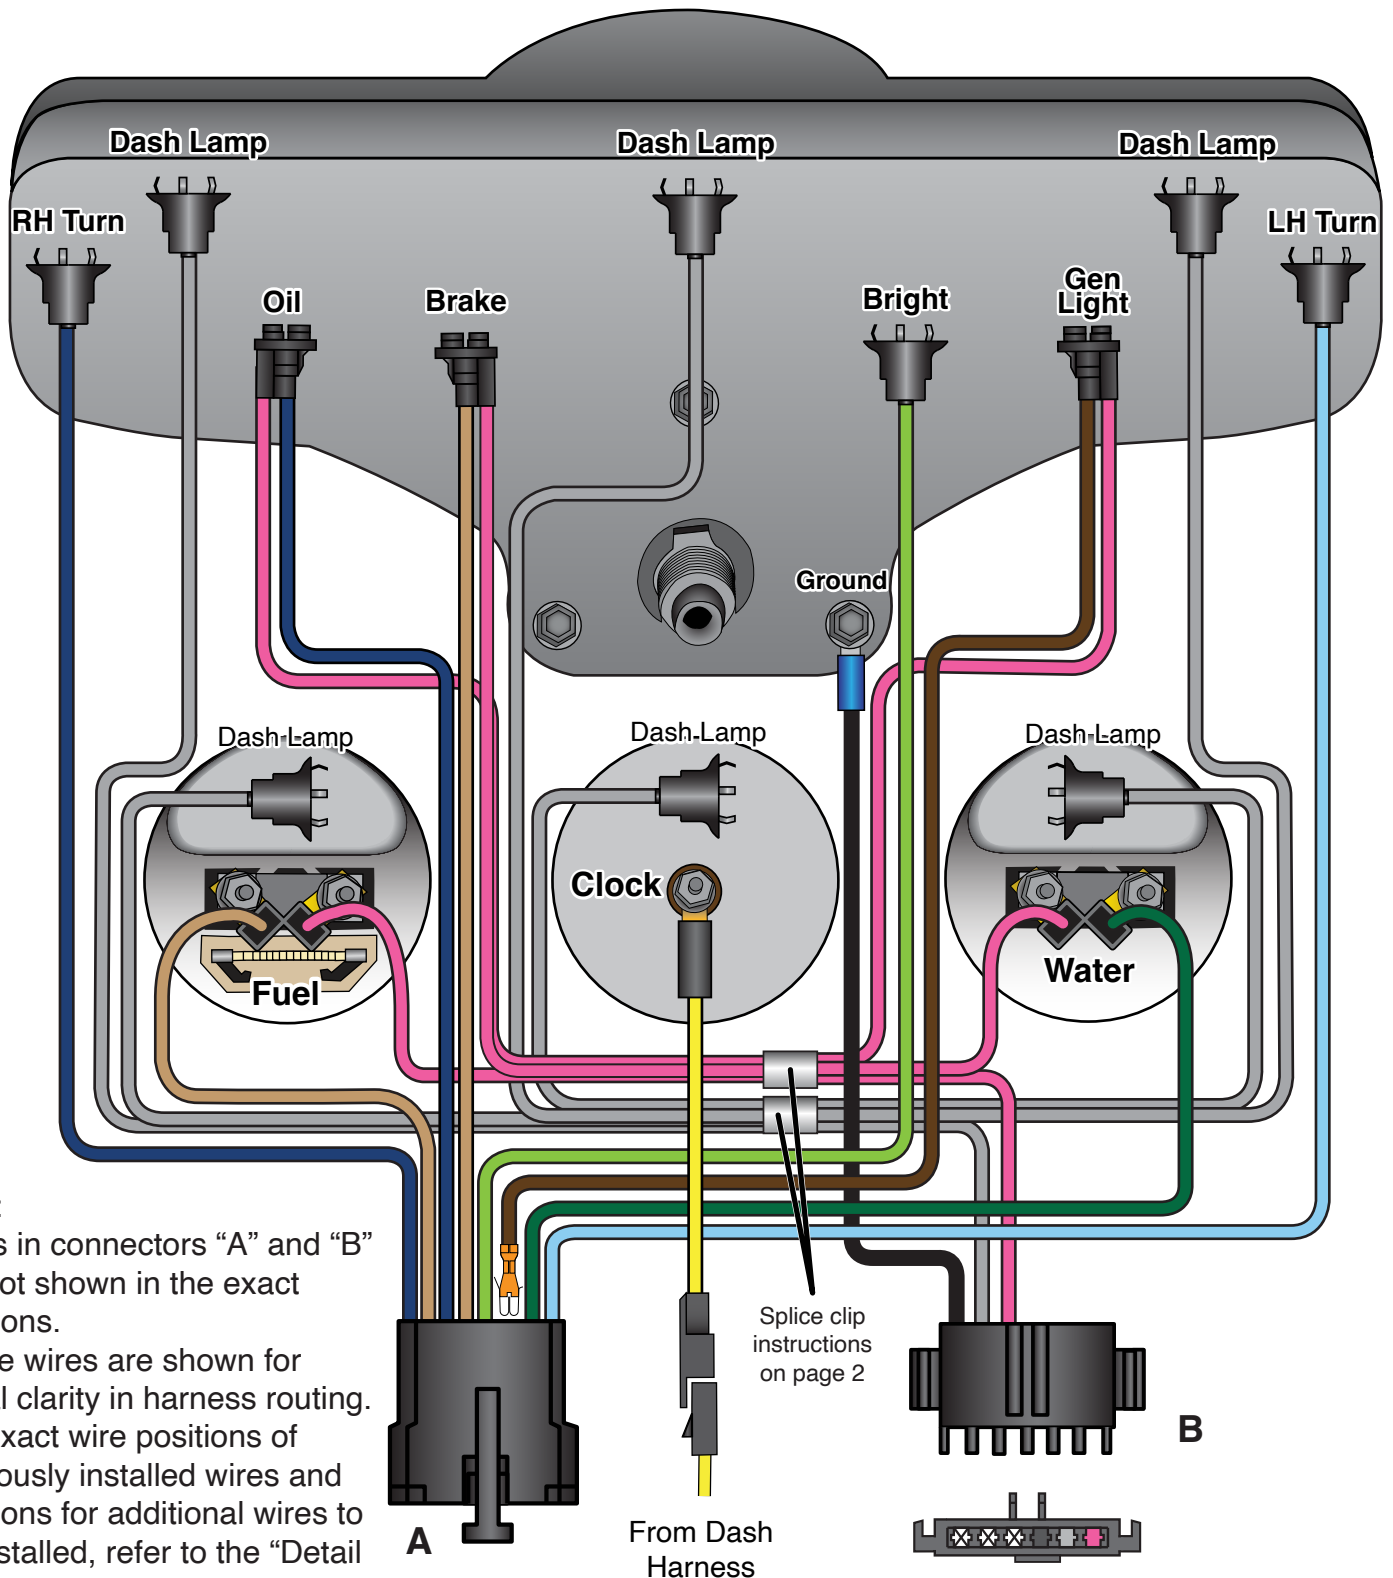

Note:  
Wires in connectors "A" and "B"  
are not shown in the exact  
positions.  
These wires are shown for  
visual clarity in harness routing.  
For exact wire positions of  
previously installed wires and  
positions for additional wires to  
be installed, refer to the "Detail  
View".

Splice clip  
instructions  
on page 2

From Dash  
Harness

Detail View

Tach wire,  
if used

Detail View




**American  
Autowire**

www.americanautowire.com 856-933-0801

510531

92972555  
Rev 1.0  
2/23/2022

# 1962 Impala Cluster

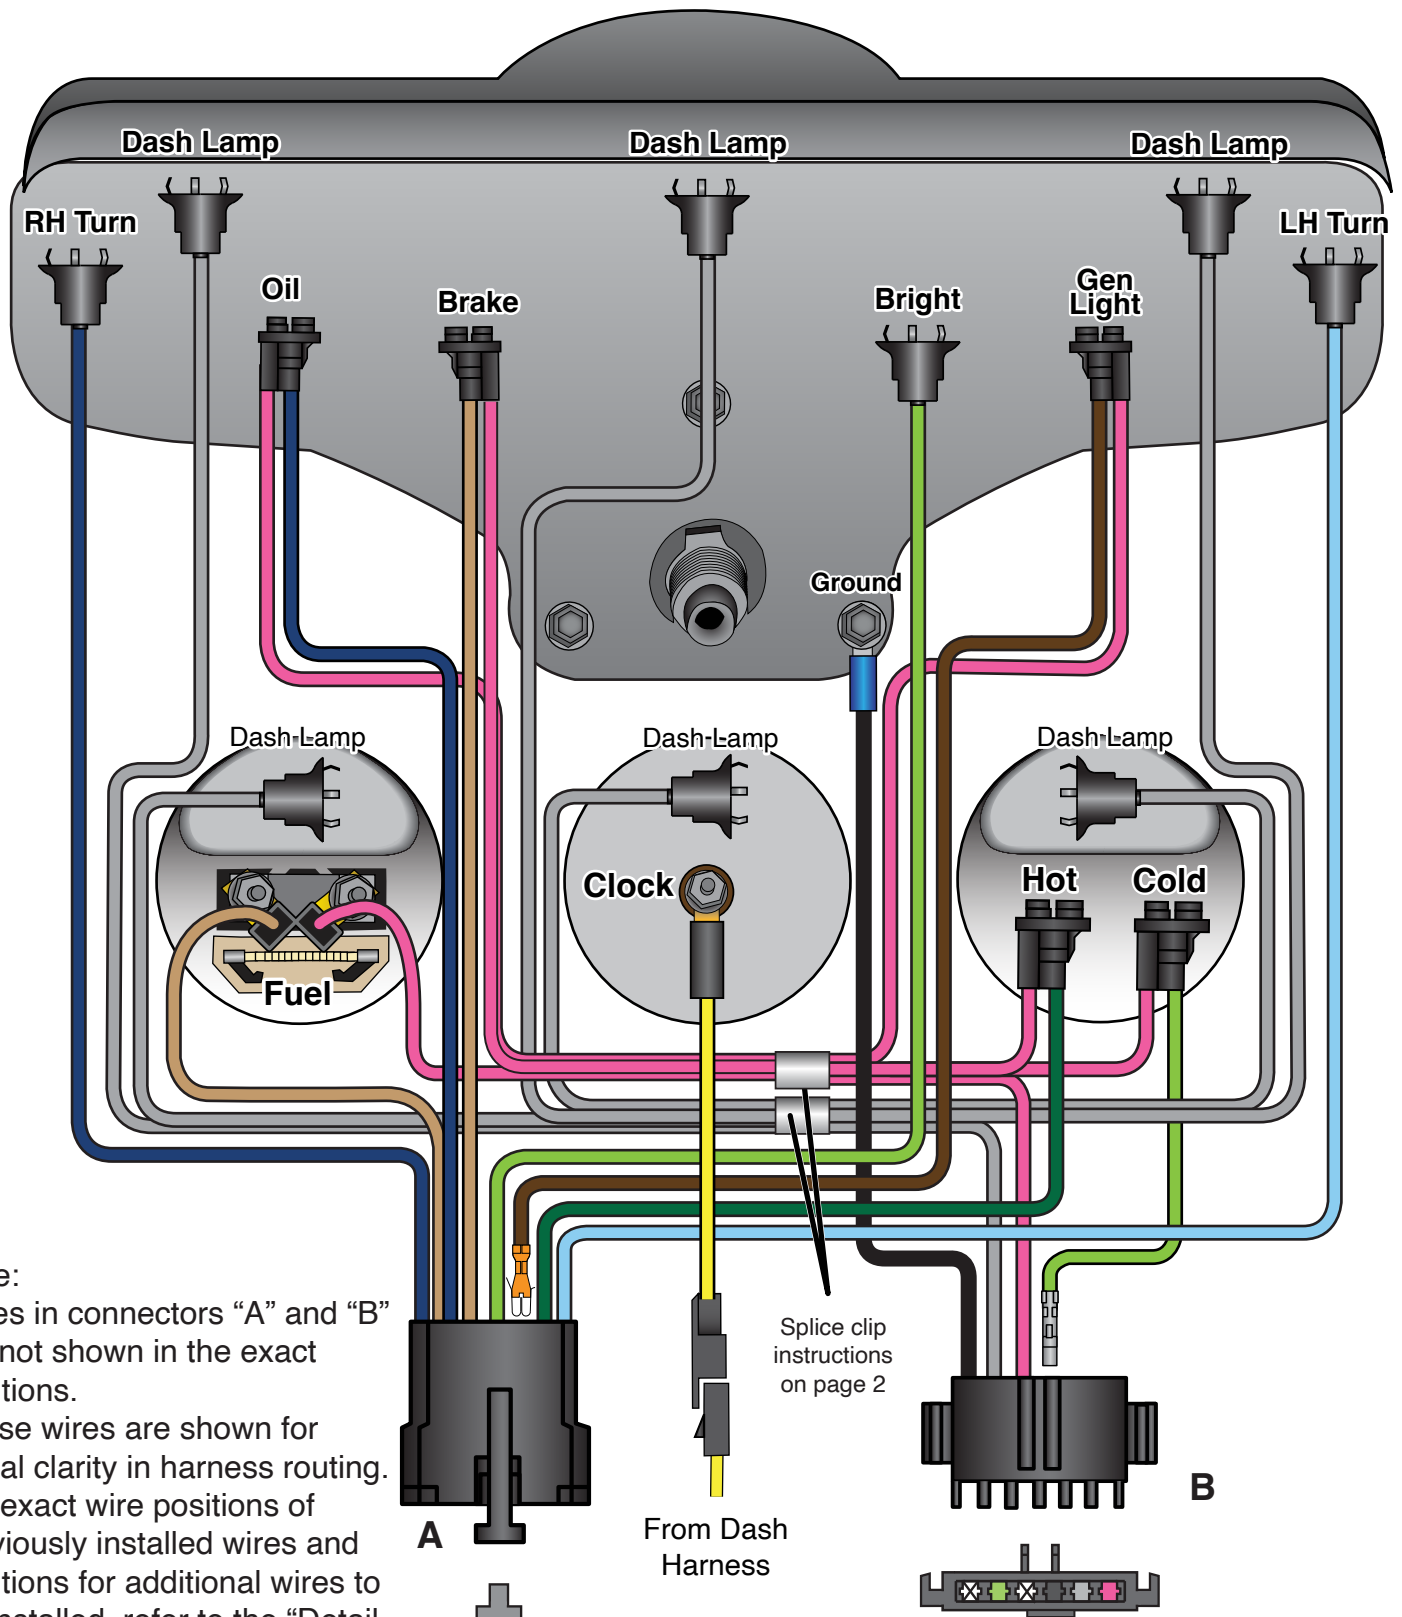

Note:  
Wires in connectors "A" and "B"  
are not shown in the exact  
positions.  
These wires are shown for  
visual clarity in harness routing.  
For exact wire positions of  
previously installed wires and  
positions for additional wires to  
be installed, refer to the "Detail  
View".

Install tach wire  
here, if used

Detail View

Splice clip  
instructions  
on page 2

From Dash  
Harness

Detail View




**American  
Autowire**

www.americanautowire.com 856-933-0801

510531

92972555  
Rev 1.0  
2/23/2022

# 1963 Impala Cluster

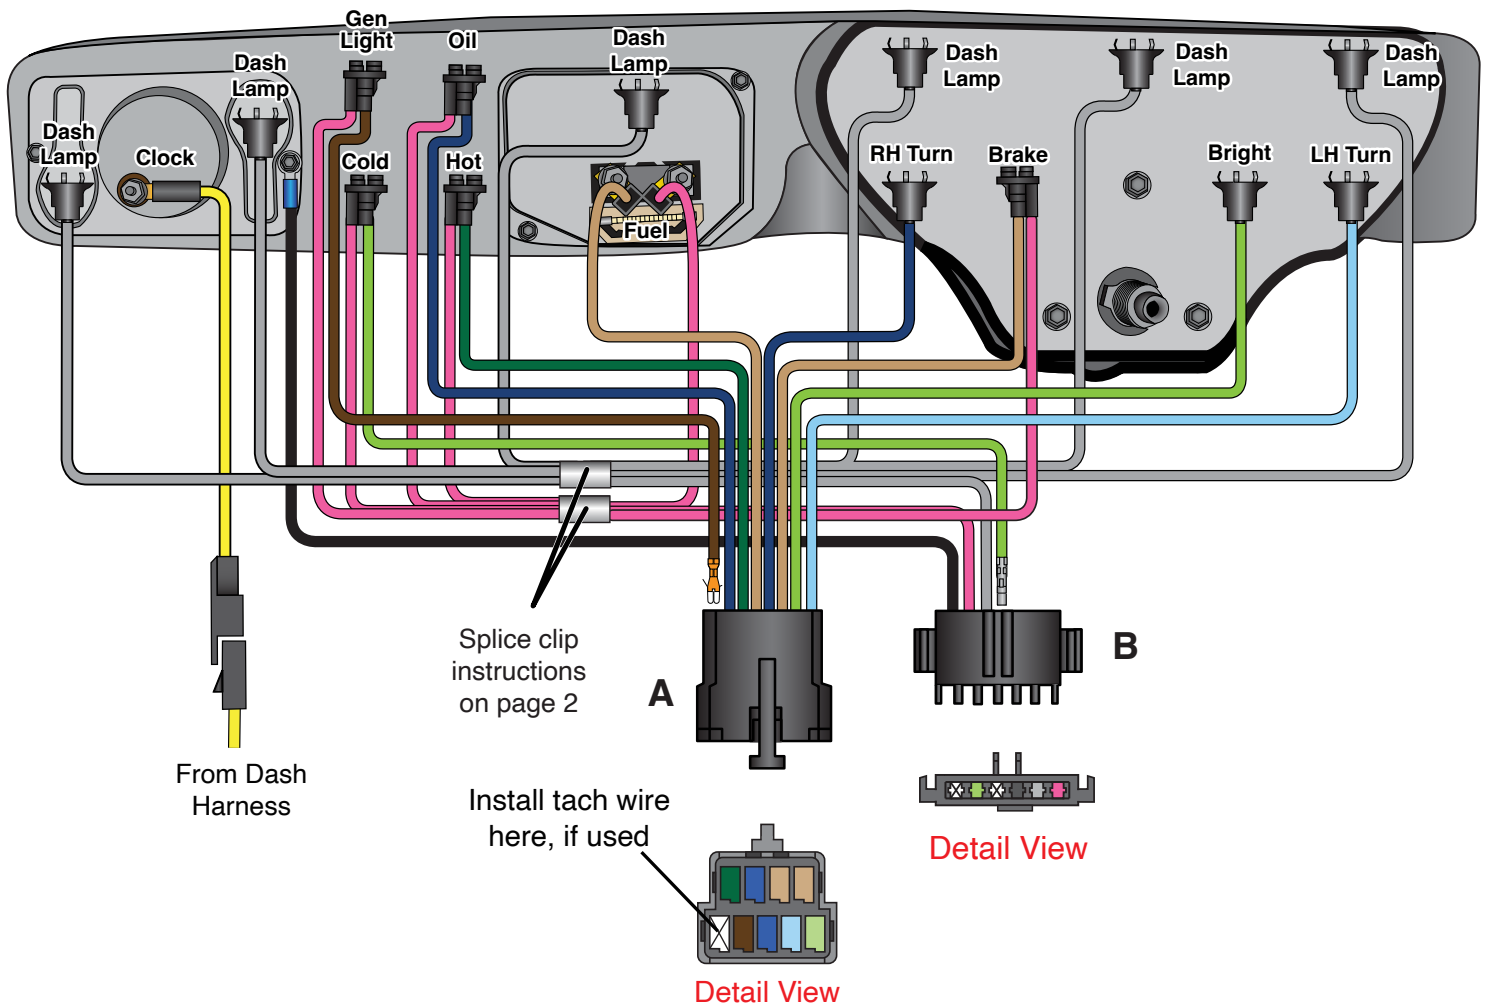

**Note:** Wires in connectors "A" and "B" are not shown in the exact positions. These wires are shown for visual clarity in harness routing.

For exact wire positions of previously installed wires and positions for additional wires to be installed, refer to the "Detail View"..




510531

92972555  
Rev 1.0  
2/23/2022



# 1964 Impala Cluster

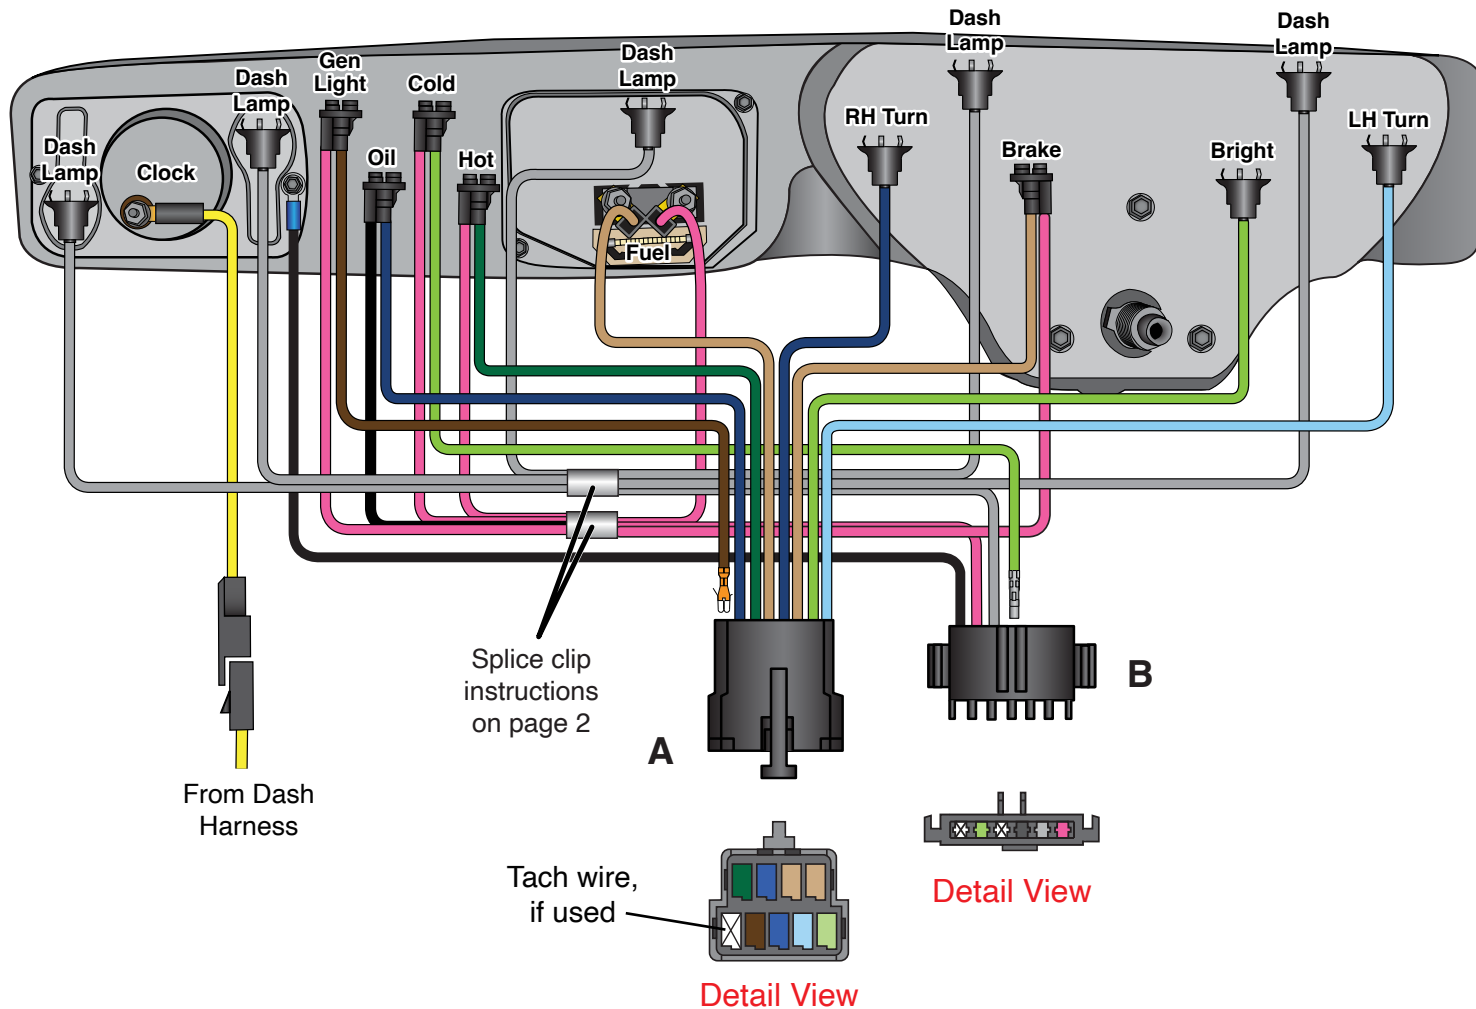

**Note:** Wires in connectors "A" and "B" are not shown in the exact positions. These wires are shown for visual clarity in harness routing.


For exact wire positions of previously installed wires and positions for additional wires to be installed, refer to the "Detail View"..



510531

92972555  
Rev 1.0  
2/23/2022

## Gauge Cluster harness (aftermarket gauges) installation instructions:

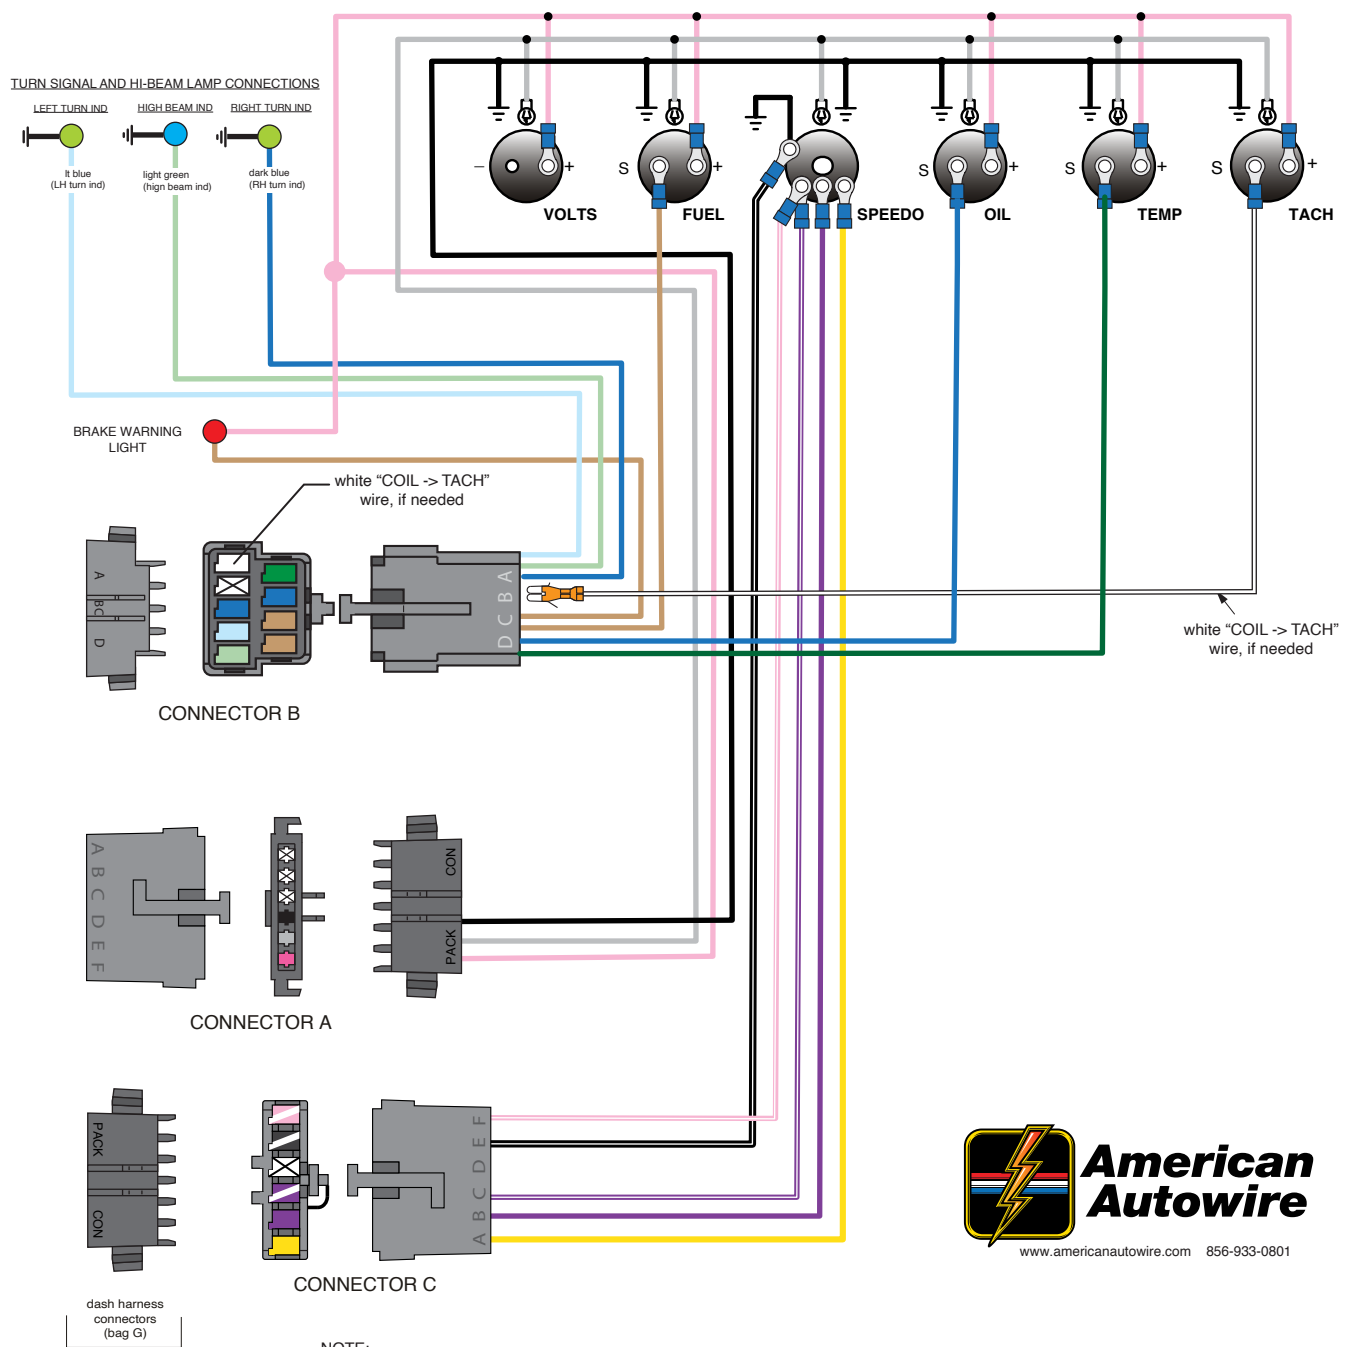

www.americanautowire.com 856-933-0801

### NOTE:

These are general instructions for hooking up aftermarket gauges with an electric speedometer. Connector (C) will ONLY be used in the event that you are utilizing an aftermarket electric speedometer. If your car does NOT have an electric speedometer, then Connector C will NOT be used and should not be plugged onto your dash harness. It is best to consult the speedometer manufacturer's instructions if you have any questions.

**Yellow** VSS Ground Connect to VSS neg. "-" on speedometer.

**Purple** VSS Signal Connect to VSS input on speedometer.  
NOTE: Twist the yellow and purple wires together for their entire length to prevent interference.

**Black/White** Speedo Ground Connect to ground on speedometer.

**Pink/White** Speedo Power Connect to 12v power on speedometer.  
NOTE: This wire will double onto the same stud as the purple/white VSS power wire from above.

510531

92972555  
Rev 1.0  
2/23/2022




This page intentionally left blank.

510531

92972555  
Rev 1.0  
2/23/2022

## Electric Speedo VSS extension connection:

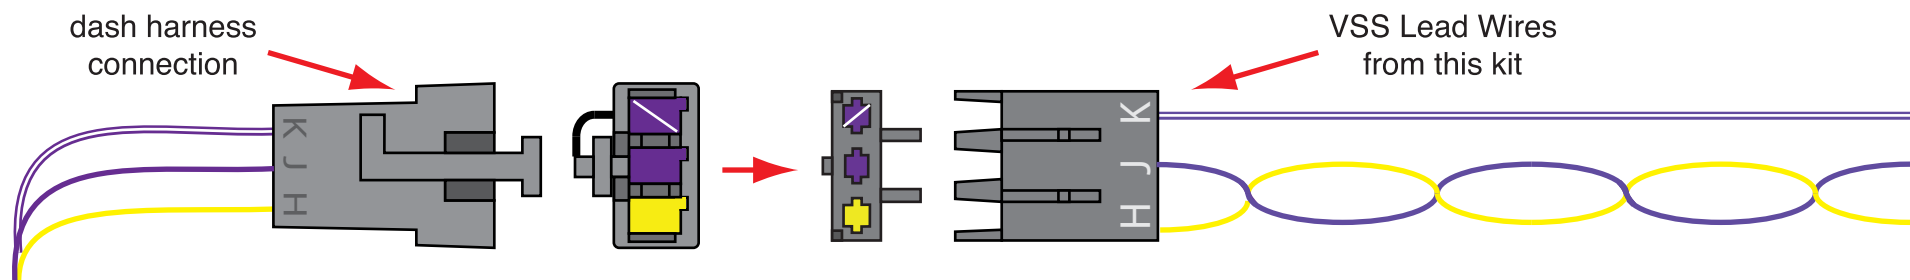

If you are using an aftermarket electric speedometer in your vehicle, you will need to connect the vehicle speed sensor (VSS) Lead Wires from this kit to the dash side connection of your dash harness. The yellow and solid purple wires must remain twisted together as shown above. These three wires will need to pass through the firewall or floor of your vehicle down to the vehicle speed sensor unit in the transmission. Generally, the solid purple wire connects to the “signal” lead, the yellow wire connects to the “ground” lead, and the purple/white stripe wire connects to the “12 volt power” lead on the vehicle speed sensor assembly. However, you should consult the directions that came with your gauges, and connect your vehicle speed sensor per the manufacturer’s instructions.



[www.americanautowire.com](http://www.americanautowire.com) 856-933-0801

VSS LEAD WIRES  
Various Applications  
Classic Update Series

**510730**

92972371 Rev 0.0 4/9/2019



# 520001 Digital Gauge System Dim Wire Kit:

## ALL GM Classic Update Kits (See page 2 for 510298 Mopar Cuda & Challenger Kit)

Use this kit when installing an aftermarket digital gauge system that requires a 12-volt signal to dim the display when the parking lamps or headlights are turned on.

**1. Locate the Headlight Switch Connector:**

Locate the headlight switch connector in the dash harness section of the Classic Update Kit being installed, and remove the brown “REAR RUNNING LIGHTS” Wire. **DO NOT** cut the terminal off this wire, as it will be required later in the install.

For guidance, refer to American Autowire’s instructional video on how to remove a terminal from a connector:

[https://www.youtube.com/watch?v=\\_3GoK3xE1gs](https://www.youtube.com/watch?v=_3GoK3xE1gs)

**2. Insert the Dimmer Jumper Wire:**


Take the pre-terminated end of the dim wire jumper, which includes two wires in one terminal, and insert it into the now vacant cavity of the headlight switch connector (where the rear running lamps wire was originally removed).

**3. Reconnect the Rear Running Lights Wire:**

Insert the now loose “REAR RUNNING LIGHTS” wire terminal into the provided 56Fx1 connector (Item “A”). Plug this connector into the short pigtail section of the dim wire jumper as illustrated below.

**4. Connect to the Digital Gauge System:**

Route the long loose end of the dim wire jumper to the digital gauge control module. Cut the wire to the appropriate length and connect it to the dimmer input on the controller, following the manufacturer's instructions, to complete the installation.

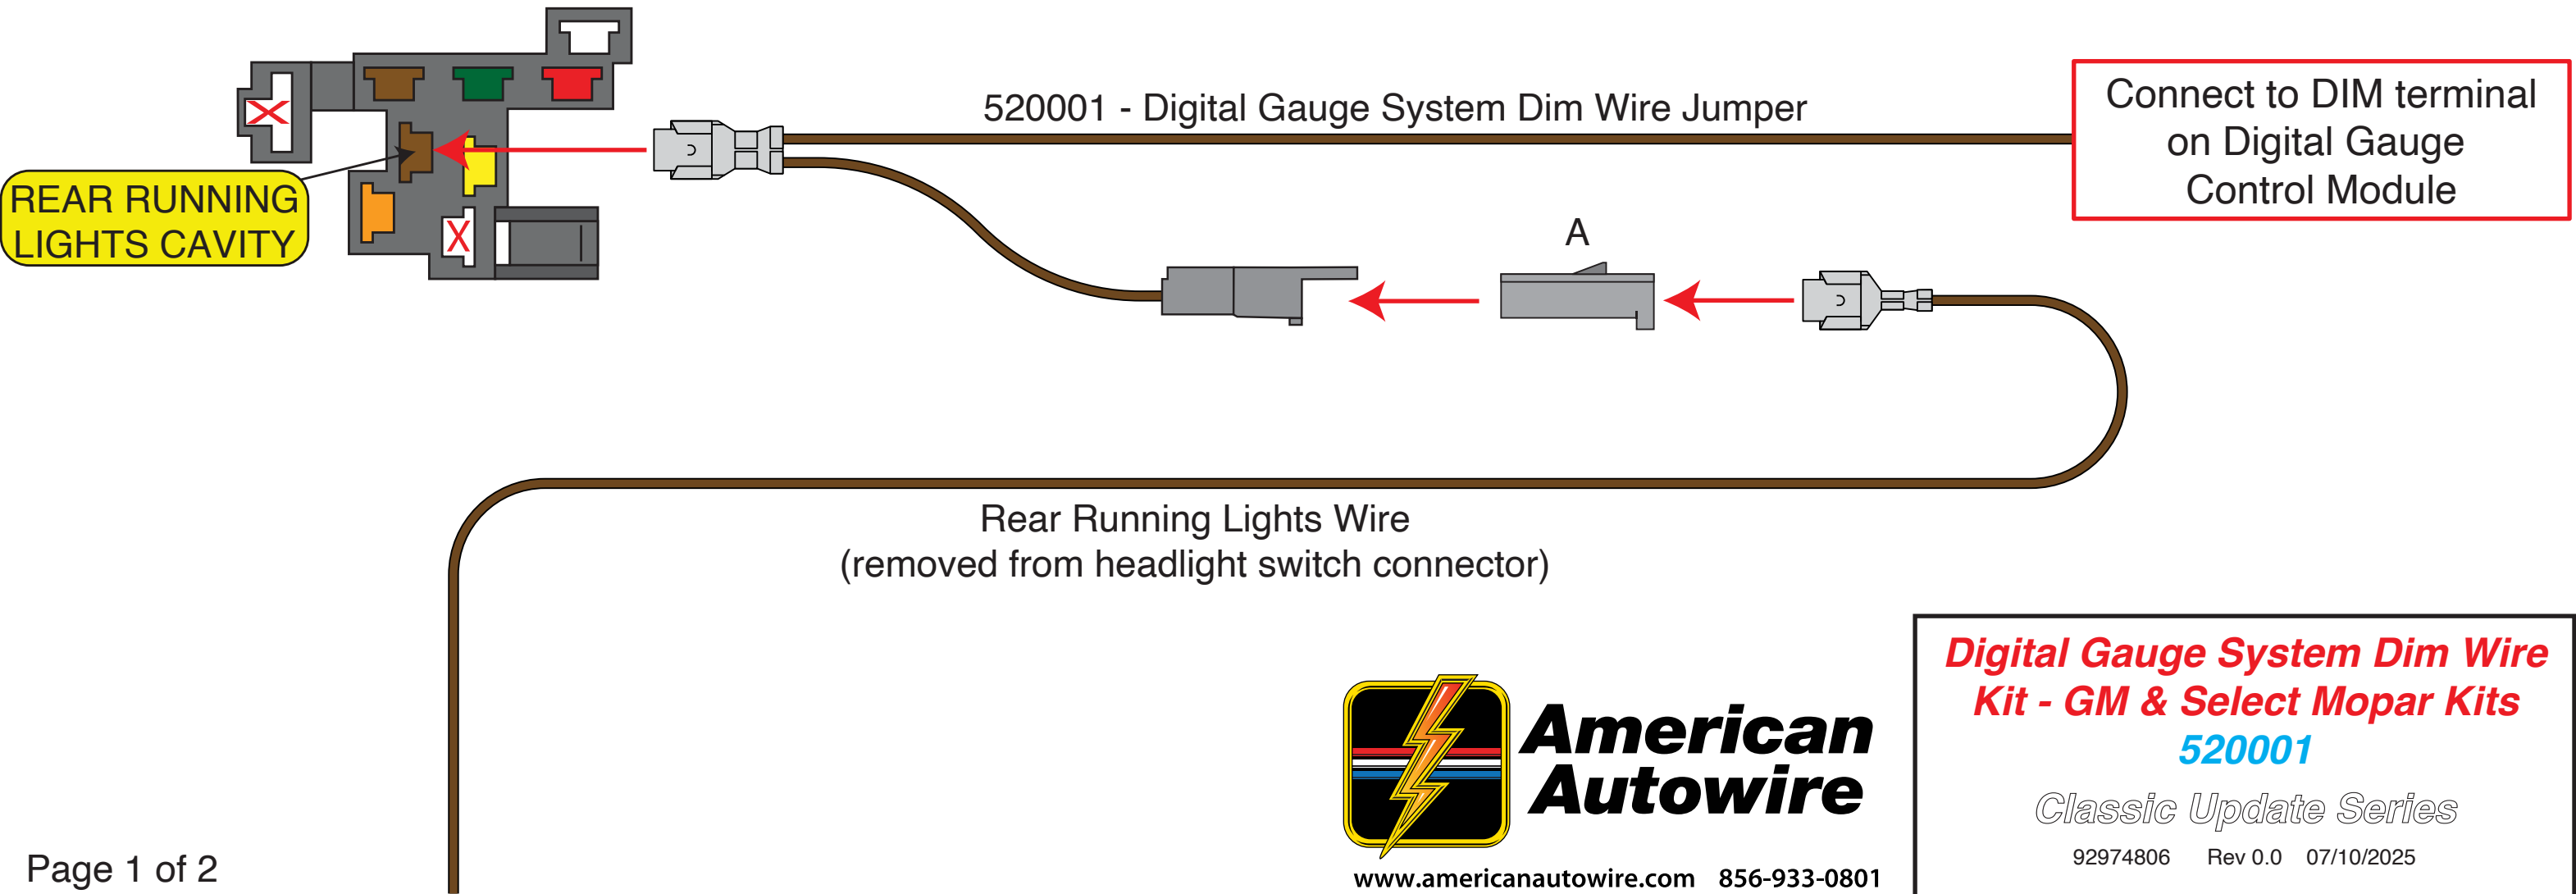



## 520001 Digital Gauge System Dim Wire Kit:

### 510298 Mopar Cuda & Challenger Classic Update Kit (ONLY)

Use this kit when installing an aftermarket digital gauge system that requires a 12-volt signal to dim the display when the parking lamps or headlights are turned on.

#### 1. Locate the Headlight Switch Connector:

Locate the Park/Tail Lights connector in the headlight connection section of the 510291 Dash Harness, and remove the brown "PARK LIGHTS" / "REAR RUNNING LIGHTS" Wires from the single cavity connector. **DO NOT** cut the terminal off these wires, as it will be required later in the install.

For guidance, refer to American Autowire's instructional video on how to remove a terminal from a connector:

[https://www.youtube.com/watch?v=\\_3GoK3xE1gs](https://www.youtube.com/watch?v=_3GoK3xE1gs)

#### 2. Insert the Dimmer Jumper Wire:


Take the pre-terminated end of the dim wire jumper, which includes two wires in one terminal, and insert it into the single cavity connector that was removed from the dash harness.



#### 3. Reconnect the Rear Running Lights Wire:

Insert the now loose "PARK LIGHTS" / "REAR RUNNING LIGHTS" wires previously removed from the single cavity connector on the dash harness into the provided 56Fx1 connector (Item "A"). Plug this connector into the short pigtail section of the dim wire jumper as illustrated below.

#### 4. Connect to the Digital Gauge System:

Route the long loose end of the dim wire jumper to the digital gauge control module. Cut the wire to the appropriate length and connect it to the dimmer input on the controller, following the manufacturer's instructions, to complete the installation.

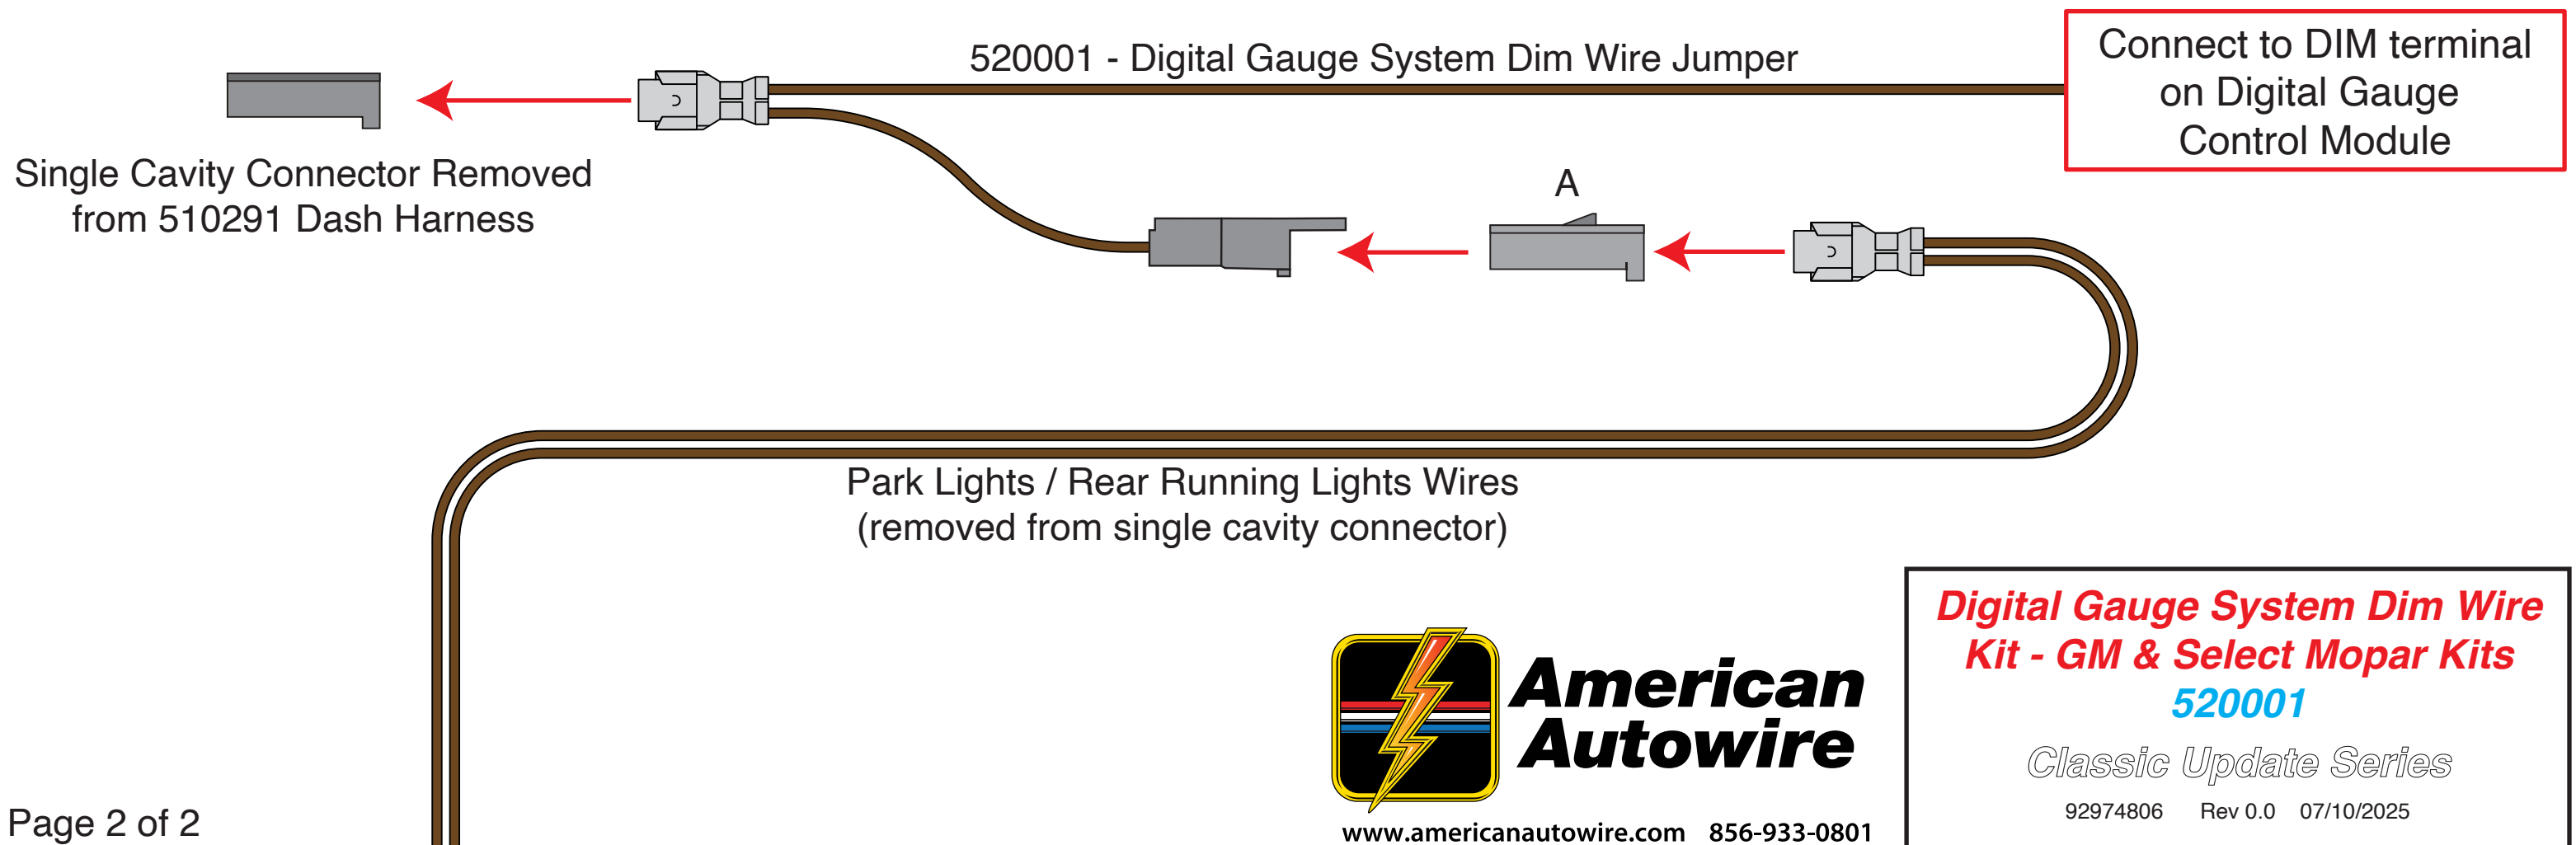

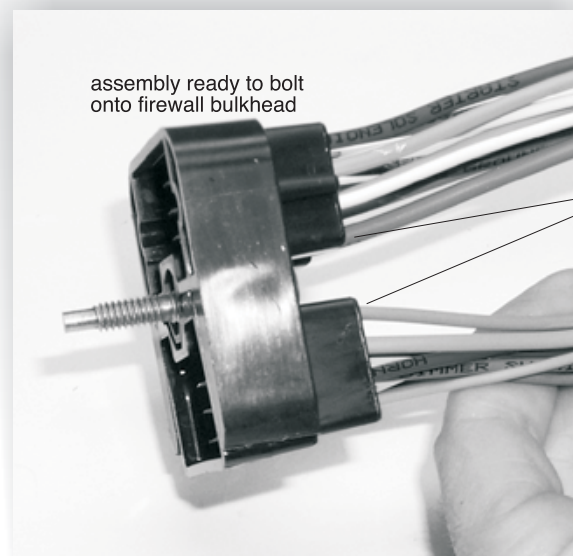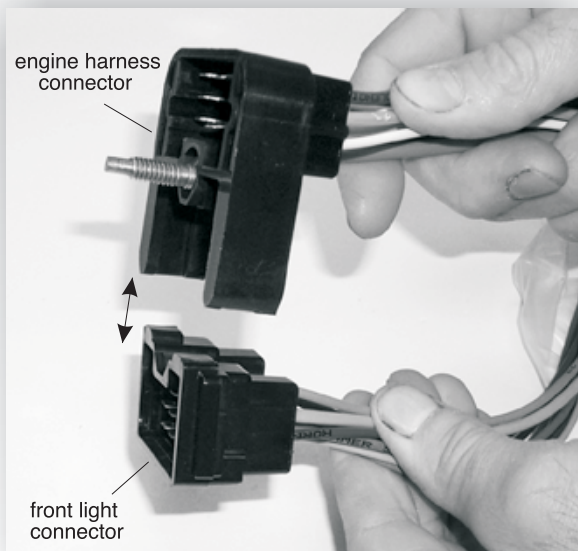

apply silicone sealant to back side of connector after installing terminals

The bulkhead connector from this Engine kit must snap into the mating engine connector (bag L), as shown. After snapping together, then bolt the assembly into the dash harness firewall connector using the attached bolt.

Look!




American Autowire also sells factory OEM style harness wrap. this is the same stuff used on original Camaro harnesses! If you want that OEM look with your Classic Update wiring system, then give us a call and order p/n R0067108 !




**American  
Autowire**

www.americanautowire.com 856-933-0801

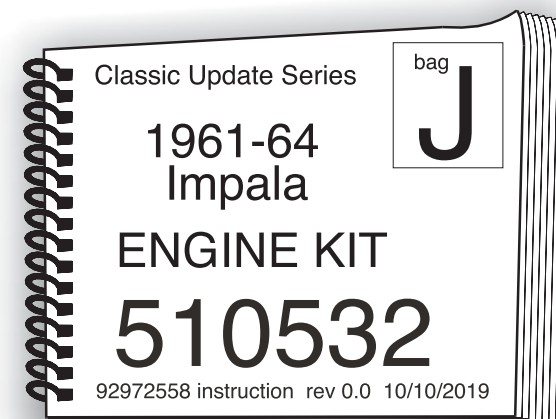

## Terminals used in this installation.

This kit contains loose piece terminals and connectors necessary to complete a connection to a specific component. Each connection on the instruction sheet identifies specific parts by a letter code that corresponds to the letter code on a part picture identified below. The parts below are shown in actual size to help in identification. This kit will only contain those parts required for the connections in the specific sub-kit you are working on. Just match the part to the picture below to identify the part letter code you will see on the instruction sheet for the sub-kit harness you are working on. We have supplied additional terminals in the event that extra terminals are necessary.

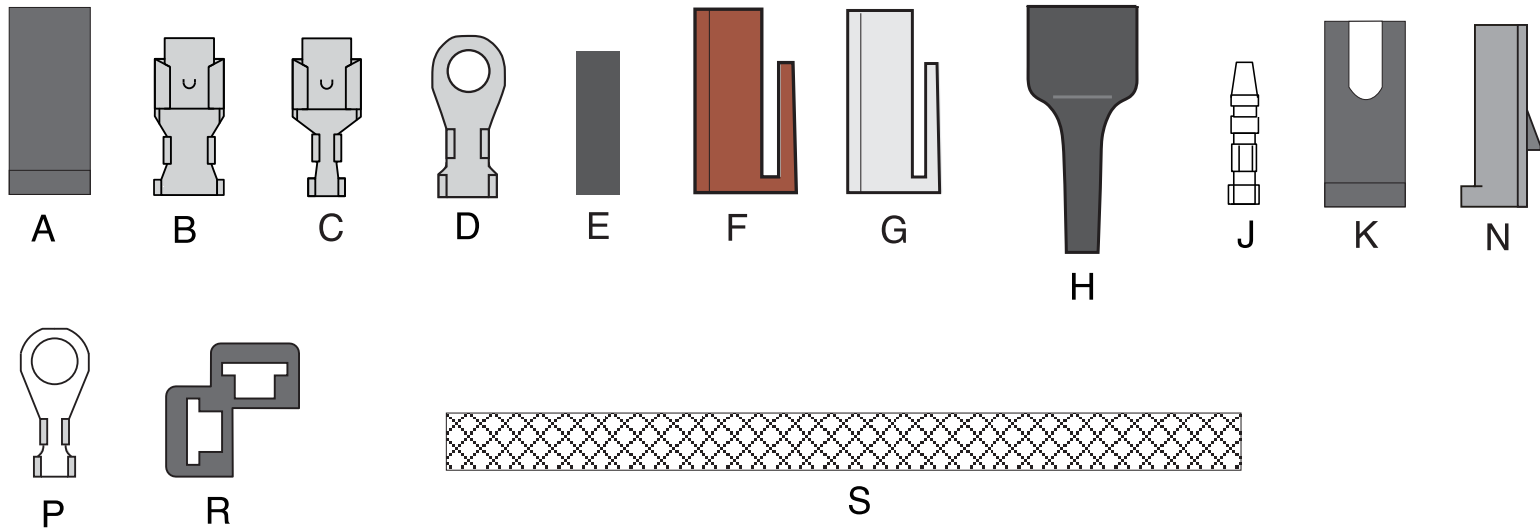



TEMPORARILY, PLUG THE MAIN BULKHEAD CONNECTOR FROM THIS KIT INTO THE MATING CONNECTOR ON THE DASH BULKHEAD CONNECTOR (LOCATED UNDER THE MASTER CYLINDER) Note: This will be unbolted to install the front light harness later.

|             |                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-------------|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RED         | 12 V BATTERY                   | Route this wire to the Megafuse and cut to length. Use ring terminal, shrink tubing from 510476 kit. Connect as shown on sheet 3.                                                                                                                                                                                                                                                                                                                                                                                                                   |
| PURPLE      | STARTER SOLENOID               | Route to the starter solenoid and cut to length. Install rubber sleeve E and ring terminal D. Connect to the "S" terminal on the solenoid.                                                                                                                                                                                                                                                                                                                                                                                                          |
| PINK        | 12 V IGNITION                  | If using an HEI distributor or after-market ignition system which requires a 12 volt feed, route the PINK wire to the coil and trim to length. Install terminal C and connector G, and plug into the distributor cap BAT location.                                                                                                                                                                                                                                                                                                                  |
| YELLOW      | STARTER SOLENOID-R             | If using a points type ignition system which requires reduced voltage, route the PINK wire to the ignition feed side of a ballast resistor (not included). Connect the loose piece YELLOW (STARTER SOLENOID-R) wire to the R terminal on the starter and connect the other end to the coil side of the ballast resistor (not included). Connect a piece of left over PINK wire to the coil side of the ballast resistor and route to the distributor coil positive (+) side. Connect the distributor input lead wire to the coil negative (-) side. |
| RED         | (no printing)<br>(heavy gauge) | Use the 6ga red wire, boot, and ring terminal from the 510476 kit, route from alternator to the Megafuse and cut to length. Connect as shown on sheet 3.                                                                                                                                                                                                                                                                                                                                                                                            |
| RED         | (no printing)<br>(small gauge) | Send the ring terminal end of this wire through boot L (as shown on sheet 3) and connect to the battery stud on the alternator. Do not plug the connector into the alternator yet. The brown exciter wire will still need to be added to this connector before it is plugged into the alternator.                                                                                                                                                                                                                                                   |
| BROWN       | ALTERNATOR IGN                 | Route this wire to the alternator and cut to length. Install terminal C and plug into the regulator connector. The regulator connector can now be plugged into the alternator.                                                                                                                                                                                                                                                                                                                                                                      |
| WHITE       | WIPER FEED                     | This is the 12 volt feed wire for the wipers. Plug this wire into the bulkhead connector in the location shown on sheet 3. Route this wire to the wiper motor, trim to length, install terminal C and plug into connector A.                                                                                                                                                                                                                                                                                                                        |
| TAN         | ELECTRIC CHOKE                 | If you are using a carburetor with an electric choke, connect this wire to the electric choke connection. If you are not using an electric choke remove this wire from the engine bulkhead connector.                                                                                                                                                                                                                                                                                                                                               |
| ORANGE      | HEAT / AIR                     | If using stock or after-market air conditioning, this wire will not be used. If using a stock heater only system, plug this wire into the bulkhead connector in the location shown on sheet 2. Route this wire to the heater blower and cut to length, install terminal C and connector K (1961, 1962, 1964) or slide through boot H, install terminal J (1963) and plug into the blower unit.                                                                                                                                                      |
| WHITE       | COIL-TACH                      | Route this wire to the coil and trim to length. If using an HEI distributor, terminal B and connector F are included for connection to the TACH location. If using a conventional coil, terminal P is included for connection to the negative (-) side of the coil. If you are not using a tachometer, remove this wire from the bulkhead connector.                                                                                                                                                                                                |
| DARK BLUE   | OIL PRESSURE SENDER            | Connect this wire to the oil pressure sending unit using terminal P or terminal C together with connector A.                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| DARK GREEN  | WATER TEMP SENDER              | Connect this wire to the temperature sending unit using terminal P or terminal C and connector A (depending on your sending unit).                                                                                                                                                                                                                                                                                                                                                                                                                  |
| LIGHT GREEN | no printing                    | <b>NOTE:</b> This wire will only be used when using your stock HOT/COLD dash indicator warning lamp on the 1962-1964 models. Plug this loose wire (for cold lamp) into the main connector as shown on sheet 3 (1962-64 applications only). Route the other end through loom S, install terminal C and plug into connector R as shown on sheet 3.                                                                                                                                                                                                    |

Once the main connector has had all of it's wires plugged in, the connector cavities should be sealed with dielectric grease on the terminals. Also, to assure a moisture resistant seal, silicone can be applied to seal the outside of the connector.

ENGINE KIT  
510532



Before you begin:

Read the entire instruction sheet before starting. Ensure all components are present. If anything is missing, stop and contact American Autowire at 856-933-0801. Always disconnect the negative battery cable before beginning installation.

Fuse Block Mounting and Assembly:

- Choose a mounting location close to the battery power source, under the hood, and secure the fuse block using mounting screws (not included) of your choice.
  - Ensure both the 12 ft. 6Ga. charging wire and the 10Ga. main power feed can reach this location. The 6Ga. charging wire will need to connect to the alternator, the megafuse block, and the starter/battery junction.
- Detach the fuse block cover and remove the factory-installed nuts and lock washers from the studs.
- Place the busbar jumper (Item “D”) across the designated studs.
  - Important: The jumper must be installed on the side that connects to your main power source (starter solenoid or battery junction).
- Install one 175A megafuse (Item “C”) onto each fuse position in the block.
- Reinstall the nuts and lock washers loose over the jumper and fuses.

Battery Feed Wiring:

Route the 6Ga. Charge Wire (Item “A”) from the mounted Megafuse Block (Item “B”) to the battery stud on the starter solenoid, or a similar battery junction, under the hood and cut to length. Cut the 3/8” Shrink Tubing into 1 inch lengths. Slide one of these smaller lengths over each end of the charge wire.

- At the starter end:** Crimp and solder a 6Ga. Starter Ring Terminal (Item “G”) and then insulate the crimp with the previously installed shrink tube. Secure the newly crimped end to the battery stud on the starter solenoid or battery junction.
- At the megafuse block end:** Crimp and solder a 6Ga. Megafuse Ring Terminal (Item “H”) and then insulate the crimp with the previously installed shrink tube. Attach the crimped end to the megafuse block on the **busbar** side of the fuses. Tighten securely.

Alternator Feed Wiring:

Route the remaining length of the 6Ga. Charge Wire (Item “A”) from the mounted Megafuse Block (Item “B”) to the battery stud on the alternator and cut to length. Slide one of the cut, 1 inch lengths of shrink tube (Item “F”) over the end of the charge wire closest to the megafuse block.

- At the alternator end:** Slide the Alternator Boot (Item “E”) on the end of the wire. Crimp and solder a 6Ga. Alternator Ring Terminal (Item “J”) and secure the newly crimped end to the battery stud on the alternator.
- At the megafuse block end:** Crimp and solder a 6Ga. Megafuse Ring Terminal (Item “H”) and then insulate the crimp with the previously installed shrink tube. Attach the crimped end to a fuse stud on the **side opposite the busbar**. Tighten securely.

Panel Feed Wiring:

Locate the 10Ga. “12V Battery Feed” wire from the engine or panel subkit, route it to the Megafuse block, cut to length, and slide a piece of the cut shrink tubing (Item “F”) over the cut end. Crimp and solder a 10 GA. megafuse ring terminal (Item “K”) on the end and insulate the crimp with the shrink tubing. Attach to the remaining open fuse stud on the side **opposite the busbar**. Tighten securely.

Parts Legend:


A



6 Gauge Charge Wire - QTY (1)

(144.0" Length)

B

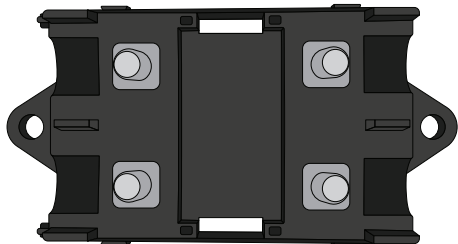

Megafuse Block - QTY (1)

(Lid not shown)

C



175A Megafuse - QTY (2)

D



Megafuse Block Busbar - QTY (1)

E



Alternator Boot - QTY (1)


F



3/8" Shrink Tubing - QTY (1)

(8.0" Length)


G



6Ga. Starter Ring Terminal - QTY (2)

Fits 3/8" Stud

H



6Ga. Megafuse Ring Terminal - QTY (3)

Fits 5/16" Stud

J



6Ga. Alternator Ring Terminal - QTY (2)

Fits 1/4" Stud

K



10Ga. Megafuse Ring Terminal - QTY (2)

Fits 5/16" Stud

bag

Z



American

Autowire

www.americanautowire.com

856-933-0801

Alternator and Main Power

Connection Kit

510476

Classic Update Series

92974822 Rev 0.0 05/05/2026





bag



bag



# Classic Update Series

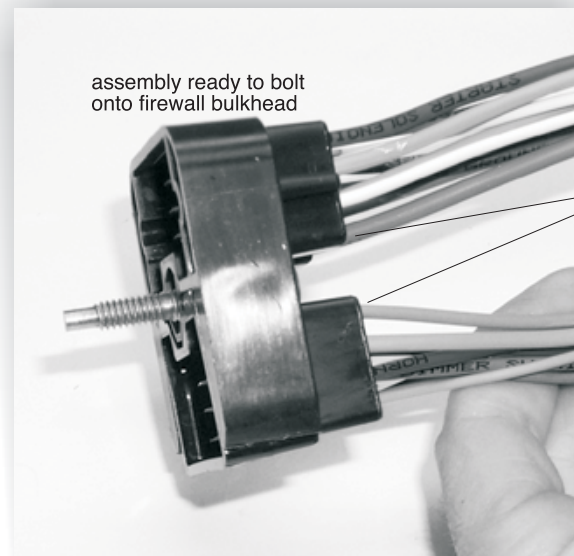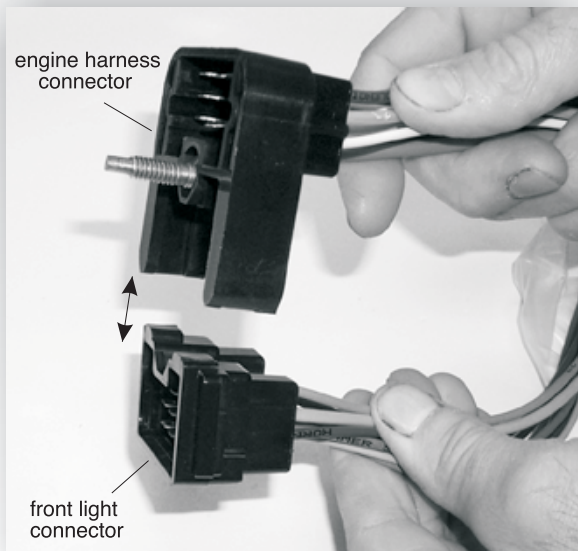

apply silicone sealant to back side of connector after installing terminals

The bulkhead connector from this front light kit must snap into the mating engine connector (bag J), as shown. After snapping together, then bolt the assembly into the dash harness firewall connector using the attached bolt.

Look!



**American  
Autowire**


[www.americanautowire.com](http://www.americanautowire.com)

American Autowire also sells factory OEM style harness wrap. this is the same tape used on original harnesses! If you want that OEM look with your Classic Update wiring system, then give us a call and order p/n R0067108 !




## Terminals used in this installation.


This kit contains loose piece terminals and connectors necessary to complete a connection to a specific component. Each connection on the instruction sheet identifies specific parts by a letter code that corresponds to the letter code on a part picture identified below. The parts below are shown in actual size to help in identification. This kit will only contain those parts required for the connections in the specific sub-kit you are working on. Just match the part to the picture below to identify the part letter code you will see on the instruction sheet for the sub-kit harness you are working on. We have supplied additional terminals in the event that extra terminals are necessary.

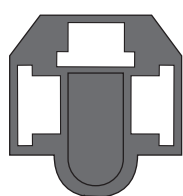


A




B




C




D




E

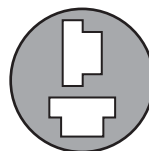

H

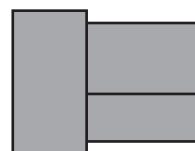


J




K



L

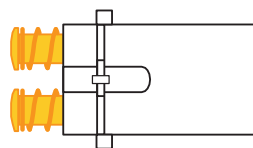

N

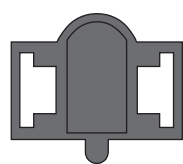

T


Classic Update Series

FRONT LIGHT KIT

**510533**

92972561 instruction rev 0.0 9/25/2019

# Classic Update Series

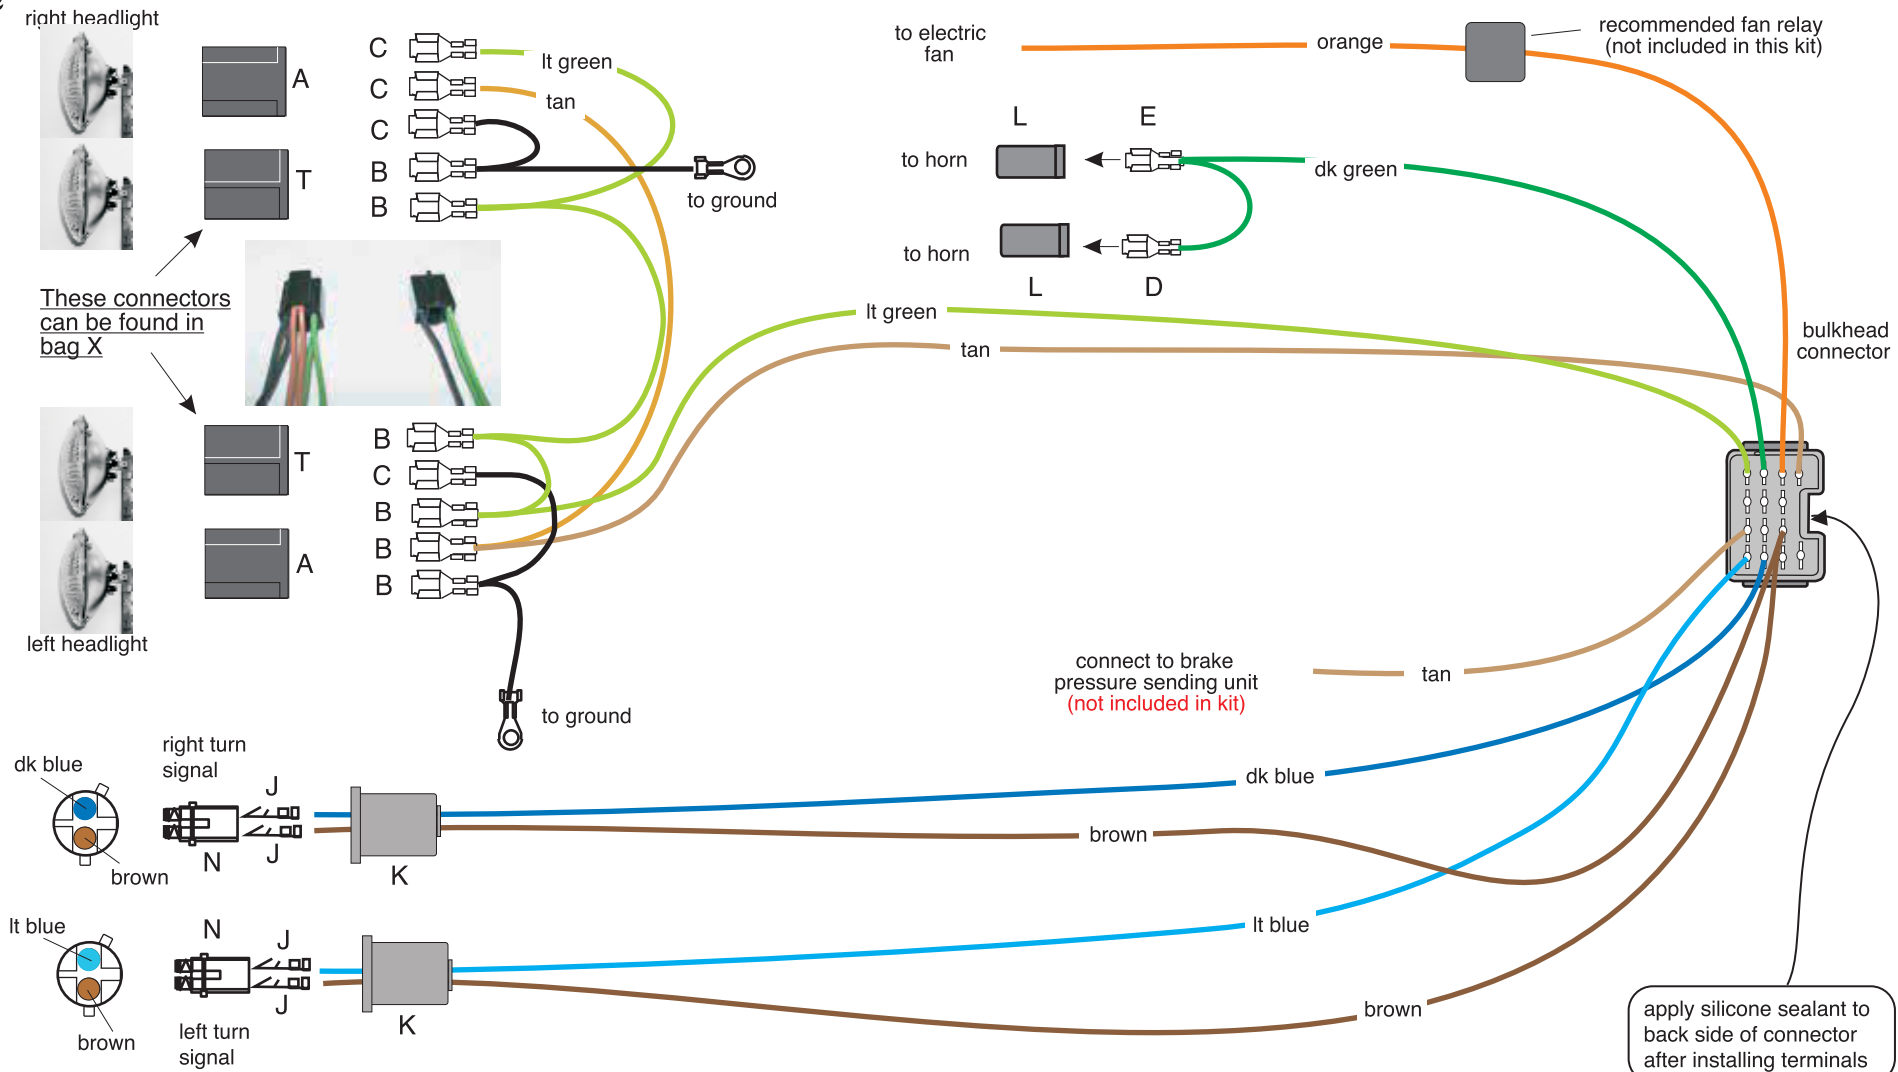

## 1961-63 Impala Front Light


## 1961-63 IMPALA

Connect the bulkhead connector from this kit onto the bulkhead connector from the engine kit (bag J), and bolt to the firewall dash bulkhead. After all wires are installed from this kit, the main connector should have die-electric grease applied to the terminals and silicone sealer applied to the outside of the connectors as a moisture seal.

|             |                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LIGHT BLUE  | LEFT FRONT TURN     | Route this wire to the Left hand turn signal lamp, slide wire through boot K, install terminal J and plug into lamp socket N as shown on sheet 3.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| DARK BLUE   | RIGHT FRONT TURN    | Route this wire to the Right hand turn signal lamp, slide wire through boot K, install terminal J and plug into lamp socket N as shown on sheet 3.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| BROWN       | PARK LIGHTS         | Route one of the brown wires to the Left hand turn signal lamp, slide wire through boot K, install terminal J and plug into lamp socket N as shown on sheet 3. Route the other brown wire to the Right hand turn signal lamp, slide wire through boot K, install terminal J and plug into lamp socket N as shown on sheet 3.                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| TAN         | HEADLIGHT LOW BEAM  | Route this wire to the driver side outer headlight and trim to length. Double this wire with the cutoff portion, and install terminal B. Plug this terminal into connector A in the location shown on sheet 3. Route the remaining portion of this TAN wire to the passenger side outer headlight and trim to length. Install terminal C and plug into connector A as shown on sheet 3.                                                                                                                                                                                                                                                                                                                                                                                                              |
| LIGHT GREEN | HEADLIGHT HIGH BEAM | Route this wire to the driver side outer headlight and trim to length. Double this wire with the cutoff portion, and install terminal B. Plug this terminal into connector A, make a short jumper over to the driver side inner headlight, cut to length, double it with the cutoff portion, install terminal B, and plug it into connector T in the location shown on sheet 3. Route the remaining portion of this LIGHT GREEN wire to the passenger side inner headlight and trim to length. Double this wire with the cutoff portion, install terminal B and plug into connector T as shown. Make a short jumper over to the passenger side outer headlight, cut to length, double it with the cutoff portion, install terminal C, and plug it into connector A in the location shown on sheet 3. |
| BLACK       | GROUND              | Attach the ring terminal to a good chassis ground then route this wire to the driver side outer headlight, trim to length, double this wire with the cutoff portion, install terminal B and plug this terminal into connector A. Route the remaining portion of this BLACK wire over to the driver side inner headlight, cut to length, install terminal C and plug it into connector T in the location shown on sheet 3. Repeat this process for the passenger side.                                                                                                                                                                                                                                                                                                                                |
| DARK GREEN  | HORN                | Route to horns and install terminals D & E, as shown on sheet 3. Plug into connectors L.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| ORANGE      | ELECTRIC FAN        | Route to the electric fan and connect as per the manufacturer's instructions.<br>NOTE: We recommend that this wire be used as the trigger wire for the electric fan relay.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| TAN         | BRAKE LIGHT SWITCH  | If your car is equipped with a brake warning system, plug this wire into the main connector as shown on sheet and splice the other end onto your brake sender switch connection.<br>NOTE: (brake switch connection not included in kit)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |



# Classic Update Series

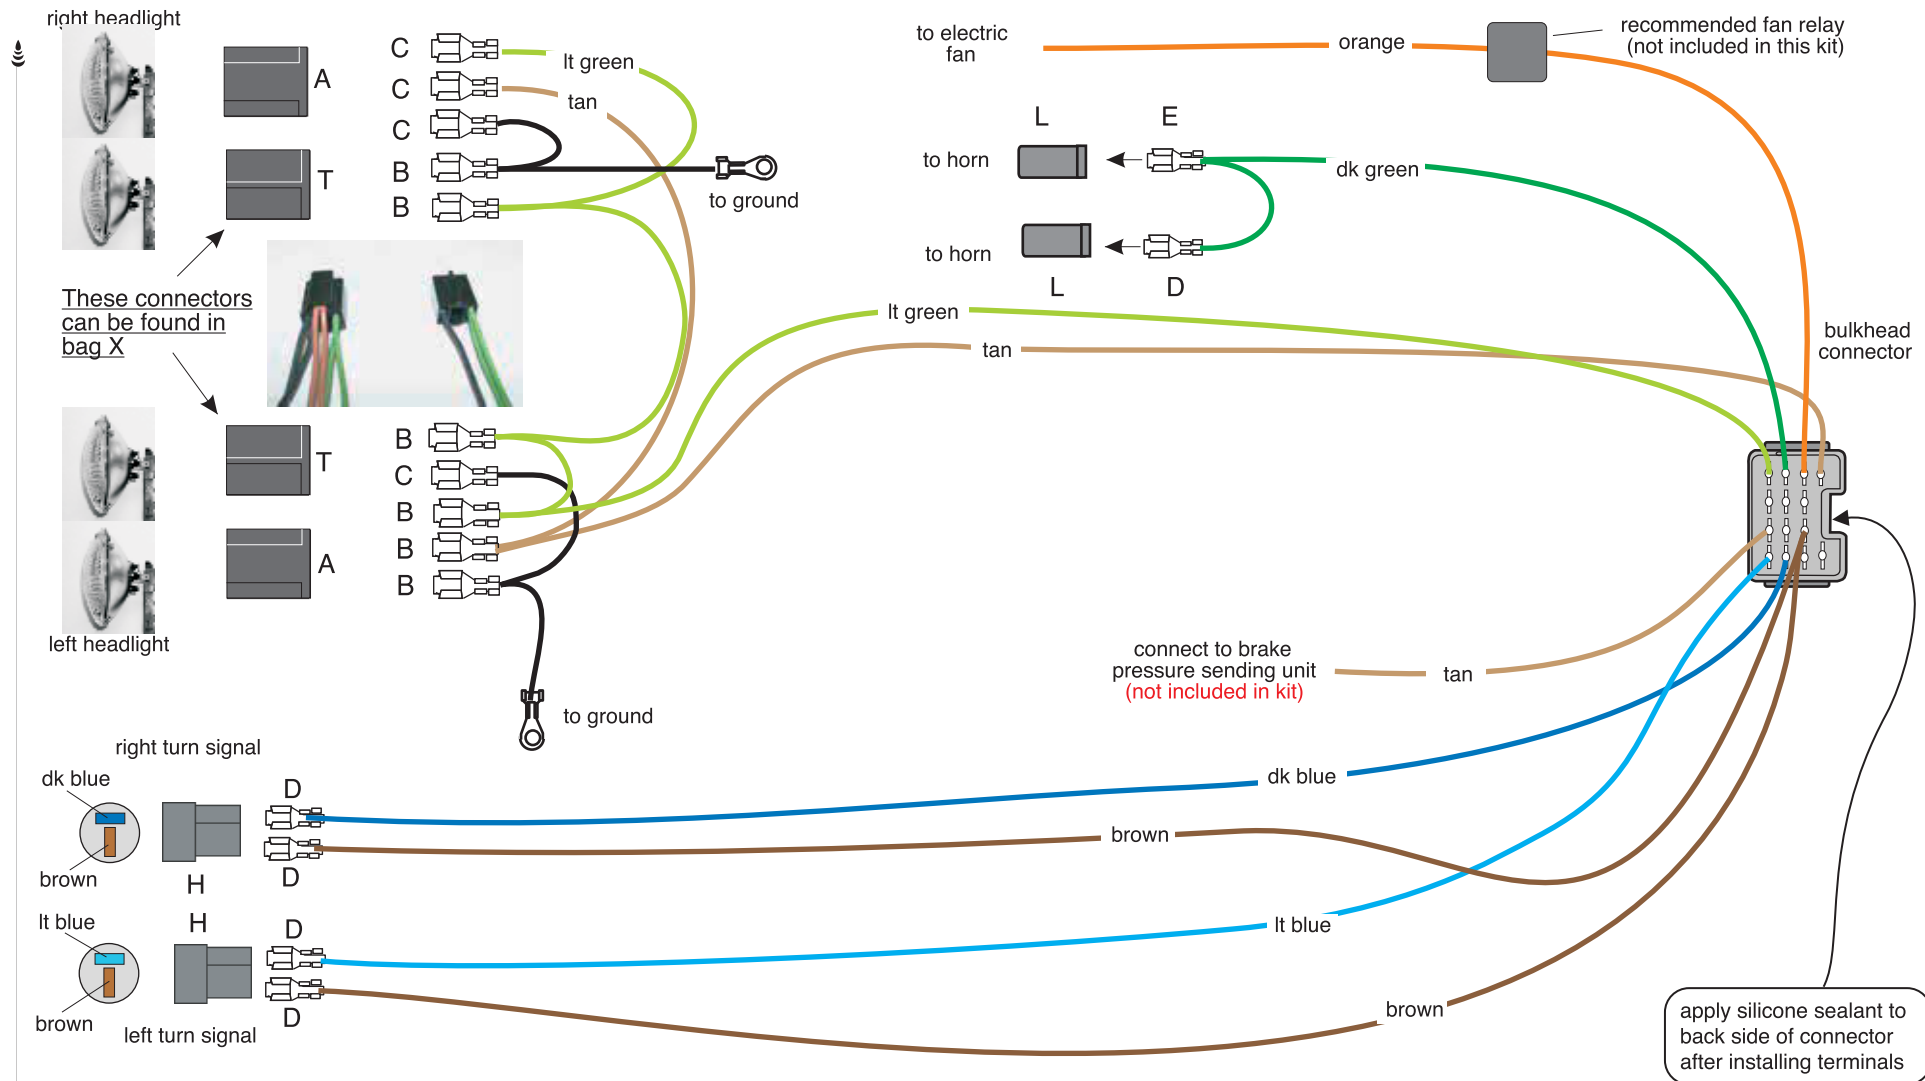

## 1964 Impala Front Light


## 1964 IMPALA

Connect the bulkhead connector from this kit onto the bulkhead connector from the engine kit (bag J), and bolt to the firewall dash bulkhead. After all wires are installed from this kit, the main connector should have die-electric grease applied to the terminals and silicone sealer applied to the outside of the connectors as a moisture seal.

|             |                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|-------------|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LIGHT BLUE  | LEFT FRONT TURN     | Route this wire to the Left hand turn signal lamp, install terminal D and plug into connector H as shown on sheet 5.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| DARK BLUE   | RIGHT FRONT TURN    | Route this wire to the Right hand turn signal lamp, install terminal D and plug into connector H as shown on sheet 5.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| BROWN       | PARK LIGHTS         | Route one of the brown wires to the Left hand turn signal lamp, install terminal D and plug into connector H as shown on sheet 5. Route the other brown wire to the Right hand turn signal lamp, install terminal D and plug into connector H as shown on sheet 5.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| TAN         | HEADLIGHT LOW BEAM  | Route this wire to the driver side outer headlight and trim to length. Double this wire with the cutoff portion, and install terminal B. Plug this terminal into connector A, in the location shown on sheet 4. Route the remaining portion of this TAN wire to the passenger side outer headlight and trim to length. Install terminal C and plug into connector A as shown on sheet 5.                                                                                                                                                                                                                                                                                                                                                                                                          |
| LIGHT GREEN | HEADLIGHT HIGH BEAM | Route this wire to the driver side outer headlight and trim to length. Double this wire with the cutoff portion, and install terminal B. Plug this terminal into connector A, make a short jumper over to the driver side inner headlight, cut to length, double it with the cutoff portion, install terminal B, and plug it into connector T in the location shown on sheet 5. Route the remaining portion of this LIGHT GREEN wire to the passenger side inner headlight and trim to length. Double this wire with the cutoff portion, install terminal B and plug into connector T as shown. Make a short jumper over to the passenger side outer headlight, cut to length, double it with the cutoff portion, install terminal C, and plug into connector A in the location shown on sheet 5. |
| BLACK       | GROUND              | Attach the ring terminal to a good chassis ground then route this wire to the driver side outer headlight, trim to length, double this wire with the cutoff portion, install terminal B and plug this terminal into connector A. Route the remaining portion of this BLACK wire over to the driver side inner headlight, cut to length, install terminal C and plug it into connector T in the location shown on sheet 3. Repeat this process for the passenger side                                                                                                                                                                                                                                                                                                                              |
| DARK GREEN  | HORN                | Route to horns and install terminals D & E, as shown on sheet 5, Plug into connectors L.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| ORANGE      | ELECTRIC FAN        | Route to the electric fan and connect as per the manufacturer's instructions.<br>NOTE: We recommend that this wire be used as the trigger wire for the electric fan relay.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| TAN         | BRAKE LIGHT SWITCH  | If your car is equipped with a brake warning system, plug this wire into the main connector as shown on sheet 5 and splice the other end onto your brake sender switch connection<br>NOTE: (brake switch connection not included in kit).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

# Classic Update Series

Route these wires from the driver-side kick panel to the b-pillar, rear package tray, area.

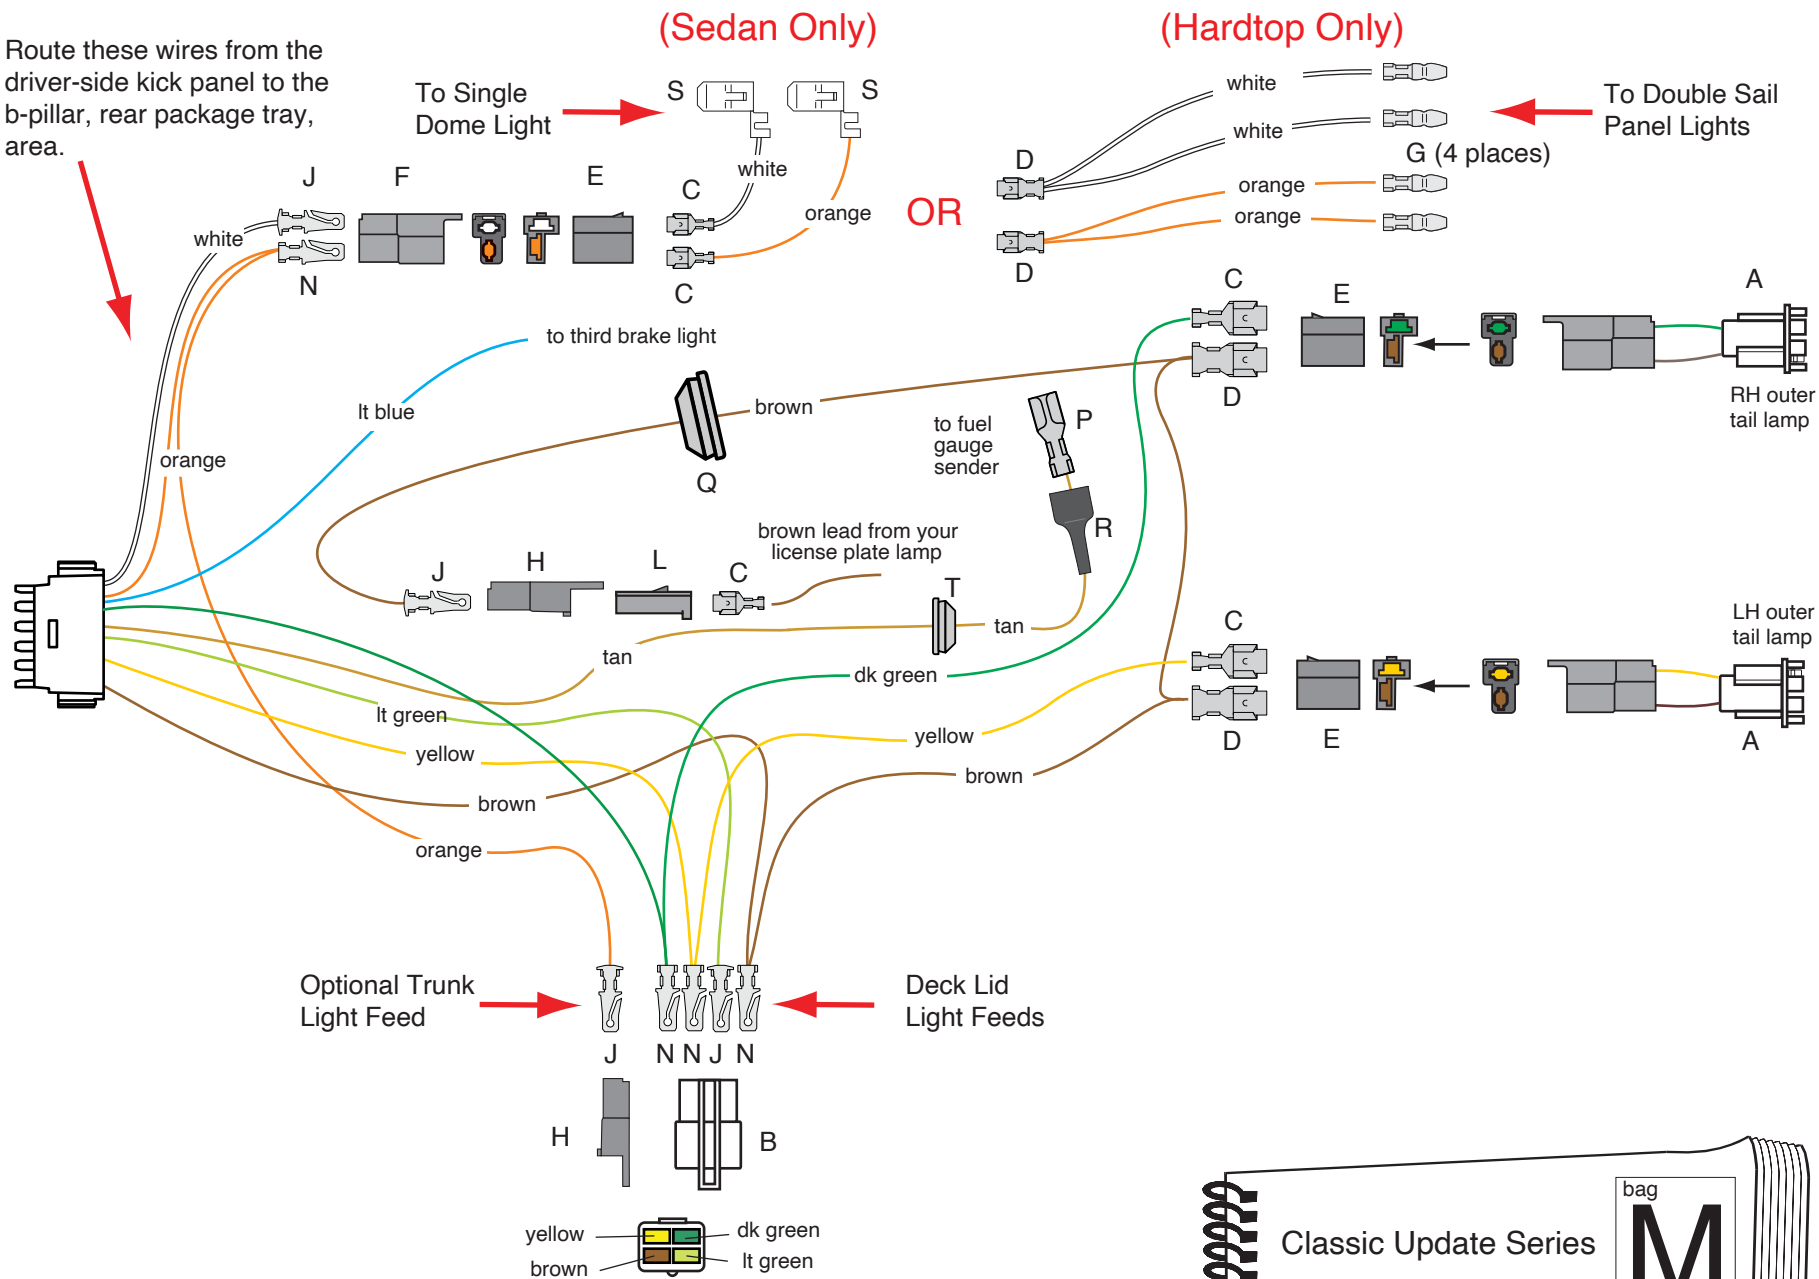

USE THIS SHEET FOR ALL  
61-64 impalas



**American  
Autowire**

www.americanautowire.com 856-933-0801

Classic Update Series

bag  
**M**

REAR BODY KIT

**510761**

92972681 instruction rev 1.0 06/01/2023

## USE THIS SHEET FOR A 61-64 IMPALA

|            |                                                                                     |                                                                                                                                                      |                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|------------|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A          |    | Connect the main connector to the mating connector on the dash harness (510530), bag G. Route this harness along the door sill, and into trunk area. |                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| LIGHT BLUE |                                                                                     | Third Brake Light                                                                                                                                    | Connect to the third brake lamp, if equipped. |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| B          |    | TAN                                                                                                                                                  | Fuel Tank Lead                                | Route this wire to the fuel sending unit at the rear of the car, measure to the proper length going thru the access hole in trunk floor and cut to length. Slide grommet T onto the wire in the direction shown on sheet 1, slide boot R onto the wire, strip the end and crimp terminal P onto wire. Once terminal P is secured to the wire, pull boot R down over terminal P and install onto sending unit.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| C          |    |                                                                                                                                                      |                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| D          |    | BROWN                                                                                                                                                | Rear Running Lamps                            | Route this wire to the left hand trunk hinge area and trim to length. Double this wire with the cut off portion, install terminal N and plug into connector B as shown on page 1. Route the loose end to the LH tail light area and trim to length. Double this wire with the cut off portion, install terminal D and plug into connector E as shown on page 1. Route the loose end to the right side tail light area and trim to length. Double this wire with the cut off portion, install terminal D and plug into connector E as shown on page 1. Route the loose end to the license plate lamp area going through the access hole in the trunk floor, and trim to length. Slide grommet Q onto the wire in the direction shown on sheet 1. Install terminal J and plug into connector H as shown on page 1. Plug your license lamp assembly into connector H as shown on page 1. If your original license lamp assembly connection is damaged, we have provided new terminal and connector C and L for your convenience. |
| E          |    |                                                                                                                                                      |                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| F          |    |                                                                                                                                                      |                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| G          |    |                                                                                                                                                      |                                               | <b>NOTE:</b> We have provided assembled tail lamp extension pigtails A (yellow/brown LH and dk green/brown RH) as shown on page 1. <b>DO NOT</b> plug connectors E into these pigtails yet!                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| H          |    | YELLOW                                                                                                                                               | LH Stop / Tail                                | Route this wire to the left hand trunk hinge area and trim to length. Double this wire with the cut off portion, install terminal N and plug into connector B as shown on page 1. Route the loose end to the LH tail light area and trim to length. Install terminal C and plug into the open cavity of connector E of the LH tail lamp pigtail A (yellow/brown) as shown on page 1. Plug connector E into LH tail lamp extension pigtail A (yellow/brown).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| J          |    |                                                                                                                                                      |                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| L          |    | DK GREEN                                                                                                                                             | RH Stop / Tail                                | Route this wire to the left hand trunk hinge area and trim to length. Double this wire with the cut off portion, install terminal N and plug into connector B as shown on page 1. Route the loose end to the RH tail light area and trim to length. Install terminal C and plug into the open cavity of connector E of the RH tail lamp pigtail A (dk green/brown) as shown on page 1. Plug connector E into RH tail lamp extension pigtail A (dk green/brown)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| N          |   | LIGHT GREEN                                                                                                                                          | Back Up Feed                                  | Route this wire to the left hand trunk hinge area and trim to length. Install terminal J and plug into connector B as shown on page 1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| P          |  | WHITE                                                                                                                                                | Courtesy Ground                               | If you are using a dome lamp, at the driver's side kick panel area, trim this wire to a length of 10 inches, install terminal J, and plug into connector F as shown on page 1. Use the remaining white wire to create a dome lamp harness using terminals C and S and connector E for sedan models, or terminals D and G for hardtop models as shown on page 1. Be sure to maintain color continuity between connectors E and F.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Q          |  |                                                                                                                                                      |                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| R          |  | ORANGE                                                                                                                                               | Courtesy Feed                                 | If you are using a dome lamp, at the driver's side kick panel area, trim this wire to a length of 10 inches. Double this wire with the cut off portion using terminal N, and plug into connector F containing the white wire as shown on page 1. Route the loose end of this wire to the rear trunk hinge area of the trunk, install terminal J and connector H creating your trunk lamp feed. Use the remaining orange wire to create a dome lamp harness using terminals C and S and connector E for sedan models, or terminals D and G for hardtop models as shown on page 1. Be sure to maintain color continuity between connectors E and F. ( <b>Note:</b> your original factory dome lamp harness will also plug into connector F if you are not replacing the headliner at this time.)                                                                                                                                                                                                                                |
| S          |  |                                                                                                                                                      |                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| T          |  |                                                                                                                                                      |                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |




www.americanautowire.com 856-933-0801

92972681 instruction rev 1.0 06/01/2023

# Deck Lid Harness

This harness routes just as your original factory harness did.

- The orange wire is a constant, fused 12 volt battery feed that may be used to supply power to a trunk lamp or to select programmable LED light controllers. This wire gets power from the “BRK/CTSY” fuse.
- The light green wires are for the back up lamps.
- The brown, yellow and dark green wires are for the tail, stop and turn lamps.
- The 4-position connector (A) with light green, brown, yellow, and dark green wires and the single-position connector (B) with the orange wire will plug into the rear body harness at the trunk hinge area inside of your trunk lid.

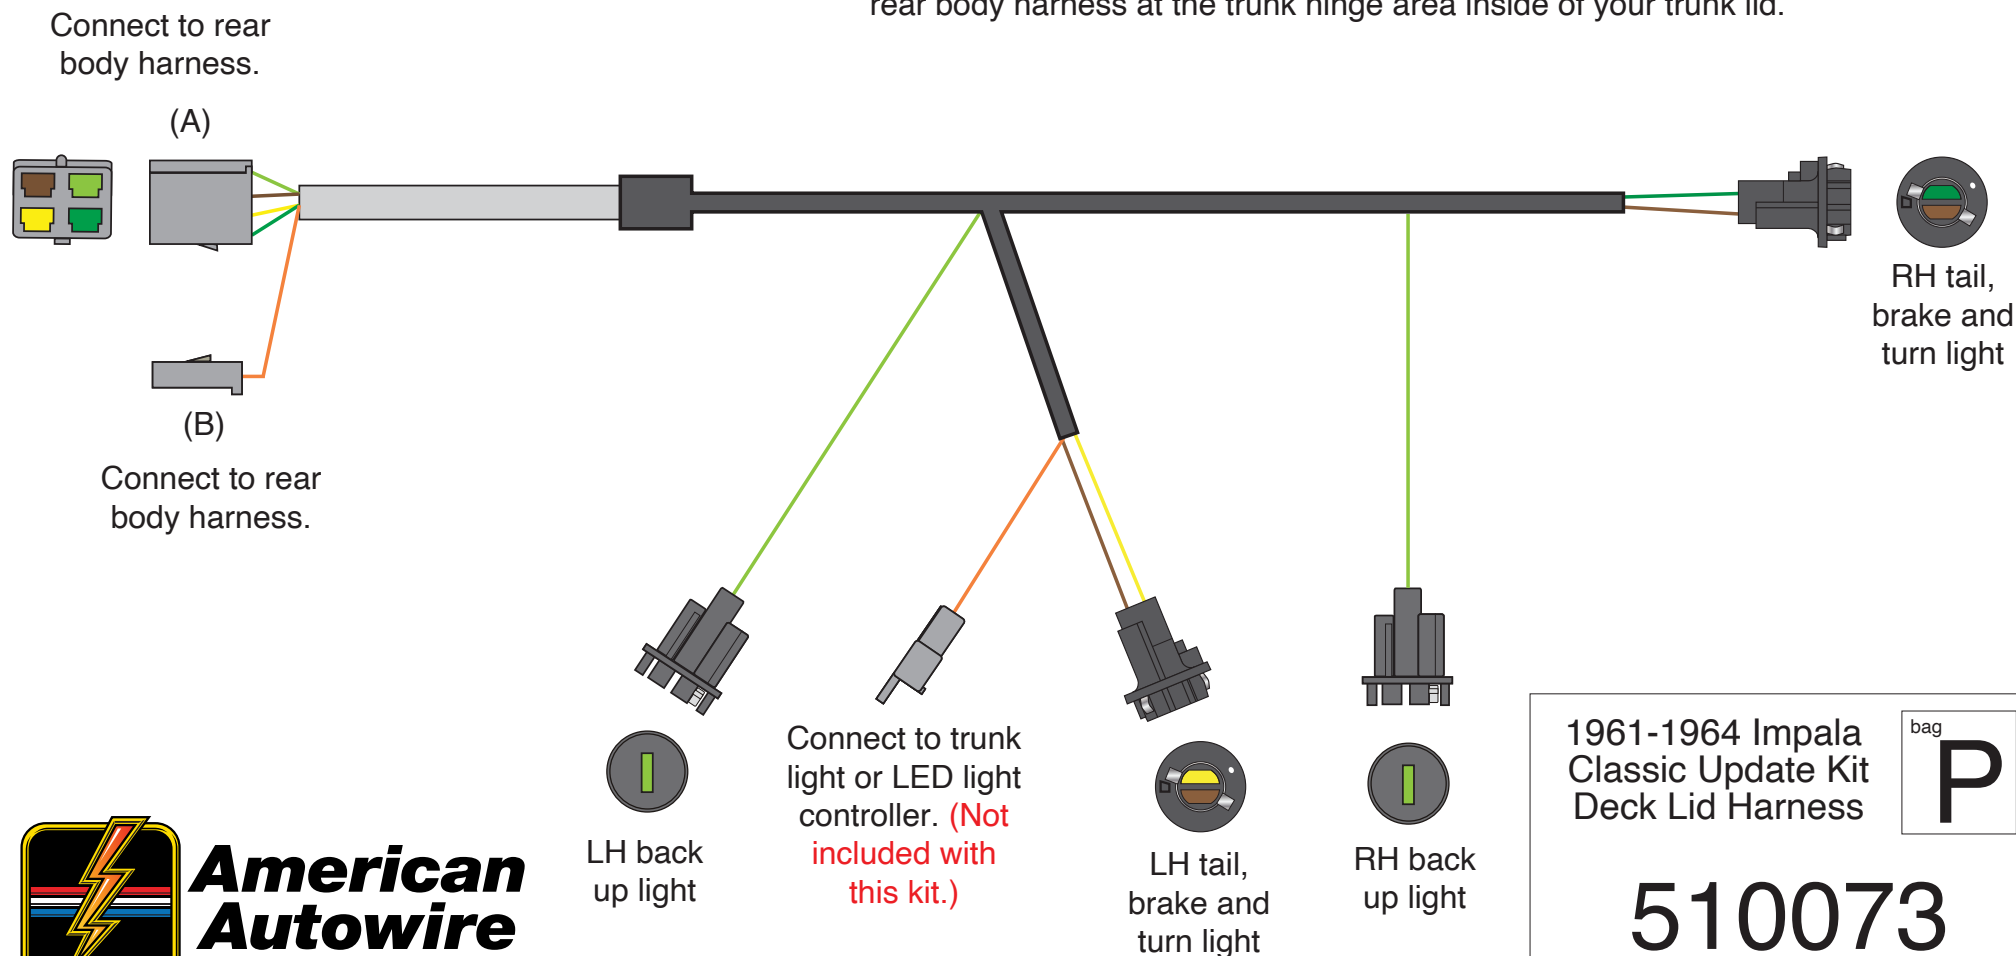

**American  
Autowire**

www.americanautowire.com 856-933-0801

1961-1964 Impala  
Classic Update Kit  
Deck Lid Harness

bag  
**P**

**510073**


92968974 instruction rev 2.0 5/12/2023



Most switches supplied with Classic Update and Universal Kits ship with the shaft pre-installed. In many instances, the switch can be installed without removing the shaft, but in some cases the switch shaft may need to be trimmed to fit your specific dash. In this situation, reference Trim to Fit instructions on the back of this page for details.

### To install your new headlight switch:

1. Install the switch from behind the dash, and align the switch body with the mounting hole. The switch body has an alignment tab that must line up with the notch in the dashboard mounting hole.

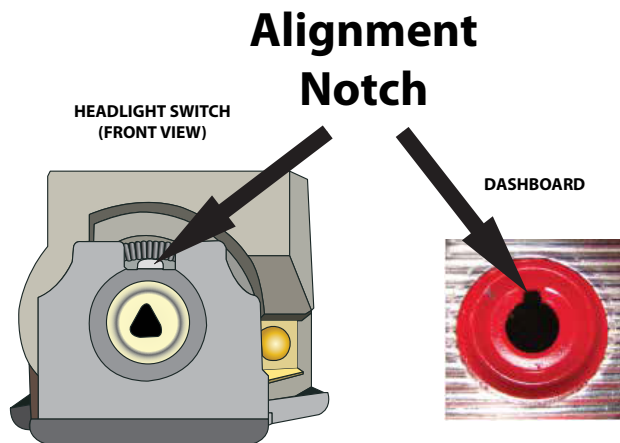


2. Install the switch mounting nut and tighten.

3. Gently press shaft into switch until it stops, then press firmly until it “clicks.” Pull shaft back out to confirm it is seated correctly. The shaft should be locked into place inside switch.

4. If the shaft does not lock, reinsert applying moderate pressure and slowly move shaft side to side for lock to engage. Make sure switch body is still supported to prevent flexing. Press shaft firmly until it clicks into place.

5. Ensure the shaft is fully seated and in the off position.

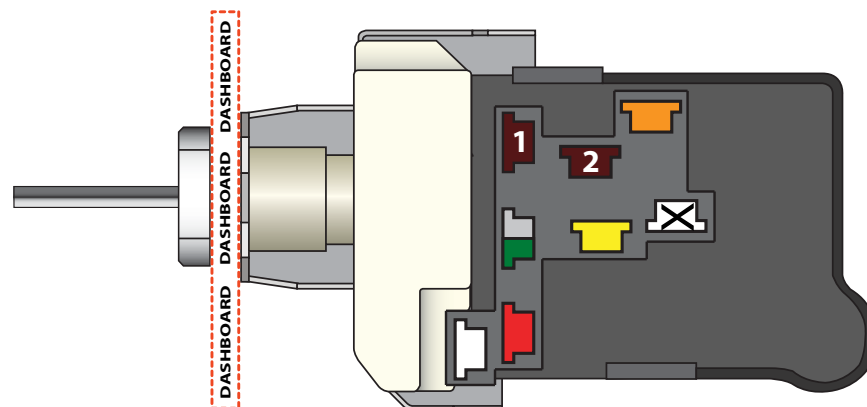

|              |                                                                                             |
|--------------|---------------------------------------------------------------------------------------------|
| 1            | Parking Lights - Stay on with headlights                                                    |
| 2            | Tail Lights - On in the park and headlight positions                                        |
| Orange       | Fused Battery Feed - For park, tail and dash lamps                                          |
| Yellow       | Headlight Feed - Power to the headlight dimmer switch                                       |
| Red          | 12V Battery Feed - Unfused power to the switch for headlights                               |
| White        | Courtesy Ground - Ground feed to the dome and courtesy lights                               |
| White with X | Part-time Parking Lights - Turns off when the headlights are on (Not supported by all kits) |
| OR Green     | Dash Lights - Output to the dash light fuse or lights                                       |



**American  
Autowire**

www.americanautowire.com 856-933-0801

PART #

**500332**

DESCRIPTION:

**Headlight Switch**


92964649 Rev 3.0 1/10/2020

## To Trim Shaft to Fit or Remove Shaft:



The headlight shaft knob should extend from the face of the mounting nut, and must allow enough clearance for the switch to turn off. If the shaft is longer than necessary for your specific dash it can be trimmed to fit. Always trim the knob end of the shaft only and follow the guidelines below for best results.

1. With the headlight switch installed, loosen the set screw and remove the knob. Make sure the switch is in the "off" position by pushing the shaft toward the back of the switch.




**Switch in OFF position  
(shaft pushed all the way in)**

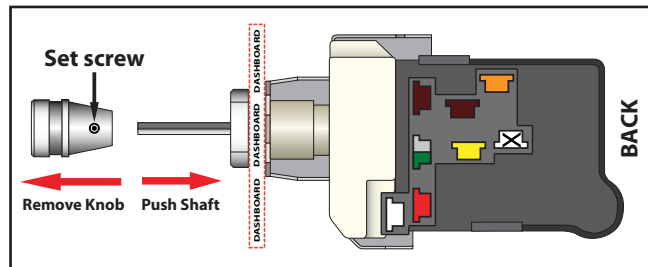


2. Set knob alongside shaft and mark the desired location for cutting on the shaft.

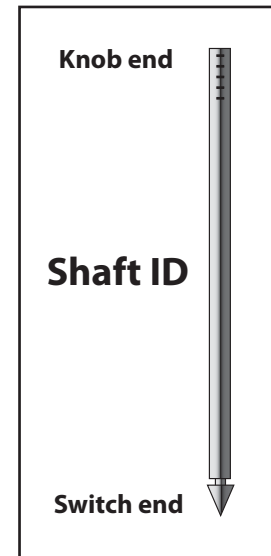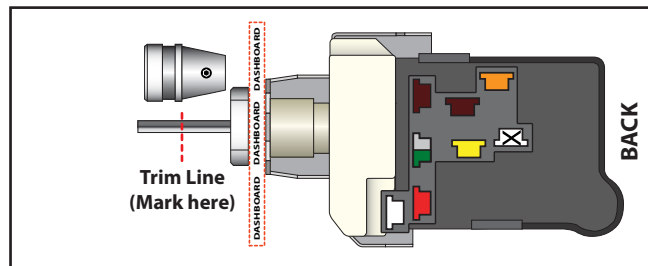

3. Remove the shaft and trim at mark. The shaft can be released from the switch by pulling it outward (toward the rear of the vehicle). Once fully in the "On" position, press and hold the release button on the base of the switch body. Once button is pressed, continue to pull the shaft outward. New switches may be tight, and it might be necessary to move the shaft side to side slightly while pulling to release.

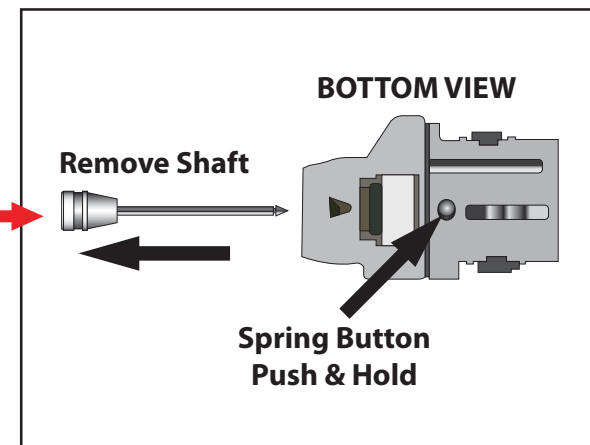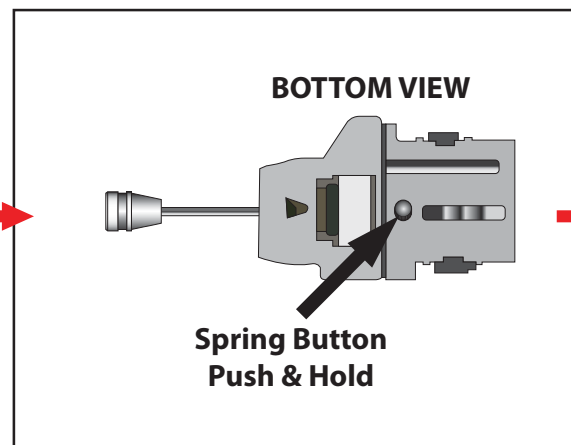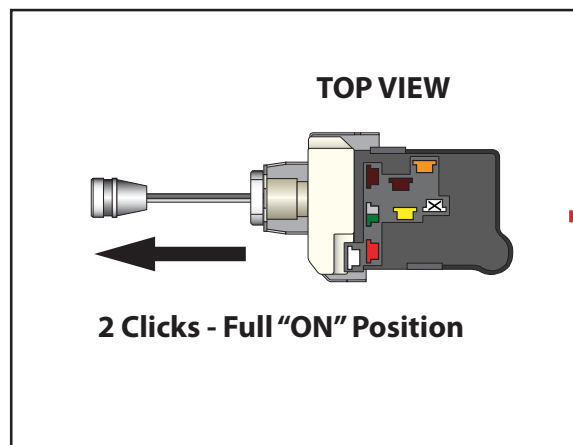

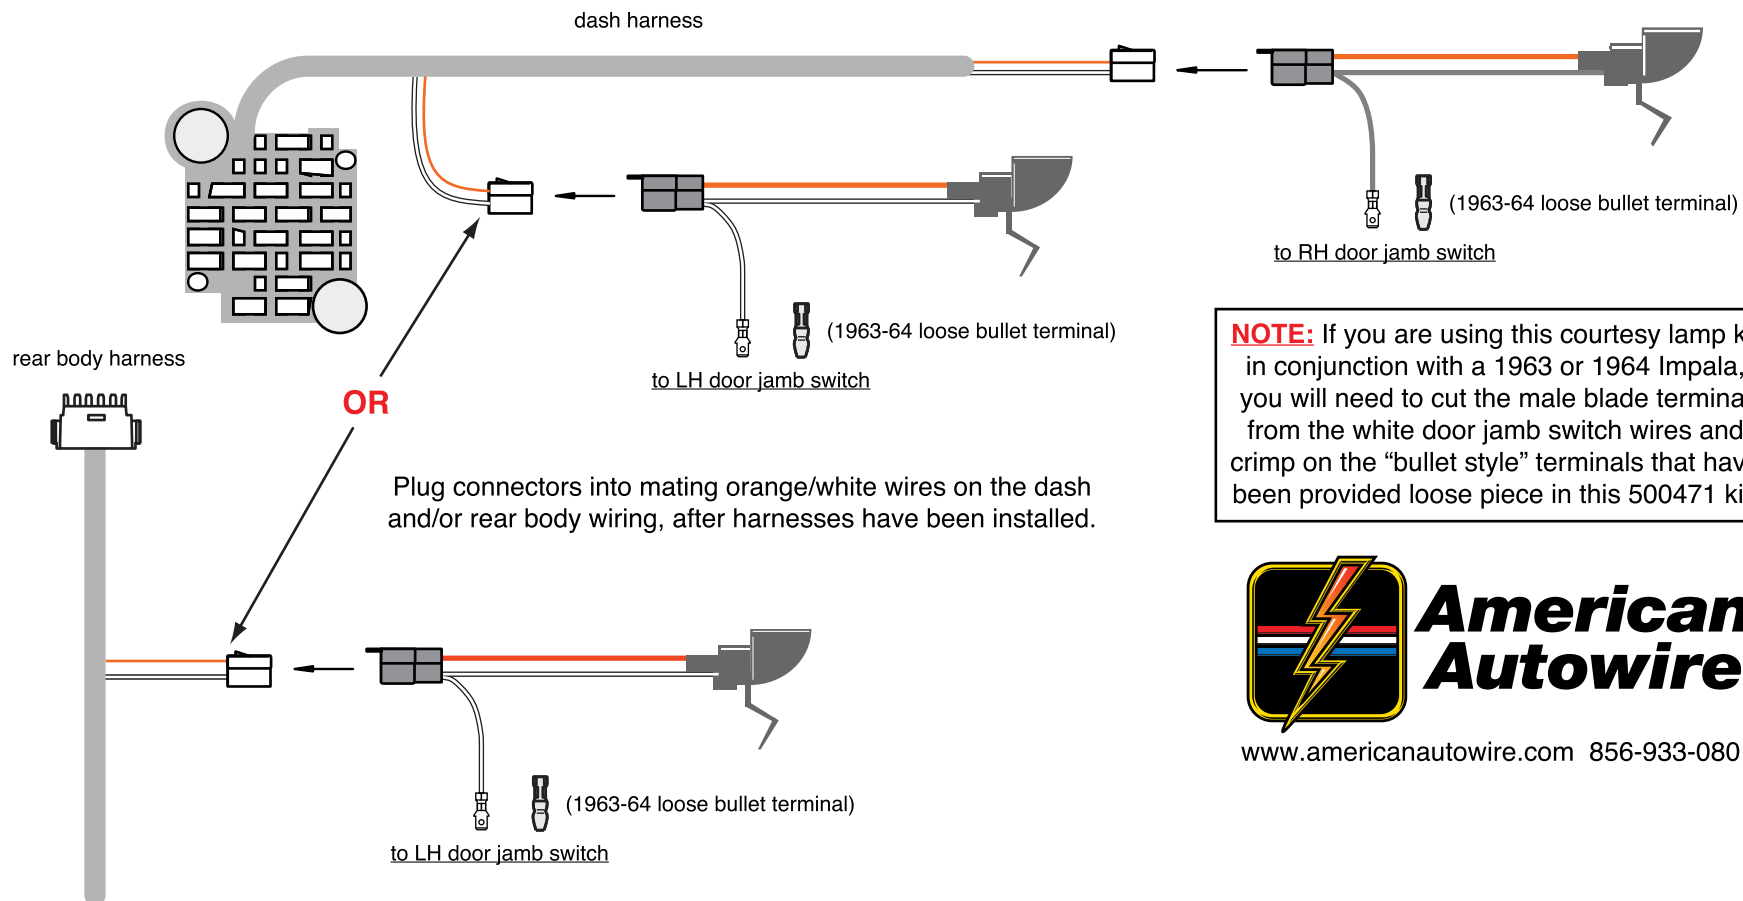

**NOTE:** If you are using this courtesy lamp kit in conjunction with a 1963 or 1964 Impala, you will need to cut the male blade terminal from the white door jamb switch wires and crimp on the "bullet style" terminals that have been provided loose piece in this 500471 kit.



**American  
Autowire**

www.americanautowire.com 856-933-0801

**NOTE:** Your new underdash courtesy lamp kit uses # 631 bulbs (not included with this kit). They may be purchased at any auto parts store.

PART #

**500471**

**N**

DESCRIPTION:

Courtesy Lamp Kit


92965219

Rev 3.0


12/20/2019

## CONNECTOR "D" DETAIL:


**NOTE:** The wire colors below are shown looking into the face of the connector with the wires plugged in from behind.

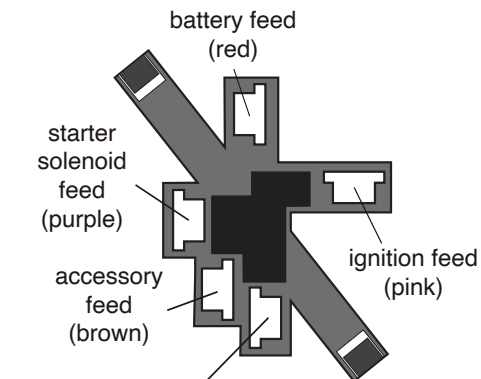

## IGNITION SWITCH DETAIL:

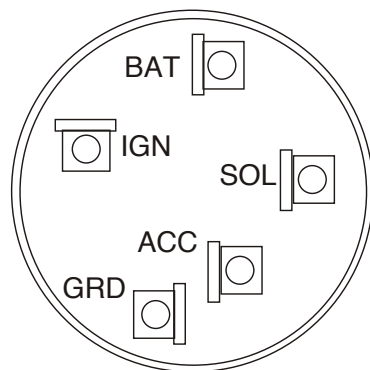

Connector "D" is pre-wired on the dash harness. This is not a loose connector.

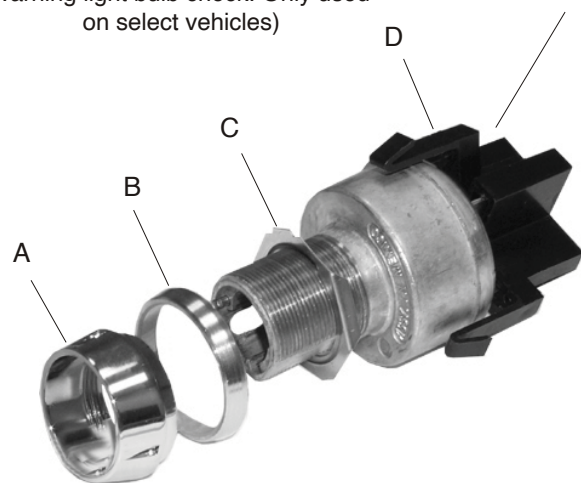

500672:



500674:



## INSTALLATION:

**NOTE:** This package may include a copper lamp holder bracket. That bracket is not used in this application and its installation can be ignored.

1. Due to the nature of the chrome plating on threaded collar A, AAW recommends threading the nut on and off of the switch by hand a few times to clean up the threads before installing the switch into your dash.
2. Plug in connector D from the dash wiring harness (bag G).
3. Install the back-up nut C onto the switch. The depth of this nut will have to be determined when mounting the switch.
4. Insert the switch into the hole in the dash panel.
5. Install your original dash bezel plate.
6. Slide on collar B.
7. Screw on threaded collar A
8. Insert your original or New AAW lock cylinder into the new switch to complete your installation.

**NOTE:** AAW has new lock cylinders with the correct GM style keys for this ignition switch. Check the table below for the correct key and tumber for your vehicle.

| CLASSIC UPDATE KIT PART # | CLASSIC UPDATE APPLICATION | KEY & LOCK CYLINDER PART # REQUIRED |
|---------------------------|----------------------------|-------------------------------------|
| 500423                    | 1955-56 Chevy Car          | 500672                              |
| 500434                    | 1957 Chevy Car             | 500672                              |
| 500481                    | 1955-59 Chevy Truck        | 500672                              |
| 510217                    | 1959-60 Chevy Impala       | 500672                              |
| 510063                    | 1961-64 Chevy Impala       | 500672                              |
| 510267                    | 1953-62 Chevy Corvette     | 500672                              |
| 500467                    | 1947-55 Chevy Truck        | 500674                              |
| 500560                    | 1960-66 Chevy truck        | 500674                              |
| 510360                    | 1965 Chevy Impala          | 500674                              |
| 510372                    | 1966-68 Chevy Impala       | 500674                              |

**NOTE:** Please keep in mind that this is an upgraded switch, not an original replacement, and as such, the flat side on this switch may be in a different location than was your original. If you mount this new AAW switch in your dash and the flat side is in fact in a different location, the key may not line up as the original did. This will not alter the performance of the switch in any way. If you wish for your key to line up as it did in the OEM application, you will need to file out the flat spot in your original dash opening so that the switch can be rotated to the correct position. Once the backing nut C is set so that the depth of the switch is correct for your application, and bezel nut A is firmly tightened, the switch will be secure and will not rotate.



**American  
Autowire**

www.americanautowire.com 856-933-0801

**IGNITION SWITCH**  
Classic Update Series  
VARIOUS APPLICATIONS


**510632**

92972596 instruction rev 1.0 10/10/2024

Most switches supplied with Classic Update and Universal Kits ship with the shaft pre-installed. In many instances, the switch can be installed without removing the shaft, but in some cases the switch shaft may need to be trimmed to fit your specific dash. In this situation, reference Trim to Fit instructions on the back of this page for details.

### To install your new headlight switch:

1. Install the switch from behind the dash, and align the switch body with the mounting hole. The switch body has an alignment tab that must line up with the notch in the dashboard mounting hole.

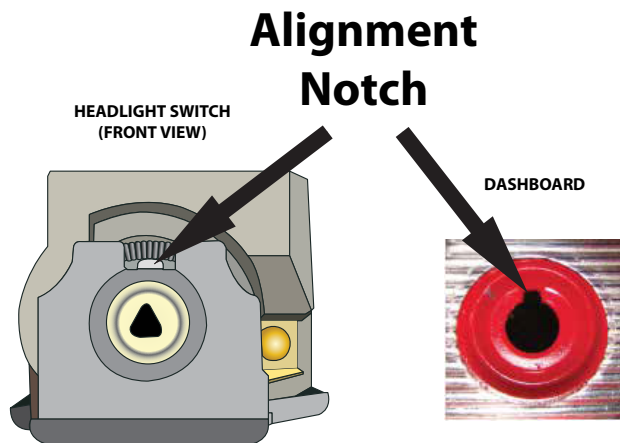


2. Install the switch mounting nut and tighten.

3. Gently press shaft into switch until it stops, then press firmly until it "clicks." Pull shaft back out to confirm it is seated correctly. The shaft should be locked into place inside switch.

4. If the shaft does not lock, reinsert applying moderate pressure and slowly move shaft side to side for lock to engage. Make sure switch body is still supported to prevent flexing. Press shaft firmly until it clicks into place.

5. Ensure the shaft is fully seated and in the off position.

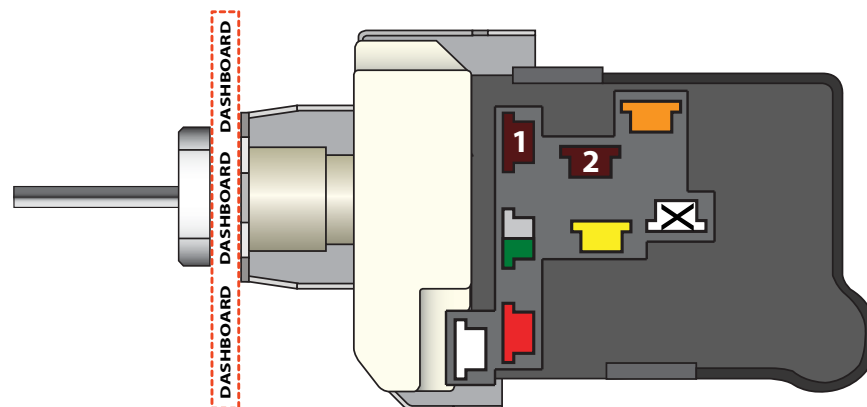

|          |                                                                                                |
|----------|------------------------------------------------------------------------------------------------|
| 1        | Parking Lights - Stay on with headlights                                                       |
| 2        | Tail Lights - On in the park and headlight positions                                           |
| Orange   | Fused Battery Feed - For park, tail and dash lamps                                             |
| Yellow   | Headlight Feed - Power to the headlight dimmer switch                                          |
| Red      | 12V Battery Feed - Unfused power to the switch for headlights                                  |
| White    | Courtesy Ground - Ground feed to the dome and courtesy lights                                  |
| X        | Part-time Parking Lights - Turns off when the headlights are on<br>(Not supported by all kits) |
| OR Green | Dash Lights - Output to the dash light fuse or lights                                          |



**American  
Autowire**

www.americanautowire.com 856-933-0801

PART #

**500332**

DESCRIPTION:

**Headlight Switch**


92964649 Rev 3.0 1/10/2020

## To Trim Shaft to Fit or Remove Shaft:



The headlight shaft knob should extend from the face of the mounting nut, and must allow enough clearance for the switch to turn off. If the shaft is longer than necessary for your specific dash it can be trimmed to fit. Always trim the knob end of the shaft only and follow the guidelines below for best results.

1. With the headlight switch installed, loosen the set screw and remove the knob. Make sure the switch is in the "off" position by pushing the shaft toward the back of the switch.




**Switch in OFF position  
(shaft pushed all the way in)**

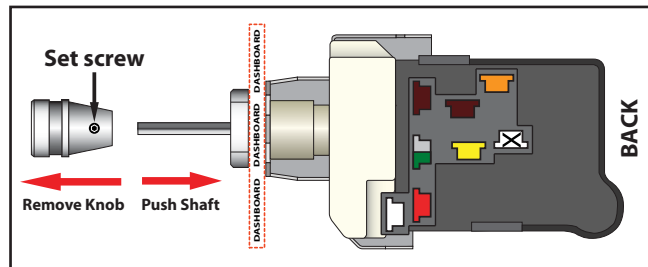


2. Set knob alongside shaft and mark the desired location for cutting on the shaft.

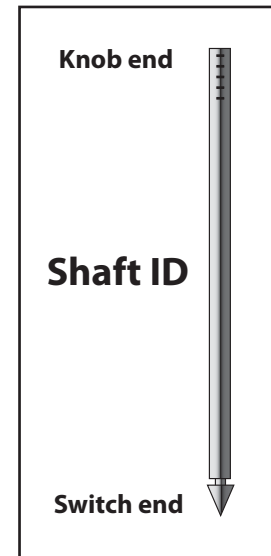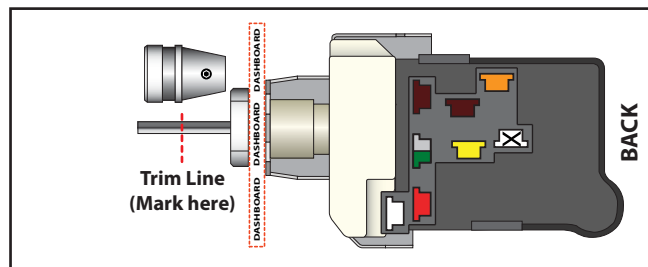

3. Remove the shaft and trim at mark. The shaft can be released from the switch by pulling it outward (toward the rear of the vehicle). Once fully in the "On" position, press and hold the release button on the base of the switch body. Once button is pressed, continue to pull the shaft outward. New switches may be tight, and it might be necessary to move the shaft side to side slightly while pulling to release.

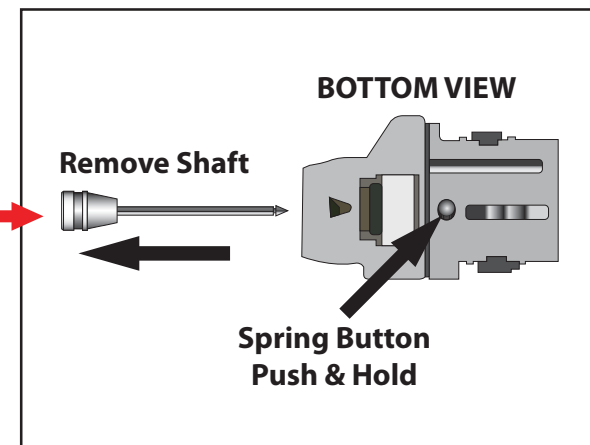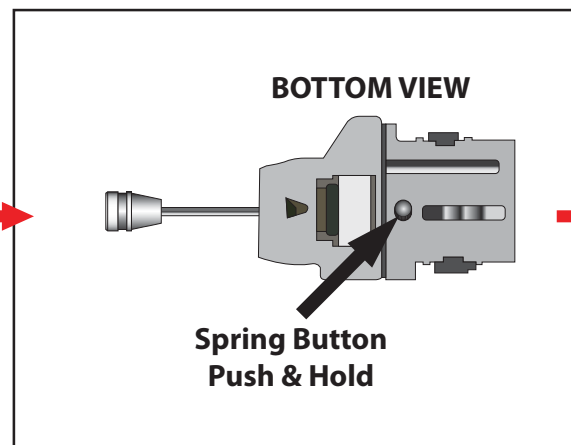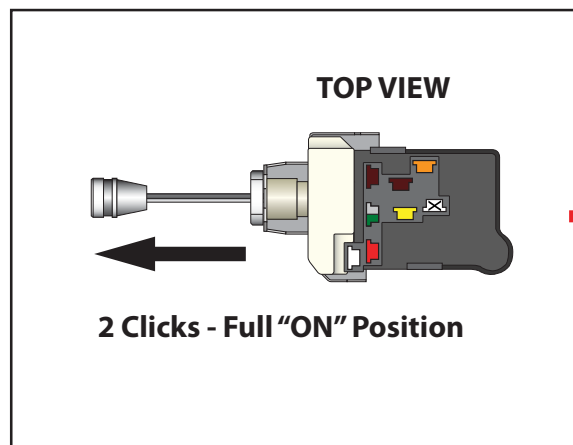



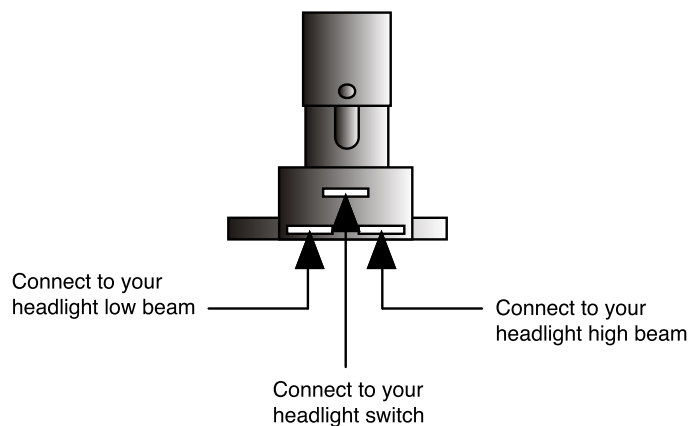

Connect the Dimmer Switch wires as shown above.

1. The top center terminal of the Dimmer Switch is connected to the Headlight switch.
2. The terminal on the right side is connected to your headlight high beam terminal.
3. The terminal on the left side is connected to your headlight low beam terminal.



www.americanautowire.com 856-933-0801


PART #

**500042**

DESCRIPTION:

**DIMMER SWITCH**

92964573 Rev 3.1 12/5/2014

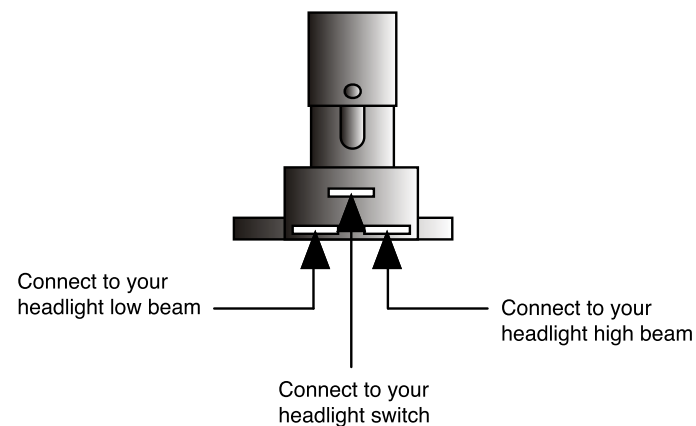

Connect the Dimmer Switch wires as shown above.

1. The top center terminal of the Dimmer Switch is connected to the Headlight switch.
2. The terminal on the right side is connected to your headlight high beam terminal.
3. The terminal on the left side is connected to your headlight low beam terminal.



www.americanautowire.com 856-933-0801

PART #

**500042**

DESCRIPTION:

**DIMMER SWITCH**

92964573 Rev 3.1 12/5/2014