


courtesy lamp connector  
from dash harness (bag G)



optional door  
jamb switch

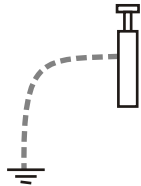

orange

white



install on driver side, under dash

### INSTALLATION:

1. Mount the lamp socket (with shorter wires) under the dash, on the driver side.
2. Mount the lamp socket (with longer wires) under the dash, on the passenger side.
3. Route all wires to the courtesy lamp connector area (item #5 on the 92965539 - instruction set).
4. Trim all wires to length, and install the supplied male terminals, doubling the orange wires together, and the white wires together, as shown.
5. Plug these wires into the supplied connector, maintaining color continuity with the mating connector on the dash harness.


NOTE: If you wish to use a door jamb switch to activate courtesy lamps, simply connect the white wire to a grounded door jamb switch, as well as to the dash connector as shown.

optional door  
jamb switch



orange

white

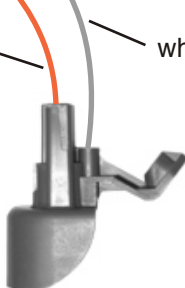

install on passenger side, under dash

**NOTE:** Your new underdash courtesy lamp kit uses # 631 bulbs (not included with this kit). They may be purchased at any auto parts store.



**American  
Autowire**

www.americanautowire.com 856-933-0801

COURTESY  
LAMP KIT

bag

N

1960-66 Truck

**500614**

92965679 Rev 1.0 8/19/2013