


92969523

main connector

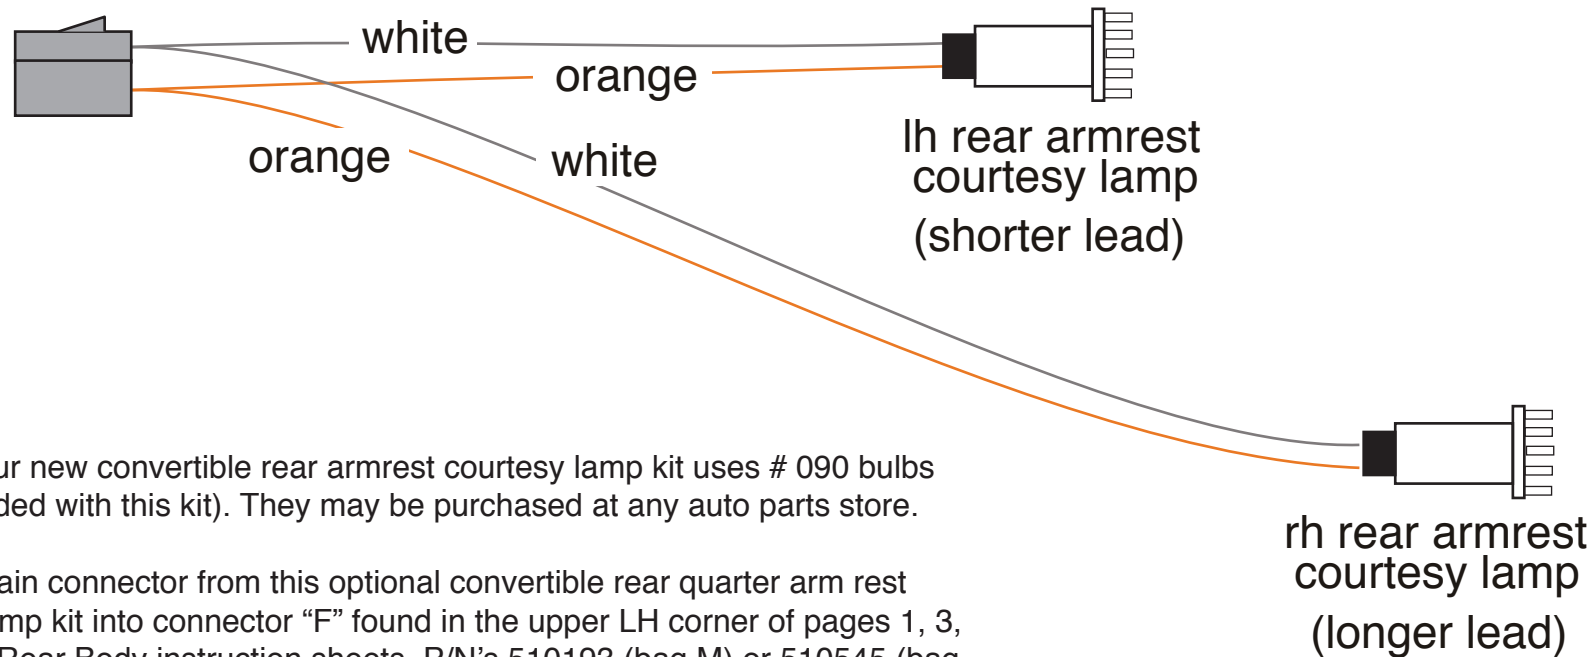

NOTE: Your new convertible rear armrest courtesy lamp kit uses # 090 bulbs (not included with this kit). They may be purchased at any auto parts store.

1. Plug the main connector from this optional convertible rear quarter arm rest courtesy lamp kit into connector "F" found in the upper LH corner of pages 1, 3, or 5 of the Rear Body instruction sheets, P/N's 510193 (bag M) or 510545 (bag M). This connection should be made in the area of the left hand trunk hinge location. The shorter of the lamp socket leads should be routed to the LH or driver side rear arm rest assembly while the longer lead should be routed to the RH or passenger side rear arm rest assembly. No other installation is necessary to complete this task.



**American
Autowire**

www.americanautowire.com 856-933-0801

