


1. Install the new switch into your dash using your original bezel and nut.

 Attach the knob to the shaft and tighten the locking screw.
Plug the wiper connector from branch 3 of the 92970069 instruction set onto the wiper switch assembly now mounted in the dash to complete the switch installation.

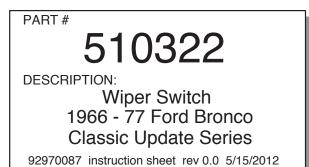

www.americanautowire.com 856-933-0801





1. Install the new switch into your dash using your original bezel and nut.

 Attach the knob to the shaft and tighten the locking screw.
Plug the wiper connector from branch 3 of the 92970069 instruction set onto the wiper switch assembly now mounted in the dash to complete the switch installation.



www.americanautowire.com 856-933-0801

510322

Wiper Switch 1966 - 77 Ford Bronco Classic Update Series

92970087 instruction sheet rev 0.0 5/15/2012