


92970101

Snap this tan wire and lamp socket assembly into the stock dash parking brake warning lamp socket location.

Plug this pink wire lead into the dash/main harness assembly (510269, bag G) as shown on the dash/main harness instructions.

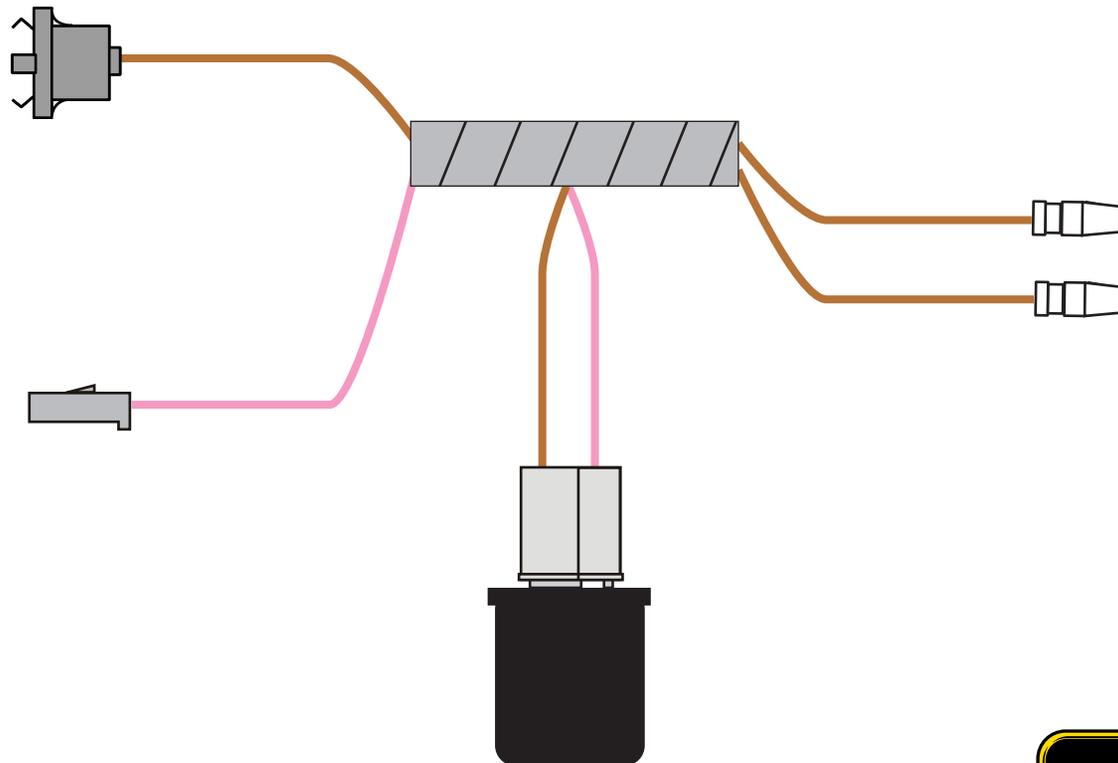

Plug these 2 leads into your stock original parking brake warning lamp switch assembly.

NOTE: Please be aware that you will need to have a correct working parking brake warning lamp switch assembly for this optional kit to work as this switch is not available in the aftermarket, and is **NOT INCLUDED** with this kit. It is **NOT** necessary that you use a 257 flashing light bulb with this kit as was original on the 1961-62 cars. Simply use a stock 053 bulb for all applications.

1. Plug the two tan leads with the “bullet” terminals installed on them from above right into your existing stock parking brake warning lamp switch assembly. There is no indexing required on that switch assembly, so either wire can be plugged into either receptacle on that switch .
2. Plug the tan lead with the lamp socket installed on it from above left into the stock dash parking brake warning lamp socket location.
3. Plug the pink lead with the black plastic connector on it from above left into the dash/main harness (510269, bag G) at the location that is shown on the dash/main instruction set.



**American
Autowire**

www.americanautowire.com 856-933-0801

