



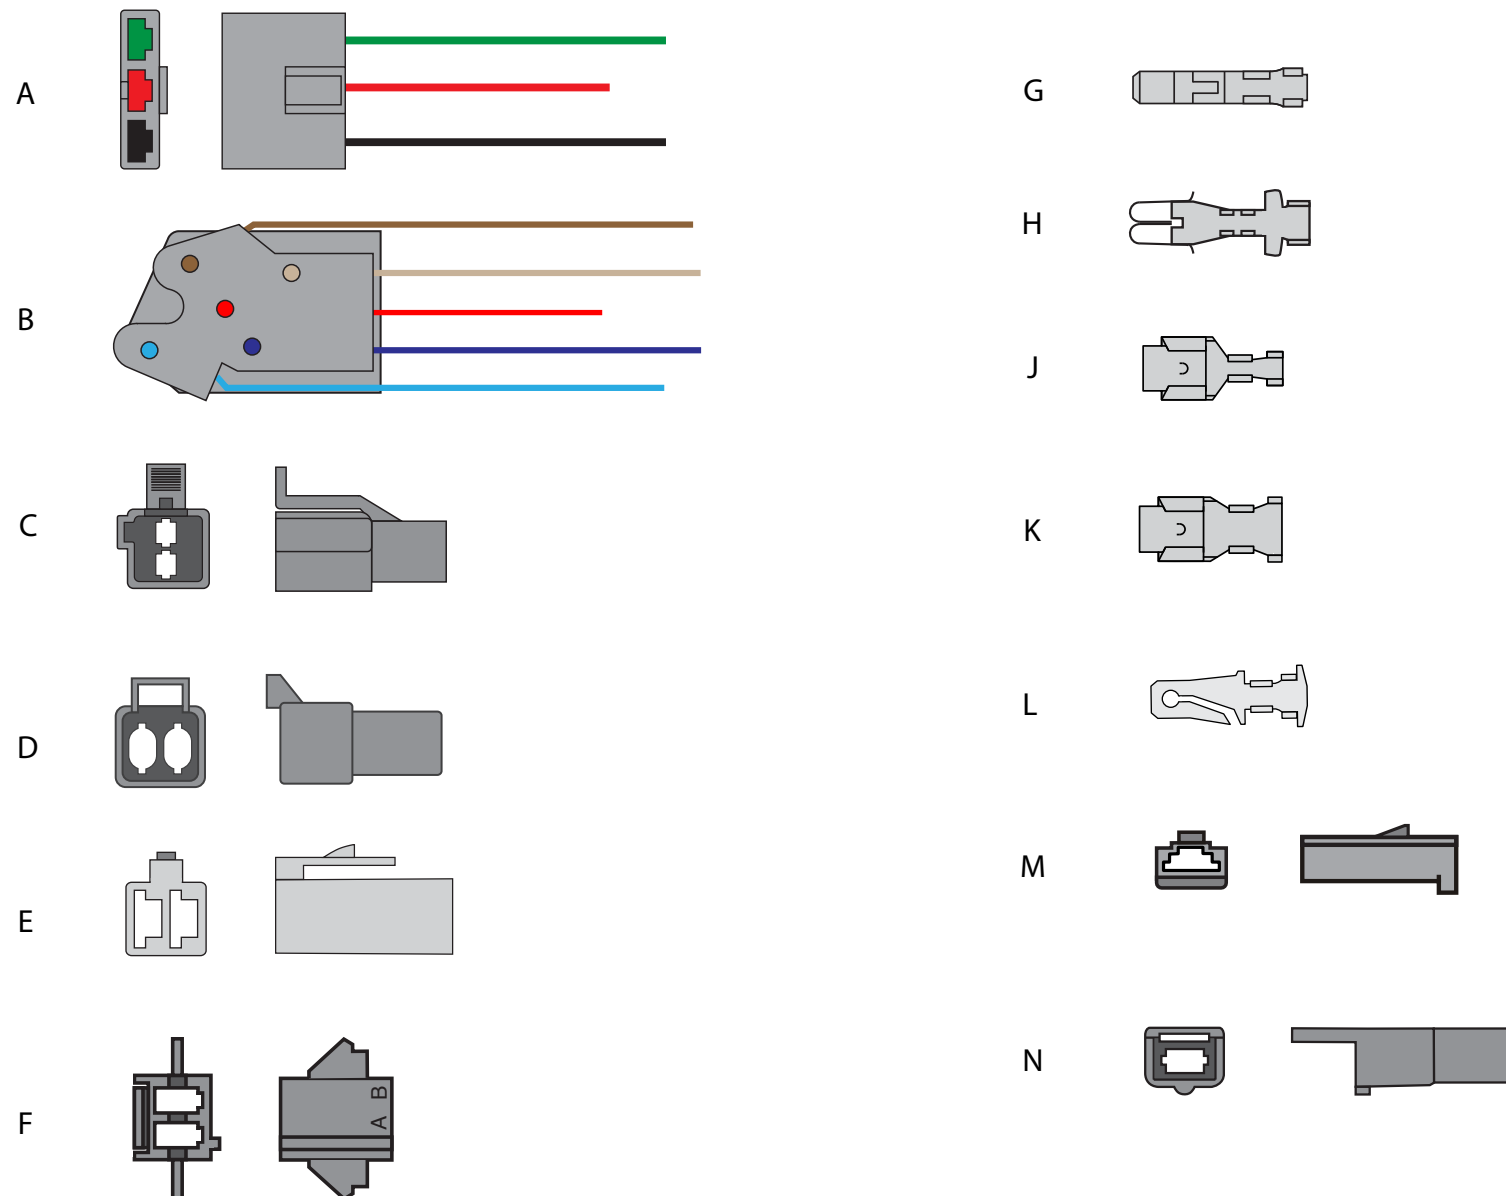

American Autowire

1. This kit is designed to work with our 510683 Firebird Classic Update Kit. It is **NOT** intended to be used by itself or with any other aftermarket electrical system.

2. This kit requires that you use the factory door harnesses. American Autowire does offer factory door harnesses for most applications, most require that you send in your original door boot for reuse.

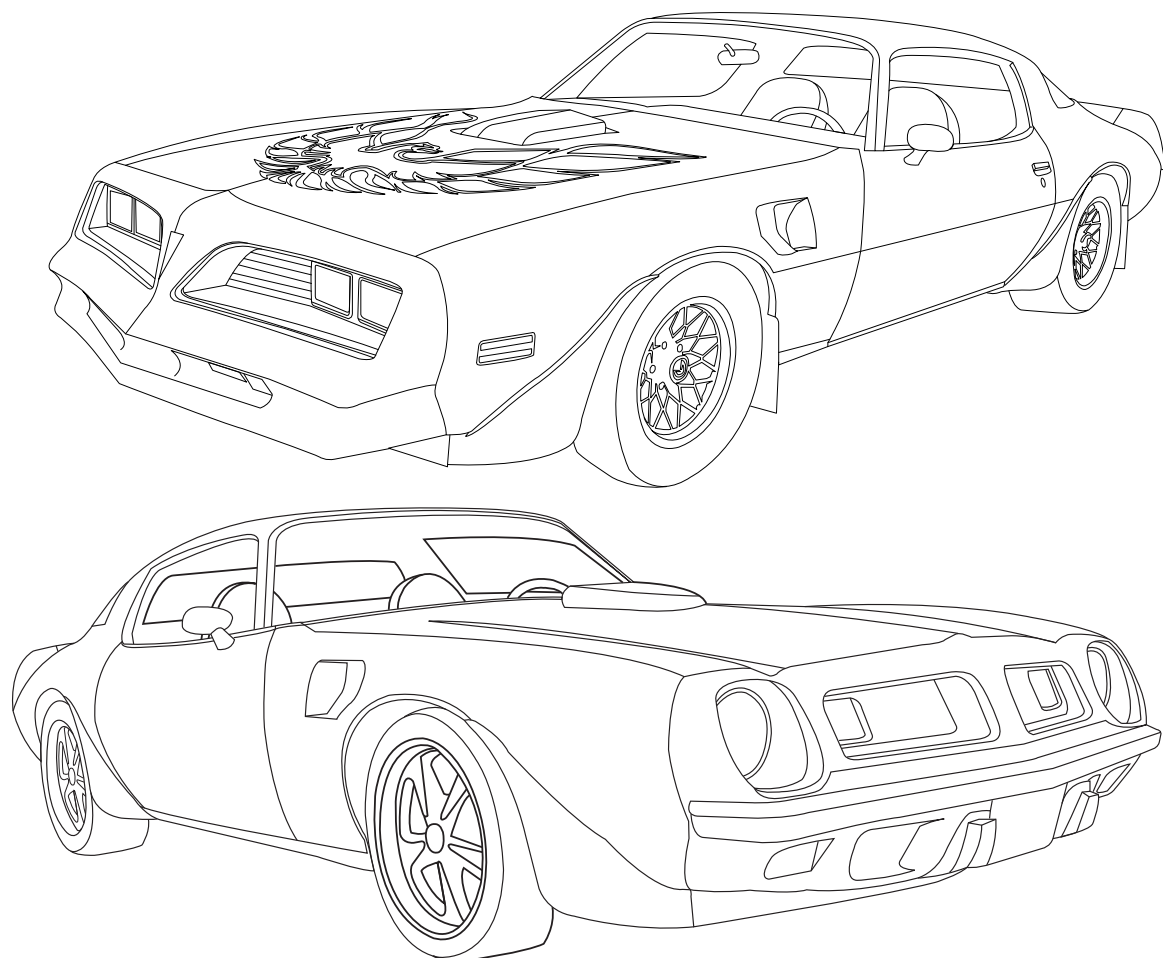

1974-76 Firebird *Classic Update Series* *Power Window and Lock Kit*

510703

© COPYRIGHT 2004 American Autowire / Factory-Fit
Used with express permission of
American Autowire / Factory-Fit


www.americanautowire.com 856-933-0801

Power Window and
Lock Kit
1974-76 Firebird
Classic Update Series
510703
92971863



Rev 0.1 9/12/2017 JM

Power lock harness installation instructions:

1974-75

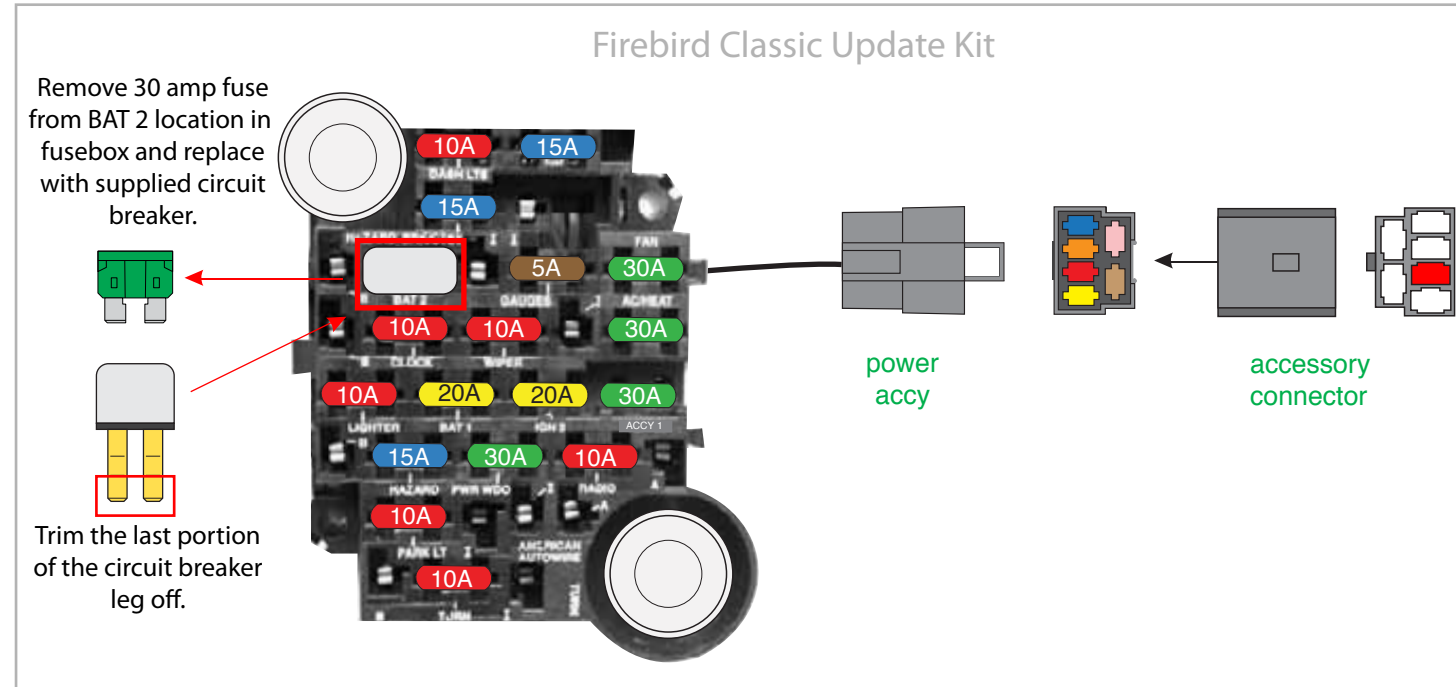


Use the accessory connector supplied with your Classic Update Kit. Plug into cavity indicated in red for battery power.

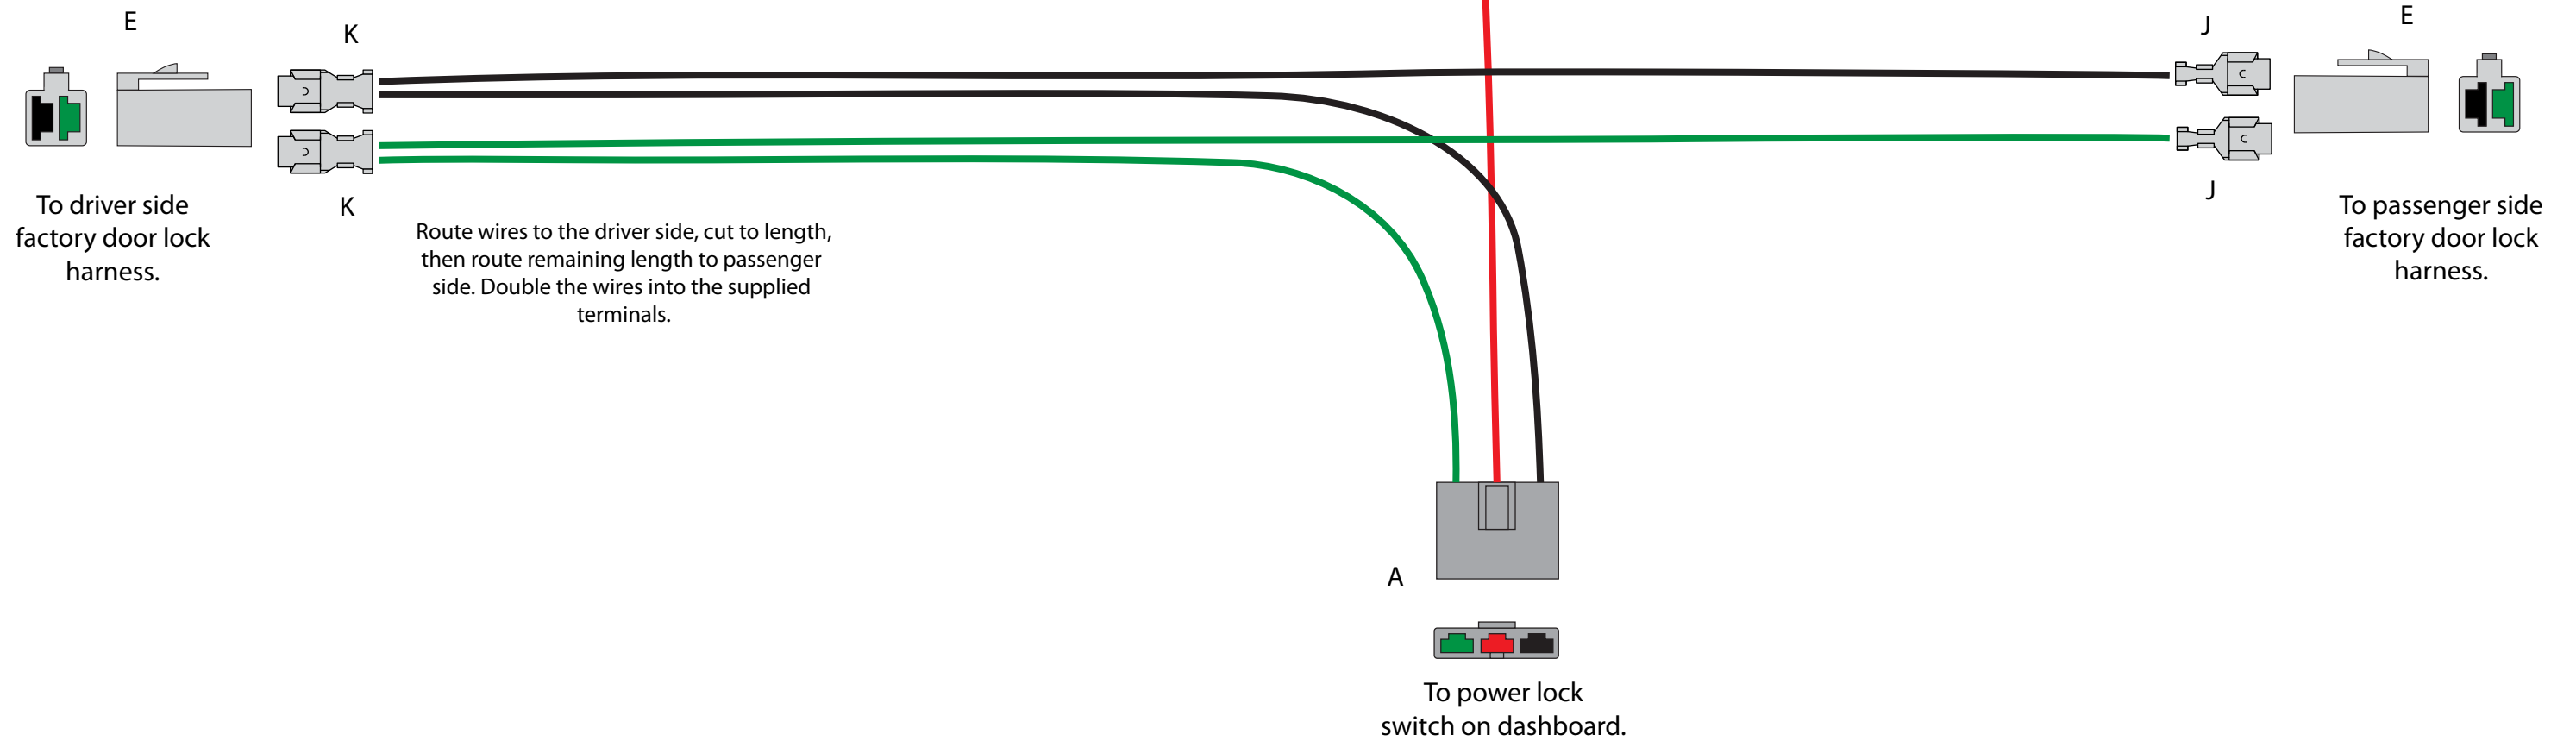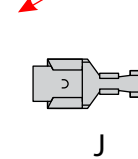

Power window harness installation instructions:

92971863

1974-75

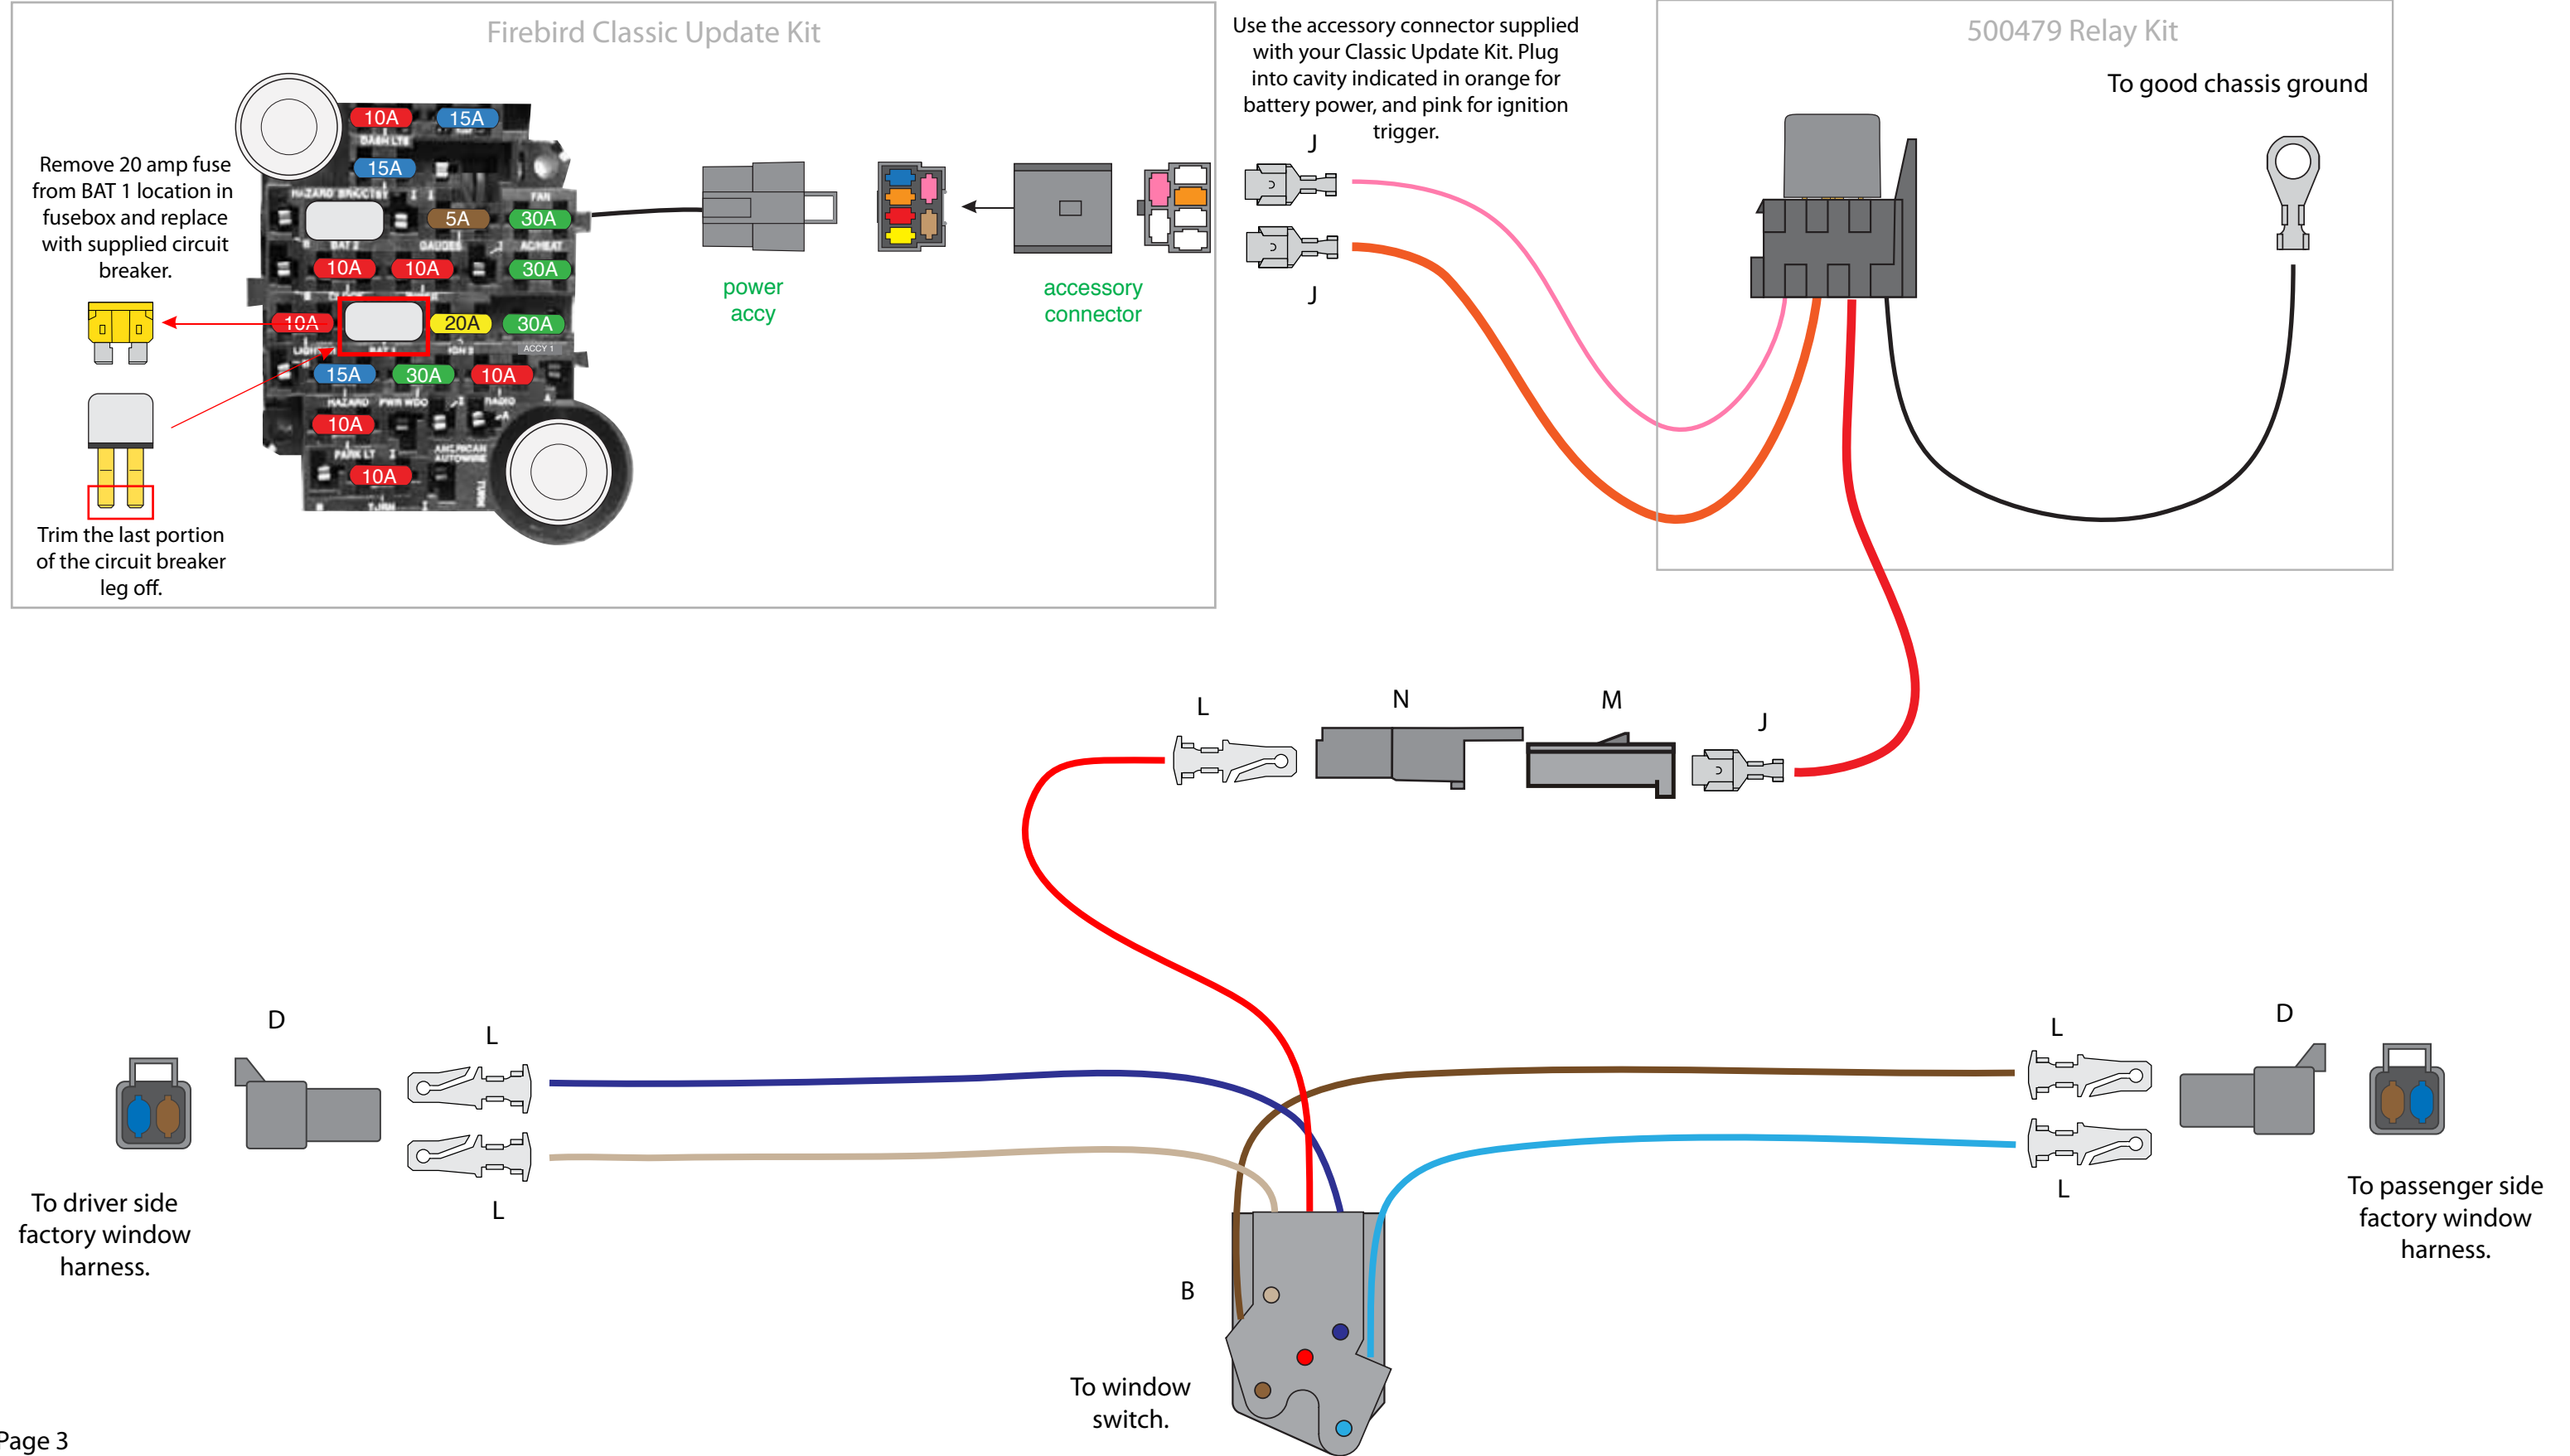


Power lock harness installation instructions:



1976

Firebird Classic Update Kit



Remove 30 amp fuse from BAT 2 location in fusebox and replace with supplied circuit breaker.

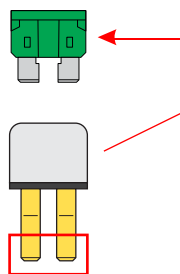



Trim the last portion of the circuit breaker leg off.

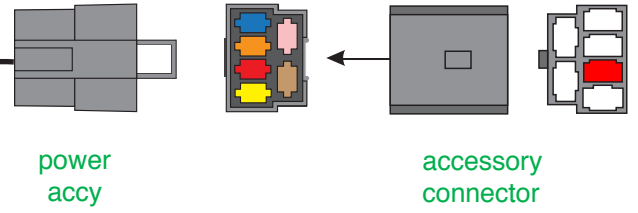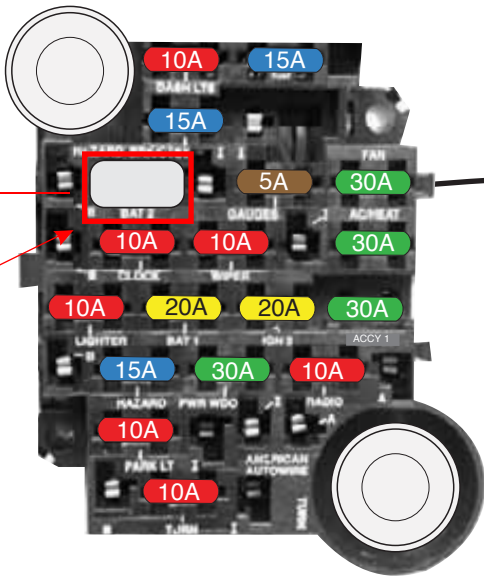


Use the accessory connector supplied with your Classic Update Kit. Plug into cavity indicated in red for battery power.

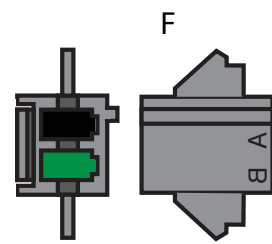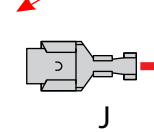

To driver side factory door lock harness.

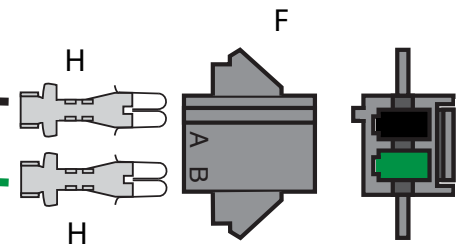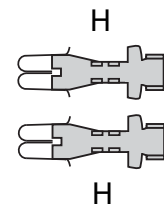

To passenger side factory door lock harness.

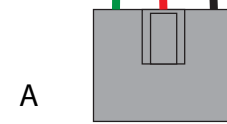


To power lock switch on dashboard.

Power window harness installation instructions:

92971863

1976

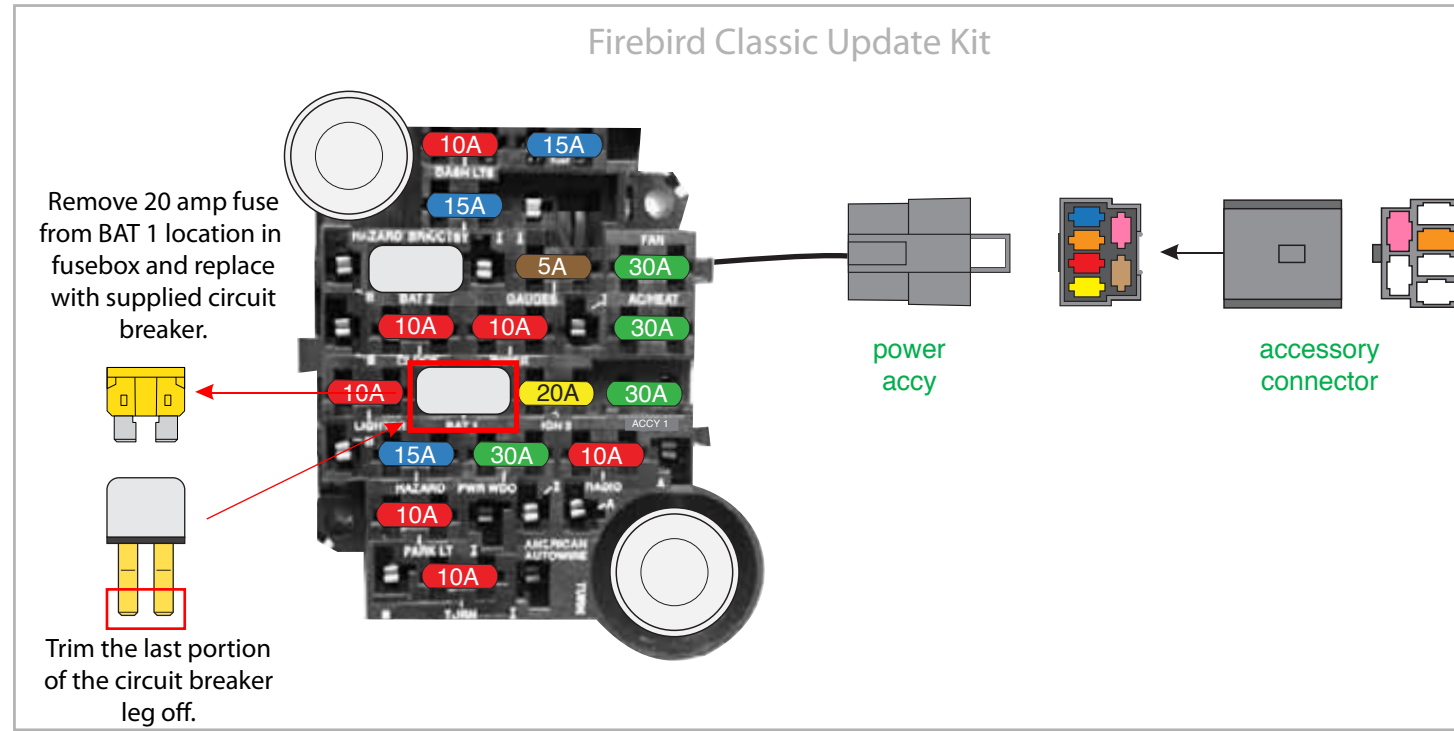

Use the accessory connector supplied with your Classic Update Kit. Plug into cavity indicated in orange for battery power, and pink for ignition trigger.

