



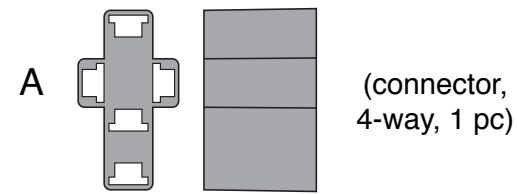

American Autowire


1. This kit is designed to work with our **510706** 1983-87 Chevy Truck Classic Update Kit. It is **NOT** intended to be used by itself or with any other aftermarket electrical system.

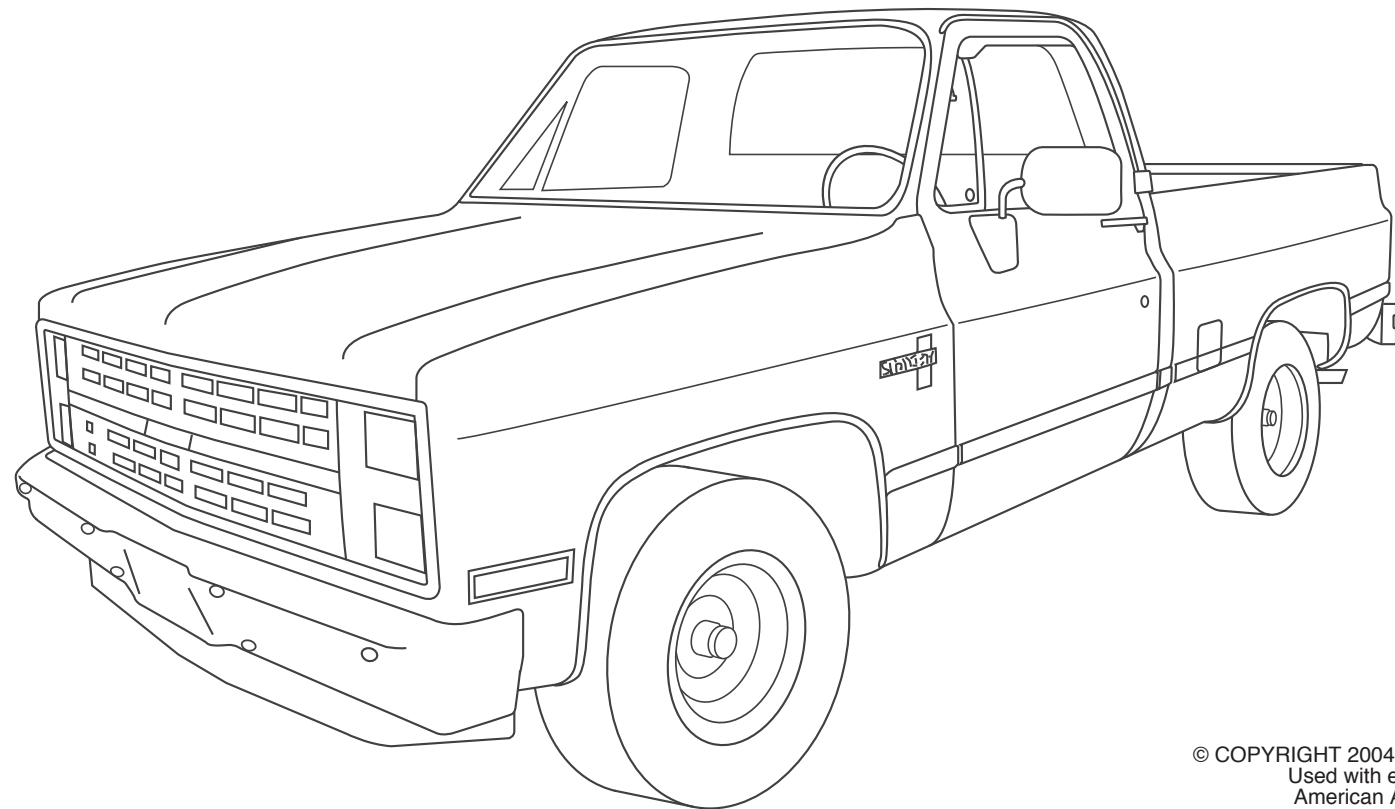


(connector, 4-way, 1 pc)



(connector, 4-way, 1 pc)



(terminal, female single, 11 pcs)



(terminal, female double, 5 pcs)




(grommet, pin, 1 pc)



(connector, double, 1 pc)



(connector, single, 1 pc)

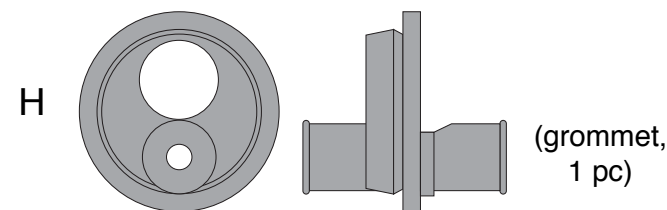

(grommet, 1 pc)




(pressure switch pigtail, 1 pc)



(connector, single, 1 pc)




(diode, 1 pc)




(splice, 1 pc)




(shrink tube, 1 pc)




(terminal, female heavy gauge, 1 pc)




(ground wire, heavy gauge, 1 pc)



(ground wire, light gauge, 1 pc)



(fusible link/wire, 1 pc)



(purple wire, 1 pc)



(blue wire, 1 pc)

1983-87 Chevy TRUCK Classic Update Series Air Conditioning Kit

510712

92972094

Rev 1.0 3/25/2021 DB

© COPYRIGHT 2004 American Autowire / Factory-Fit
Used with express permission of
American Autowire / Factory-Fit

www.americanautowire.com 856-933-0801

Air Conditioning harness installation instructions:

92972094

Figure A: 1987 ONLY



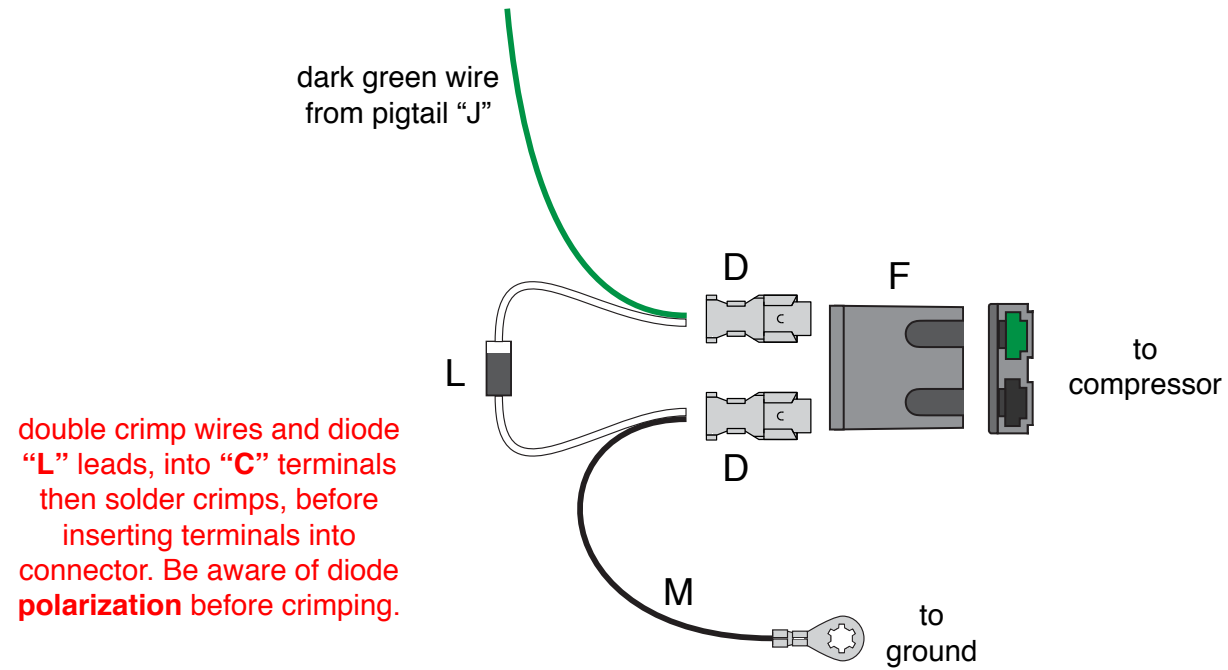



Figure B

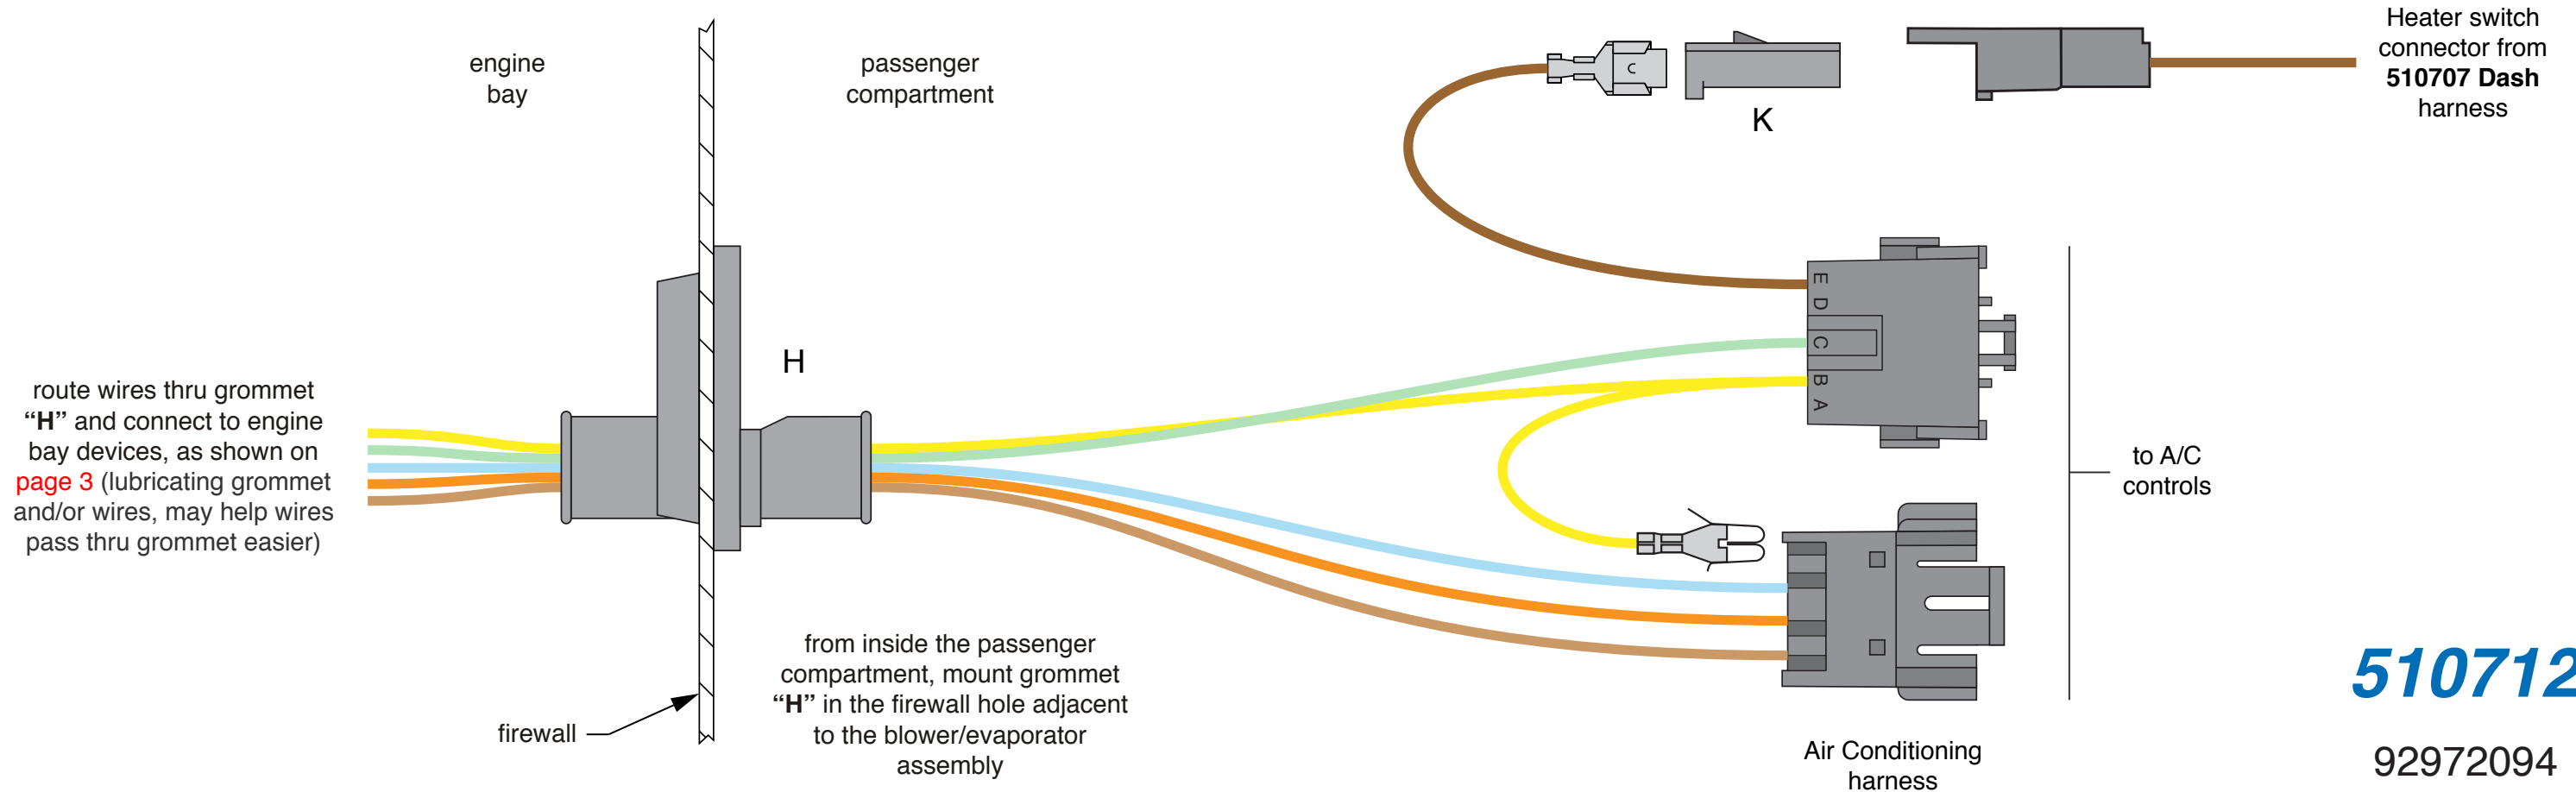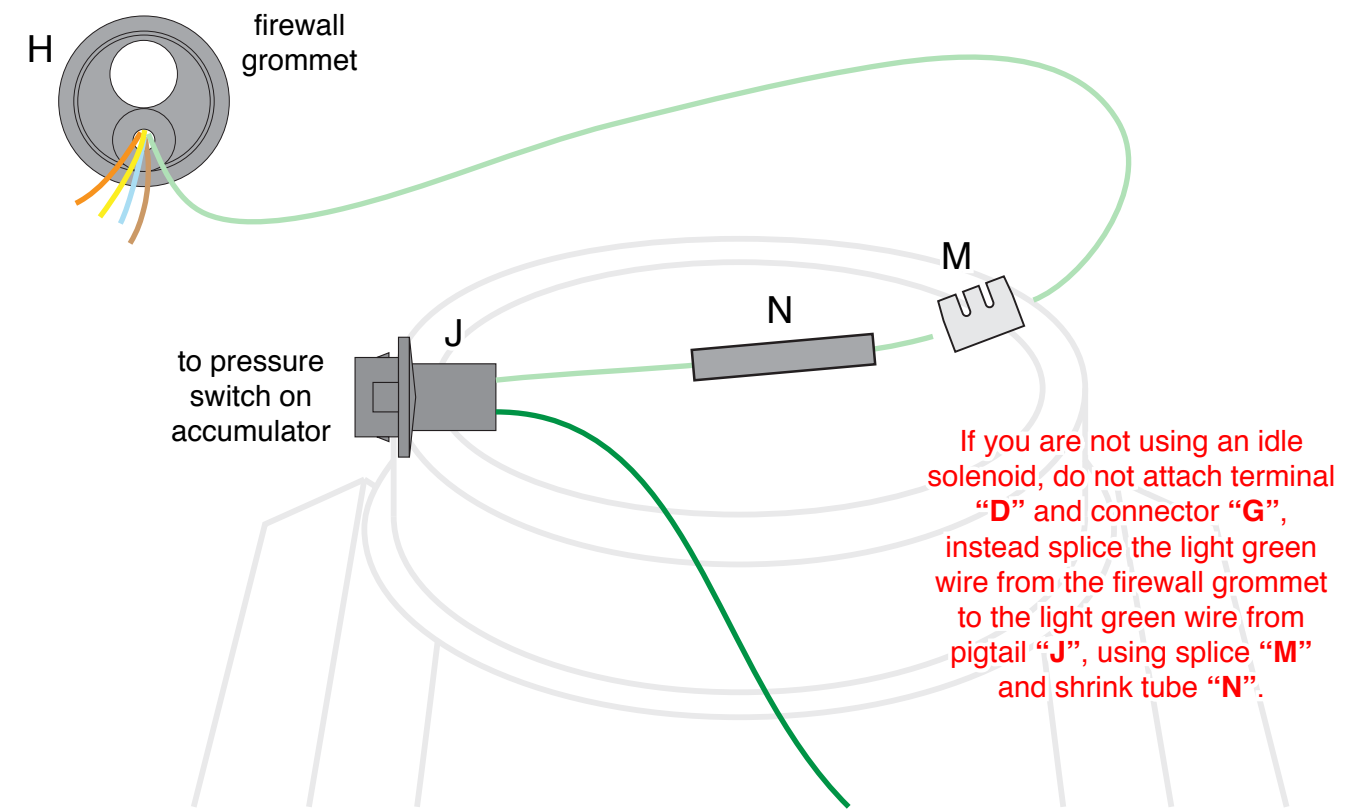

510712

92972094

Rev 1.0 3/25/2021 DB

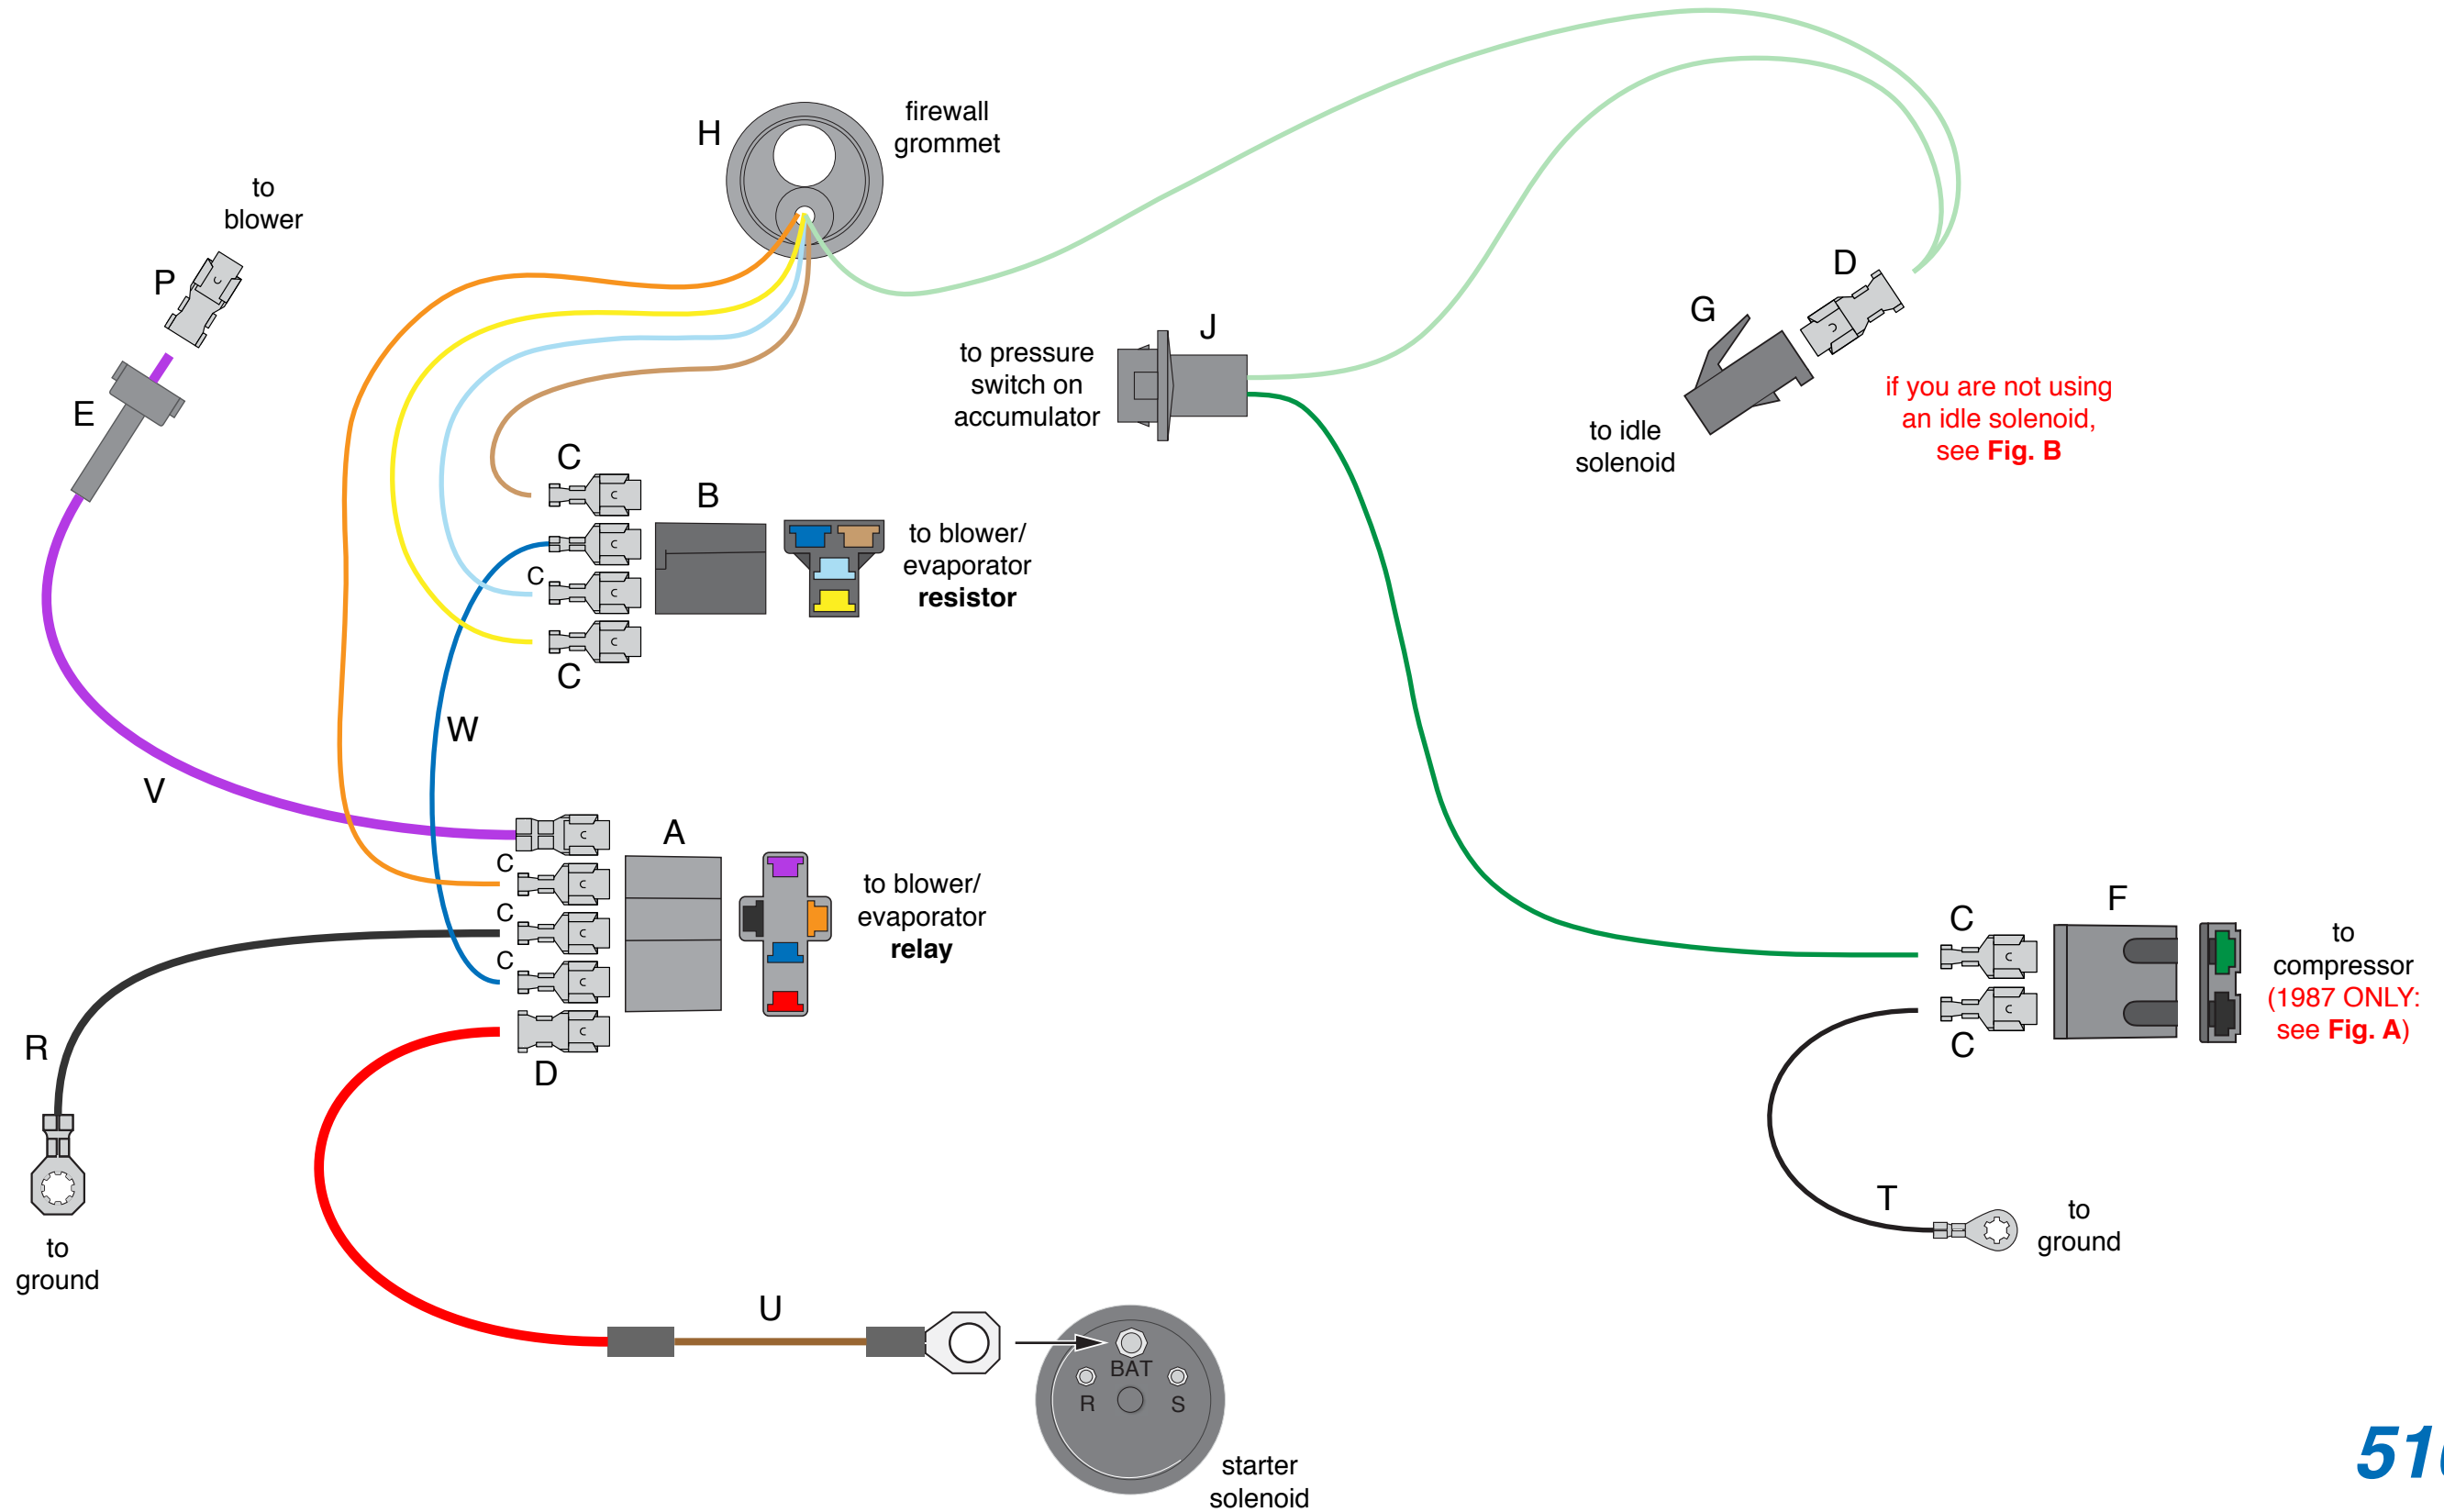

510712

92972094

Rev 1.0 3/25/2021 DB

**THIS PAGE HAS BEEN
INTENTIONALLY LEFT BLANK**

510712

92972094