

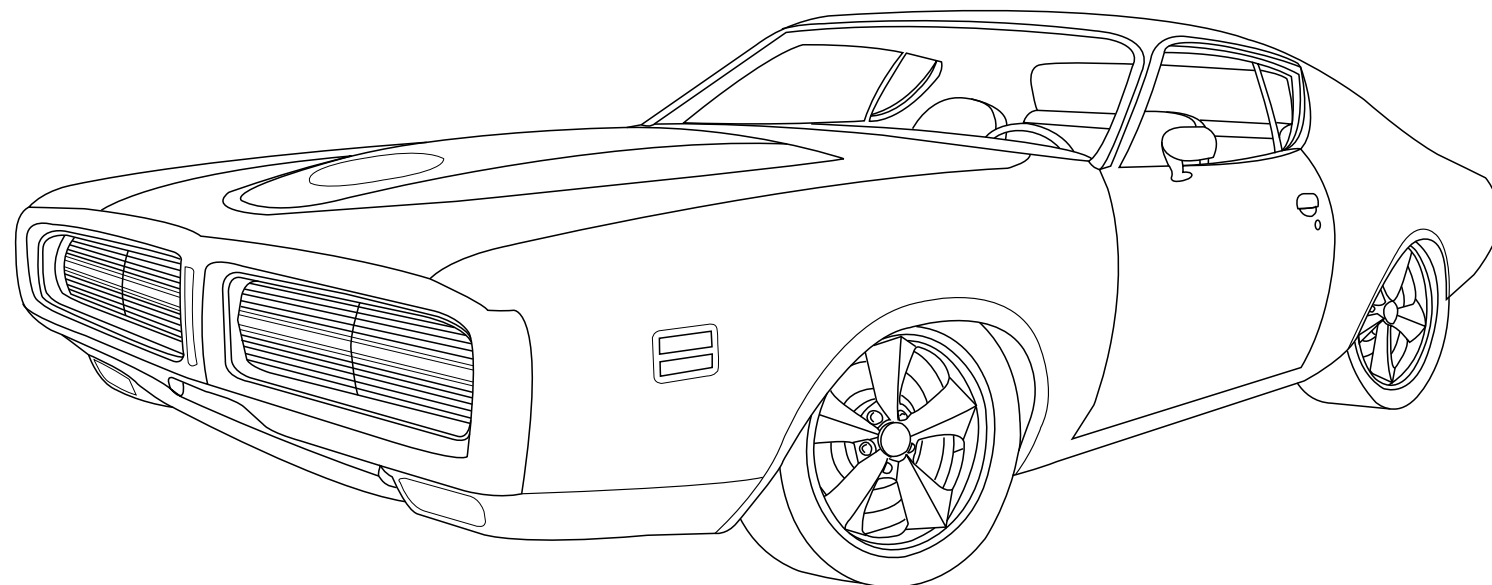
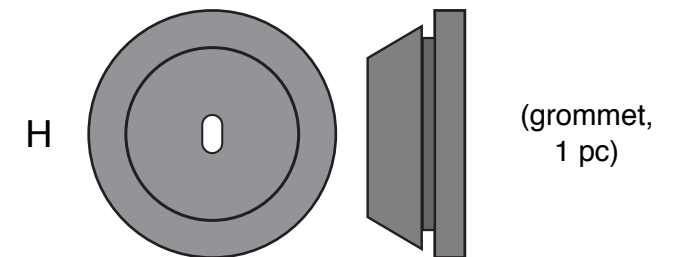



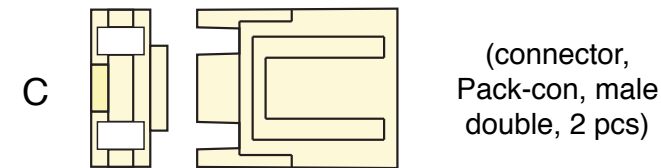




# American Autowire

1. This kit is designed to work with our **510691** 1971-74 Mopar B-body Classic Update Kit. It is **NOT** intended to be used by itself or with any other aftermarket electrical system.

2. Install the **510692** Dash harness before installing this A/C Overlay harness. This harness will replace the Heater Overlay harness (item "T") in the Dash kit.

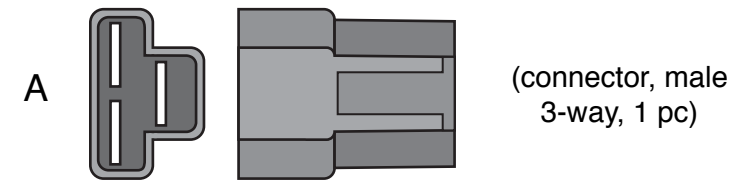

## 1971-74 Mopar B-body Classic Update Series Air Conditioning Kit

### 510474

© COPYRIGHT 2004 American Autowire / Factory-Fit  
Used with express permission of  
American Autowire / Factory-Fit

92972141

www.americanautowire.com 856-933-0801


Rev 0.0 1/19/2018 JM

# Air Conditioning harness installation instructions:

92972141


## 1971-72 AC/Heater Control switch wiring:

modify the (4) illumination wires and the (3) blower switch wires, using items "A-D", before installing the AC/Heater control in the dash and making the Dash harness and A/C Overlay harness connections

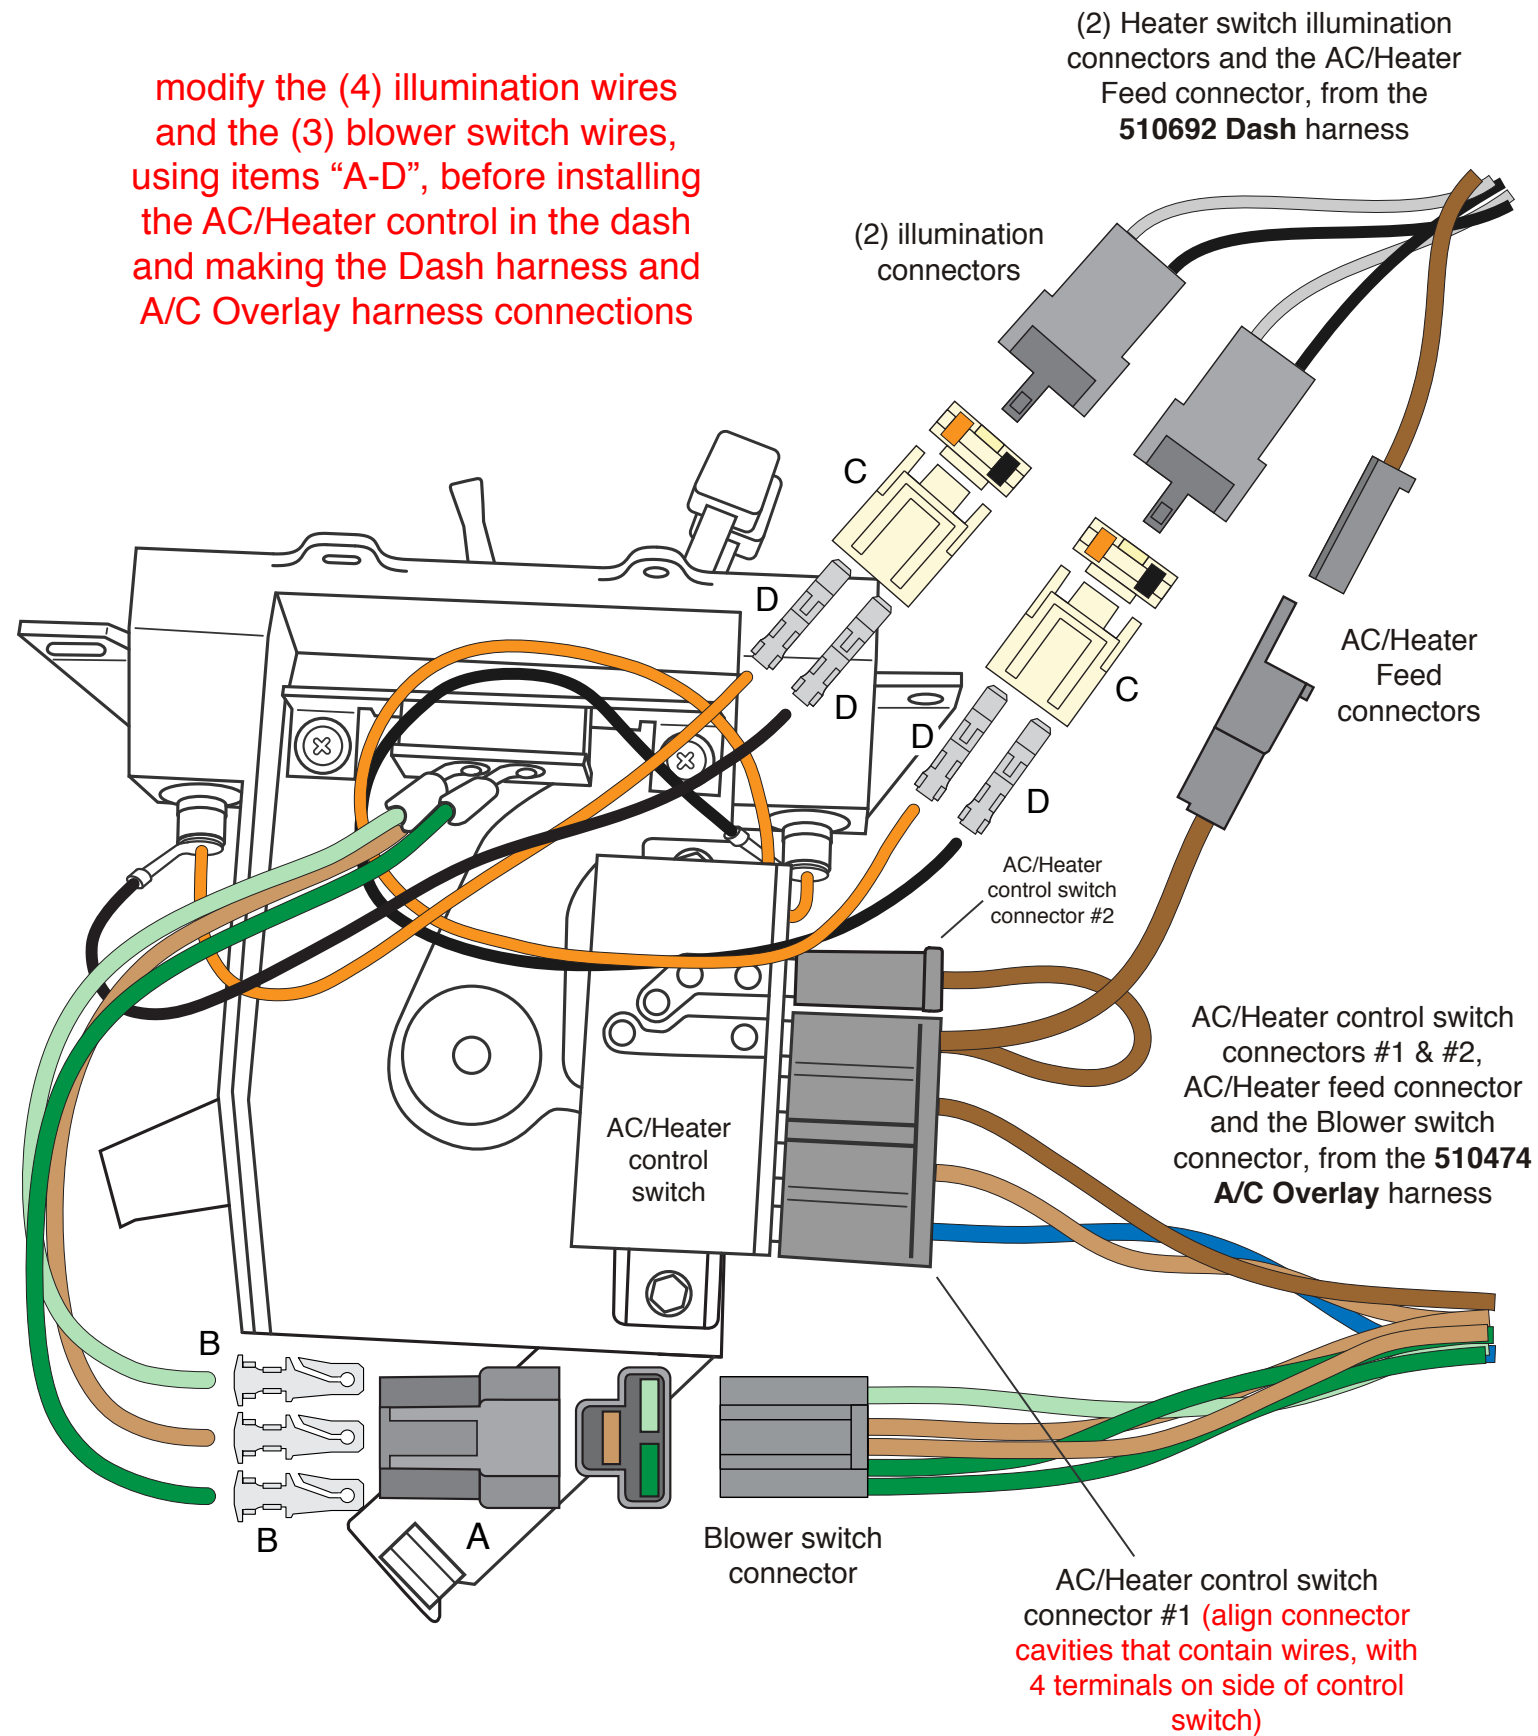

## 1973-74 AC/Heater Control switch wiring:

install the AC/Heater switch illumination extension, before installing the AC/Heater control in the dash and making the Dash harness and A/C Overlay harness connections

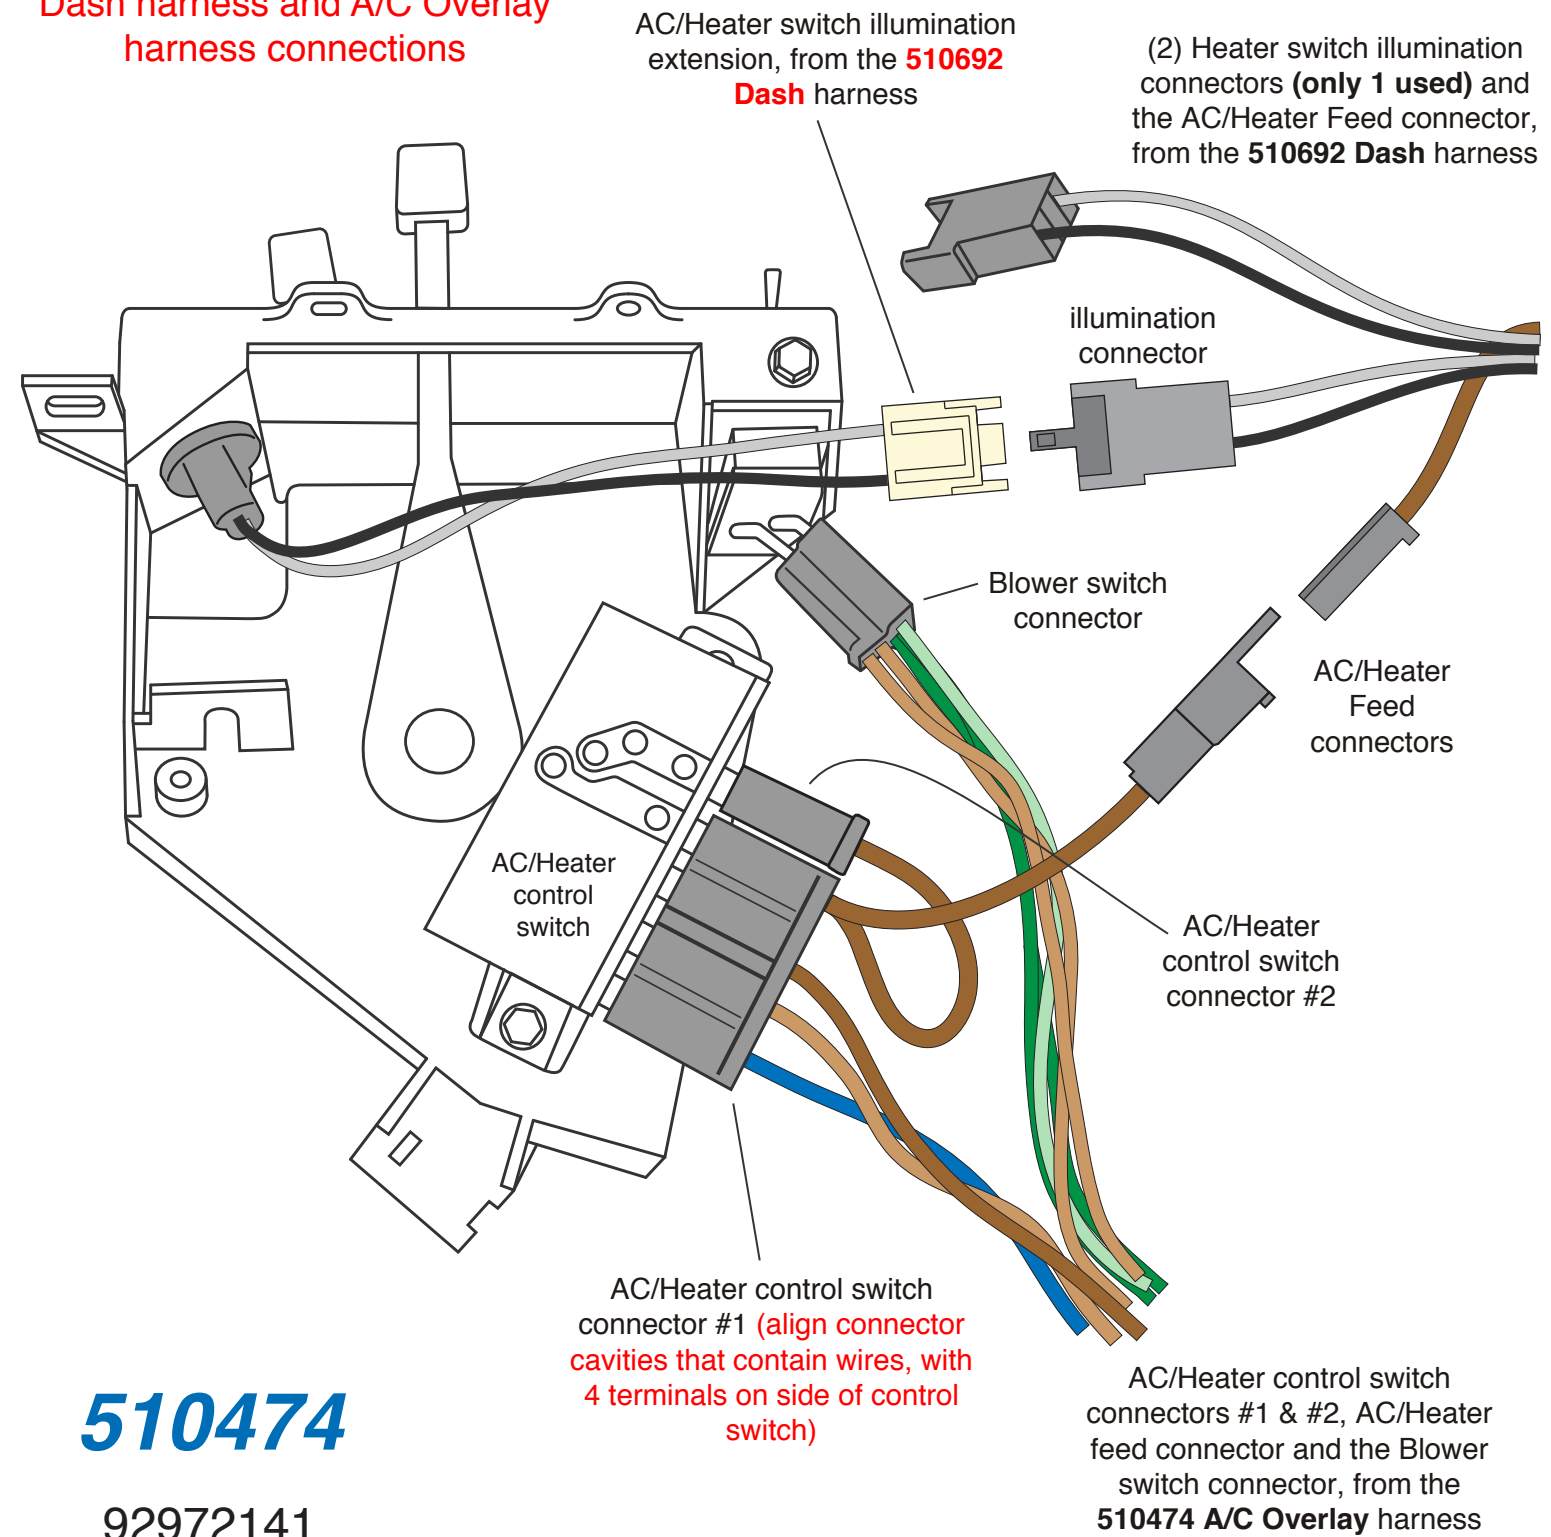


**510474**

92972141

Rev 0.0 1/19/2018 JM

# Air Conditioning harness installation instructions:

92972141

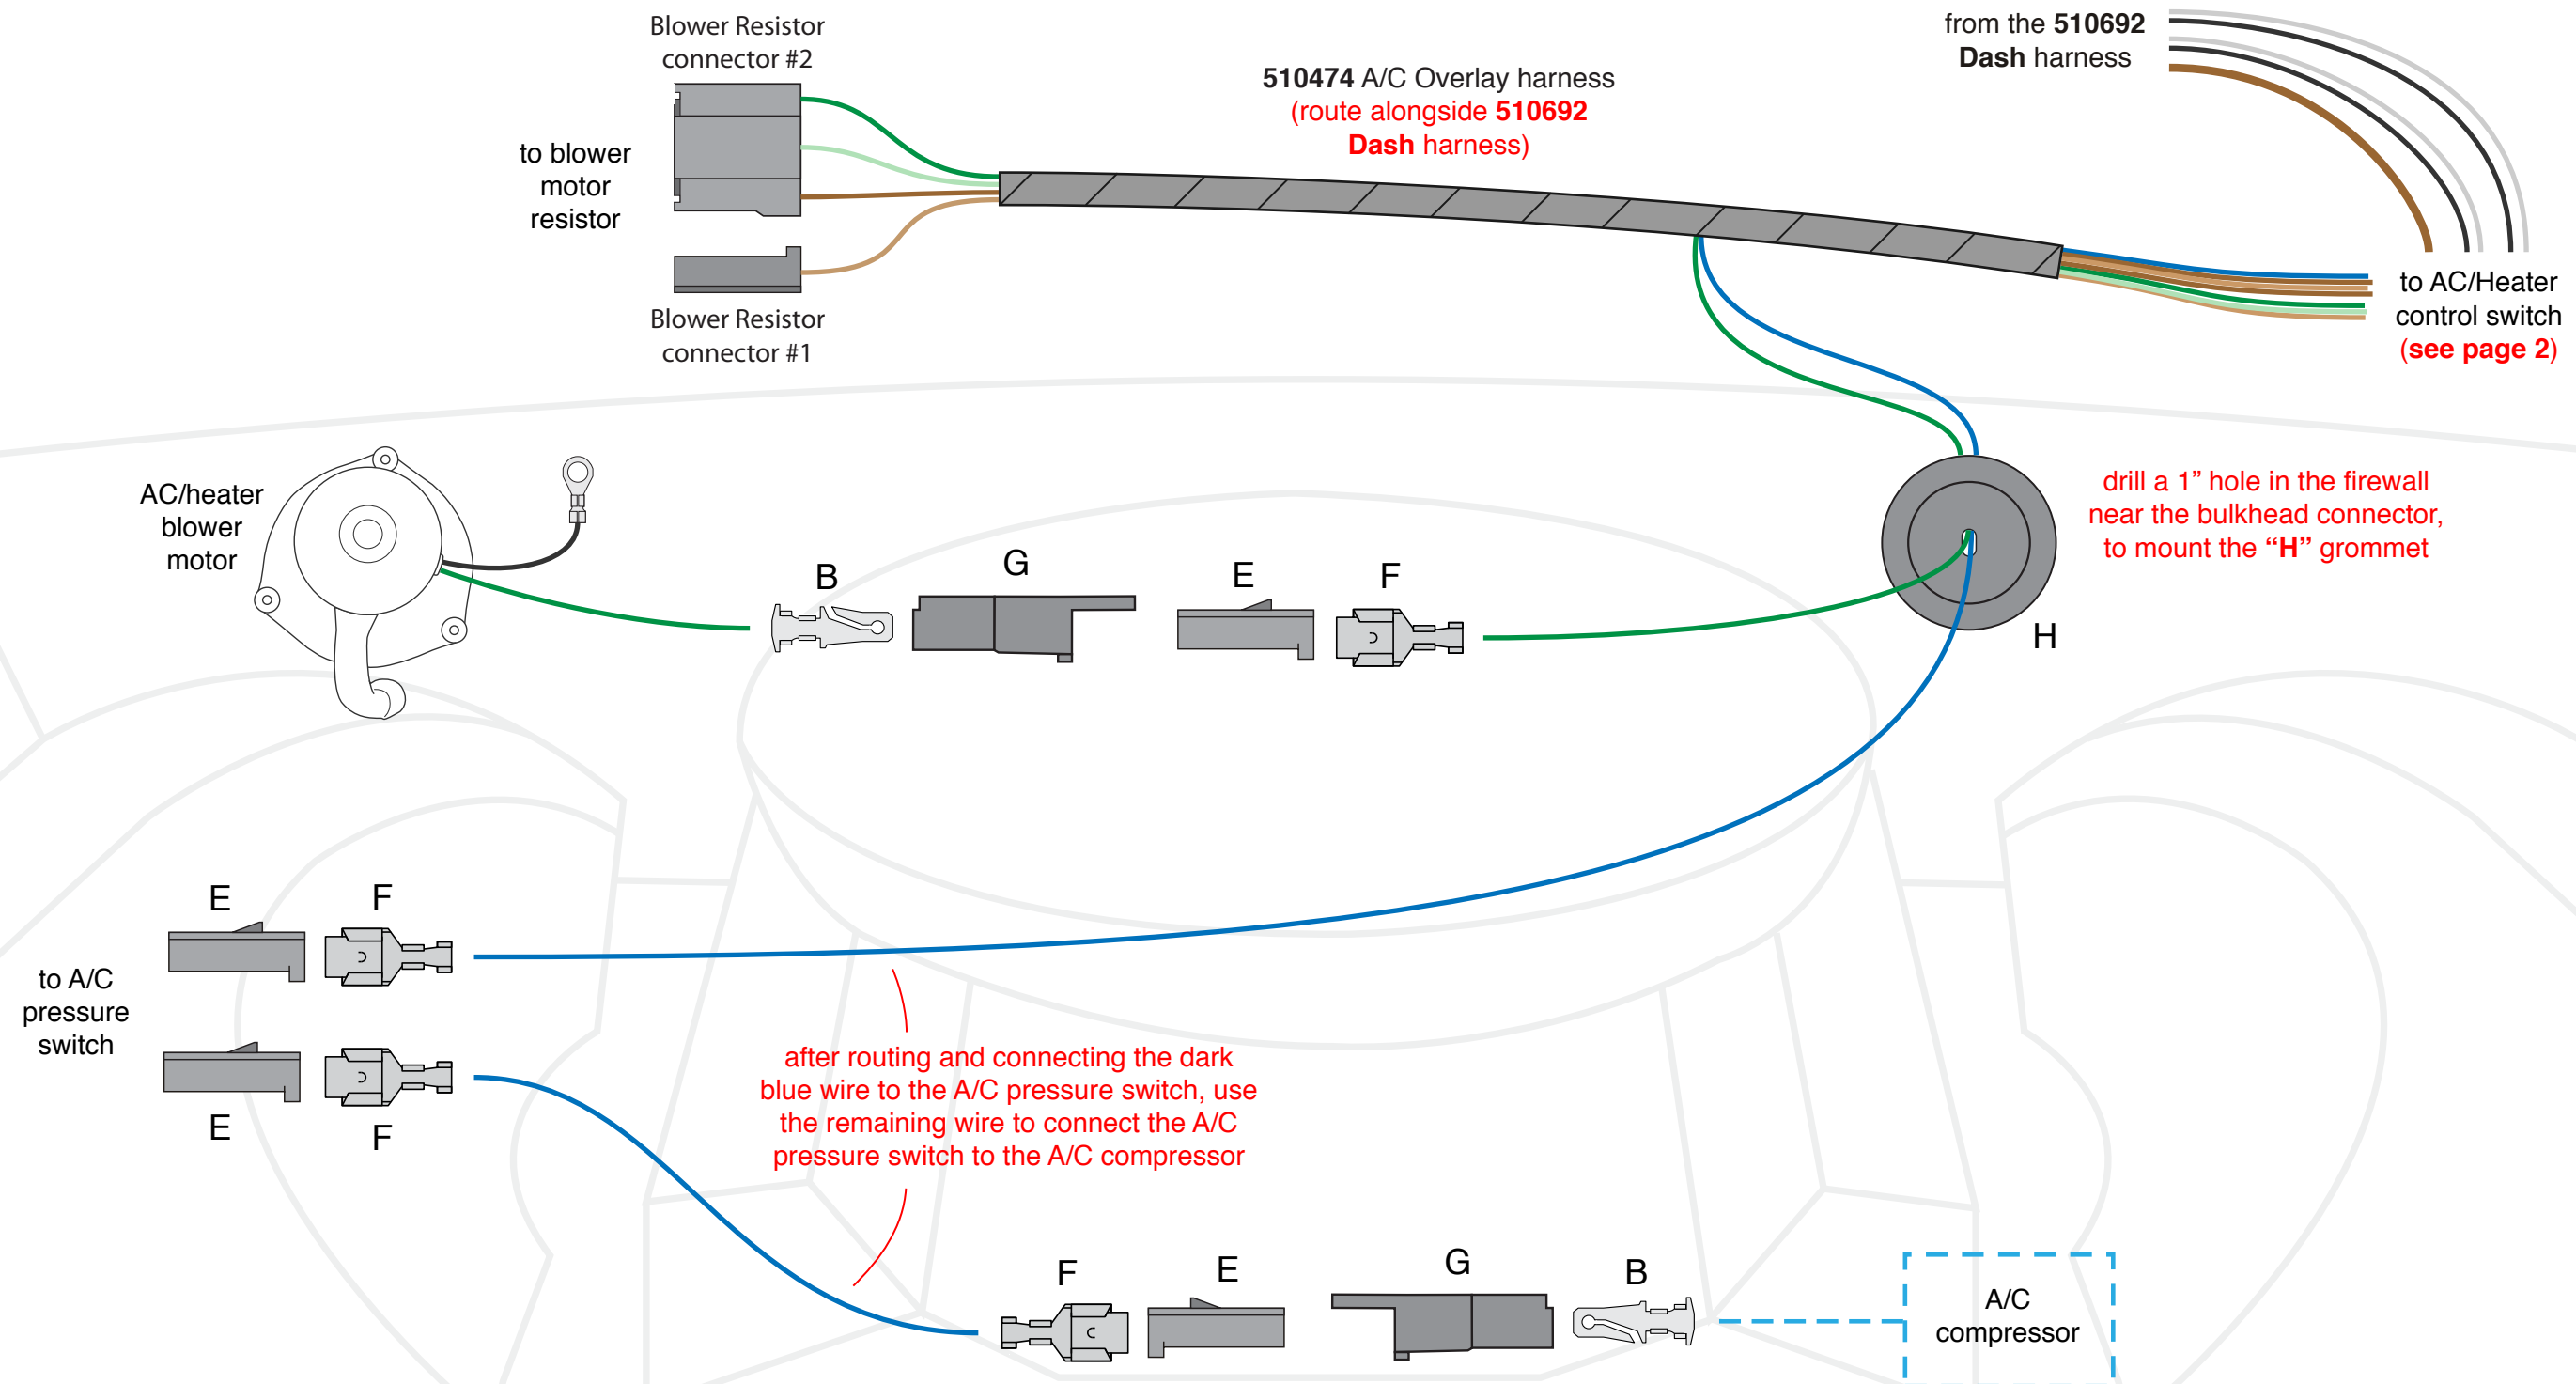

**510474**

92972141

Rev 0.0 1/19/2018 JM

THIS PAGE HAS INTENTIONALLY BEEN LEFT BLANK

**510474**

92972141

Rev 0.0 1/19/2018 JM