


NOTE: New terminals are provided if needed.

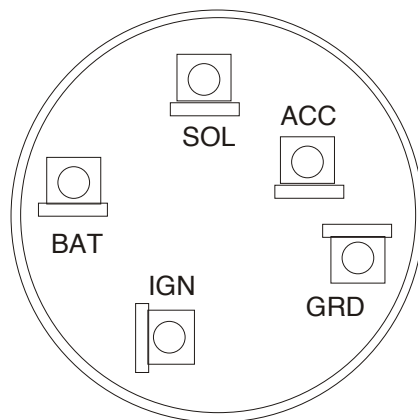


INSTALLATION

NOTE: Some ignition switches came packaged with a copper lamp holder bracket. This bracket was removed before packaging. However, the instruction sheet related to the switch shows this bracket. This bracket is not used in this application and it's installation can be ignored.

1. Plug in connector D from the dash wiring harness (bag G) into the switch.
2. Install the back-up nut C onto the switch. The depth of this nut will have to be determined when mounting the switch.
3. Insert the switch into the hole in the dash panel.
4. Screw on threaded collar A..
5. Snap on your original ignition switch trim bezel.
6. Insert your existing lock cylinder into the new switch. This allows you to utilize your original key.

NOTE: Looking into the face of the connector. Wires are plugging in from behind.

NOTE: American Autowire has correct lock cylinders available
ORDER PART NUMBER 500672

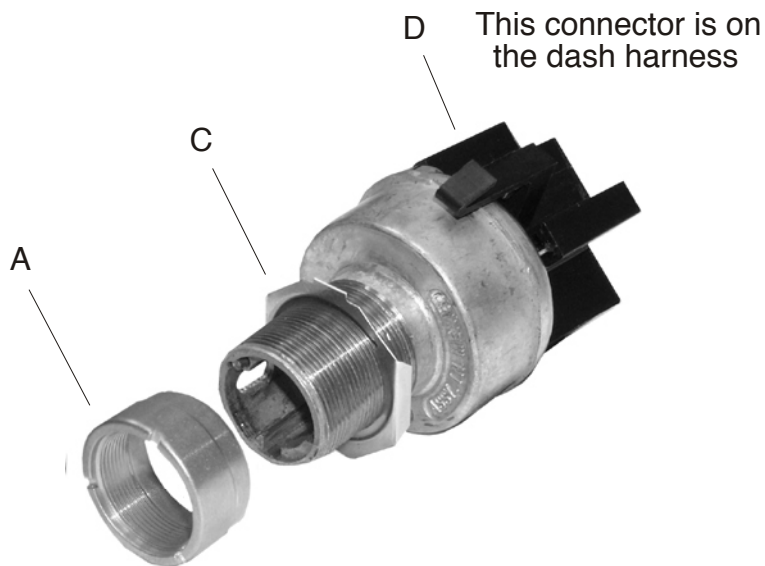

another wiring product by...



We Make Wiring Easy!!

856-933-0801

IGNITION SWITCH
1957 Chevy

510633

92972598 instruction rev 0.0 10/8/19