# Fuse Box **20 3 - 15 -** 9 10 **- 20 -20 —** 13 <sub>14</sub> **—** 10 **—** <del>- 30 - 15 16 - 30 - </del>

### NOTE:

If your fuse box looks like this, these **ARE** the correct instructions for your application. If the word "Bussmann" does not appear on the fuse box, you have a different version of this kit and these **ARE NOT** the correct instructions.

### **KIT BOX CONTENTS:**

	Part		
<u>Bag</u>	<u>Number</u>	<u>Description</u>	Quantity
	510632	Ignition Switch	1
	500862	Headlight Switch	1
	500919	Practice Terminal Crimping Set	1
	510145	Fuse, Relay, and Flasher kit	1
	510237	Floor Dimmer Switch	1
G	510269	Dash Harness kit	1
Н	510270	Dash Cluster wiring kit	1
M	510271	Rear Body Wiring kit	1
Р	510272	Courtesy Light kit	1
Ν	510273	Headlight Connection kit	1
Z	510476	Alternator and Main Power Connection kit	1
	92969868	Firewall Mounting Template	1
	92969849	Instruction Sheet for 510267, 53-62 Corvet	te 1
	92970018	Warning Sheet	1




www.americanautowire.com 856-933-0801

Classic Update Kit 1953-62 Corvette

510267

92974025 Rev. 0.0 03/22/2024

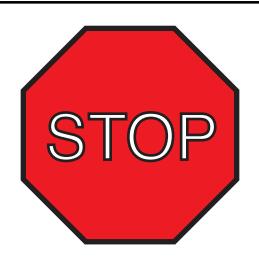

WARNING: Validate the kit contents with the component list included on page 2 of this sheet before proceeding. This harness is intended to be used in a modified vehicle. Please read this sheet thoroughly and be sure that you understand everything explained on it prior to opening any of the enclosed packages, or before attempting to install any of the components. Once this kit has been opened or a component installed, the kit is not returnable. The new fusebox assembly is intended to be installed in the same approximate location as was the original, and the harness routed in the same fashion as was the original. The exact finished location of the new fusebox is not extremely critical as the new harness is long enough that it will install fine as long as the new fusebox is mounted in the general area of your stock original Corvette fusebox.

- 1. Grounding is extremely important with any Corvette due to the body being all fiberglass. Your new AAW kit has been engineered to utilize all the stock ground wire locations used on an original car. As long as you have good, clean grounding points, you should OK. However, if your build is a bit more involved, you may want to consider the use of the AAW complete vehicle assembly grounding system, P/N 500717.
- 2. This kit only supports the use of a higher current self-exciting 1 wire, GM "SI" series, or other style internally regulated alternator. An adapter (that is not included with this kit) may be necessary for certain applications. The use of a stock, low amperage generator is seriously discouraged as it cannot handle the higher current requirements of updated ignition systems, electric fans, aftermarket A/C systems, stereo systems, air ride suspensions, and other power hungry accessories that will ultimately create performance issues with the system.
- 3. This kit WILL NOT support the use of a factory ammeter. All AAW kits are engineered to supply the optimum charge to the battery. To achieve this performance, we route our 6ga. charge wire directly from the alternator output terminal to the starter solenoid. Due to the path of the charge being altered from the stock configuration, the gauge can no longer see a charge vs. a discharge, so it will not work properly. When ammeters were originally used, most generator current outputs were rated at maximum of about 25-40 amps. Modified vehicles being built today typically utilize a 100 amp or higher output alternator. With these higher current units, ammeters, generally speaking, become a safety hazard. Ammeters are usually wired in parallel to the charging circuit, are typically unfused, and can short very easily causing a fire. A voltmeter is recommended as a good alternative.
- 4. This kit IS NOT set up with a resistance wire or a ballast resistor for a standard, points type ignition system. It is wired with a full 12 volt primary ignition feed that is hot in both the start and run positions. It will support HEI, MSD, other electronic ignition systems, as well as computerized Fuel Injection systems. If you wish to run a points type system, there are illustrations on the engine connection pages to do so. Extra parts that are not included in this kit will be required to complete that operation.



510267

### 510267 - Classic Update Series Kit 1953-1962 Chevrolet Corvette

This kit contains the following components:

	Part		
<u>Bag</u>	<u>Number</u>	<u>Description</u>	Quantity
	510632	Ignition Switch	1
	500862	Headlight Switch	1
	500919	Practice Terminal Crimping Set	1
	510145	Fuse, Relay, and Flasher kit	1
	510237	Floor Dimmer Switch	1
G	510269	Dash Harness kit	1
Н	510270	Dash Cluster wiring kit	1
M	510271	Rear Body Wiring kit	1
Р	510272	Courtesy Light kit	1
Ν	510273	Headlight Connection kit	1
Z	510476	Alternator and Main Power Connection kit	1
	92969868	Firewall Mounting Template	1
	92969849	Instruction Sheet for 510267, 53-62 Corvet	te 1
	92970018	Warning Sheet	1

Validate the kit contents with this component list. If there are any discrepencies with incorrect or missing parts, stop your installation and notify the supplier you purchased the kit from before proceeding.




<u>510267</u>

92970018 instruction sheet Rev 2.0 6/11/2020


### 1953 - 1962 Corvette Fuse Panel Mounting Template and Instructions

Stock F/L Harness Hole Custom F/L Harness Hole

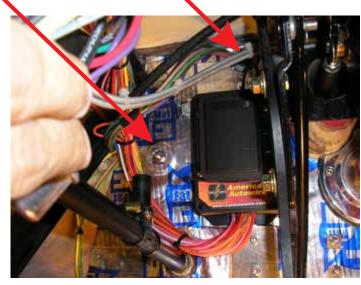

**NEW** AAW application

Stock F/L Harness Hole

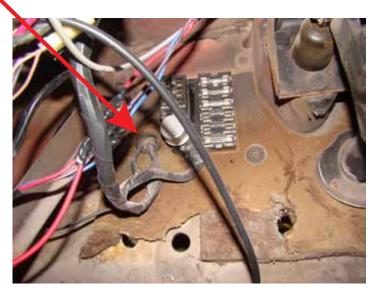

Original application



### **As Viewed From Under the Dash**



### NOTE:

- 1. The installation and placement of the new fusebox is not extremely critical for this application. On this page, you will find a photograph of the completed fusebox and dash harness as they were installed in our 62 Pro-Touring Corvette along with a before photo of the stock configuration. Take note of the stock front light harness hole location to the left of the stock fusebox. Our 62 Pro-Touring car had the front light hole relocated up and over the top of the new fusebox so that it routed thru some PVC tubing up underneath the LF fender area instead of along the inside of the LH inner fender. The harness is long enough that you just need to mount the fusebox as the photo depicts. As long as the fusebox assembly is installed in the general area as shown, the harness will install fine.
- 2. Be sure to check for clearances of any accessories that you might be adding. The stock clutch and brake pedal assembly pose no concerns at all when mounted in this location. There are 2 mounting holes (1 each) on the upper and lower tabs of the fusebox case. Using the fusebox as a template, drill 2 new 11/64" holes in your firewall. 2 new attaching screws and locking nuts have been provided for you to affix the fusebox to the firewall. They can be found in the 510269 loose piece dash kit.
- 3. Once the fusebox has been attached to the firewall of the car, the harness routes up and over top of the pedal carriage assembly and steering column in behind the speedometer assembly, then along the bottom of the dash frame and over to the RH door jamb area. Please take time to keep it away from any moving items such as the wiper motor linkage.



www.americanautowire.com 856-933-0801

92969868

92969868 instructions Rev 0.0 9/10/2012

# Classic Update Series

- 1953 - 1962 Chevy Corvette

## START HERE!

### PLEASE READ THIS BEFORE STARTING INSTALLATION!

This wiring kit is designed for ease of installation. Please read the guidelines below, BEFORE STARTING your installation to quarantee a successful job. Use an appropriate crimping tool which folds the wings of the open barrell terminals down into the wire as shown below. If you use our crimping tools and correctly crimp the included terminals, soldering is not necessary. If you are unsure about a particular crimp, soldering is recommended. Our factory crimped terminations are installed by GM approved five ton presses, and soldering these terminations is not necessary. AAW offers a great terminal crimping video entitled "Proper Crimping Video". It can be viewed by visting YouTube. Type the following address into your web browser to go directly to the video: www.youtube.com/watch?v=JAgEDoVI-co.



AS THIS HARNESS IS DESIGNED FOR USE IN A MODIFIED CAR REQUIRING A HIGHER RATE OF CHARGE, IT DOES NOT SUPPORT THE USE OF A STOCK (ORIGINAL) ALTERATOR OR GENERATOR. IT IS DESIGNED FOR USE WITH AN INTERNALLY REGULATED GM "SI" STYLE OR SINGLE WIRE STYLE ALTERNATOR. ADAPTERS (WHICH ARE NOT INCLUDED WITH THIS KIT) ARE AVAILABLE FROM SEVERAL SOURCES WILL BE NECESSARY TO USE ANY ALTER-NATOR OTHER THAN AN "SI" or 1 WIRE UNIT.

### STEP 1: DISCONNECT YOUR BATTERY:

Disconnect the battery before installing the wiring kit to prevent any accidental shorting caused by loose bare wire ends.

### STEP 2: START INSTALLING KIT:

This kit is broken down into individual steps that are identified by a letter printed on the instruction sheets visible through each bag. These letters are the order of operation for installaing your kit. Start with bag letter G, then H, etc. The order of installation is shown below. Use this main instruction sheet, 92969849, to complete the installation process.

G - 510269 Dash Harness Kit

H - 510270 Gauge Cluster Kit

M - 510271 Rear Body Kit

N - 510273 Headlight Bucket Kit

P - 510272 Courtesy Lamp Kit

Z - 510476 Alternator and Main Connection Kit

### STEP 3: RECONNECT YOUR BATTERY:

When you have completed the installation and are ready to reconnect the battery, make sure that the following electrical system grounds are in place:

- A. Battery is grounded to the ENGINE BLOCK.
- Battery is grounded to the frame.
- Engine block is grounded to the frame.
- D. Body is grounded to the frame.

### STEP 4: CHECK ALL ELECTRICAL FUNCTIONS:

Any non-functioning items should be checked for proper installation. Any problems with your wiring and electrical circuit functions should be addressed to American Autowire Systems, Inc. as soon as possible to avoid any warranty problems.

If you have any questions concerning this or any of our products, please feel free to call us at 1-856-933-0801

AMERICAN AUTOWIRE MAKES IT EASY !!

We carry many accessories for your 1953-1962 Corvette

### p/n 510585

OEM small terminal crimping tool (18-14 gauge)



p/n 510587 Includes Both

terminal crimping tools

p/n 510325

1953-57 parking brake warning signal kit



p/n 510329

1961-62 optional 3rd stop/tail lamp kit



p/n 510586

OEM large terminal crimping tool (12-8 gauge)



p/n 510326 1958-62 parking brake warning signal kit



p/n 510330 1961-62 optional back up lamp kit






www.americanautowire.com 856-933-0801


Classic Update Series 1953 - 62 **Chevy Corvette** 


© COPYRIGHT 2004 American Autowire / Factory-Fit


Rev. 3.0 1/10/2018

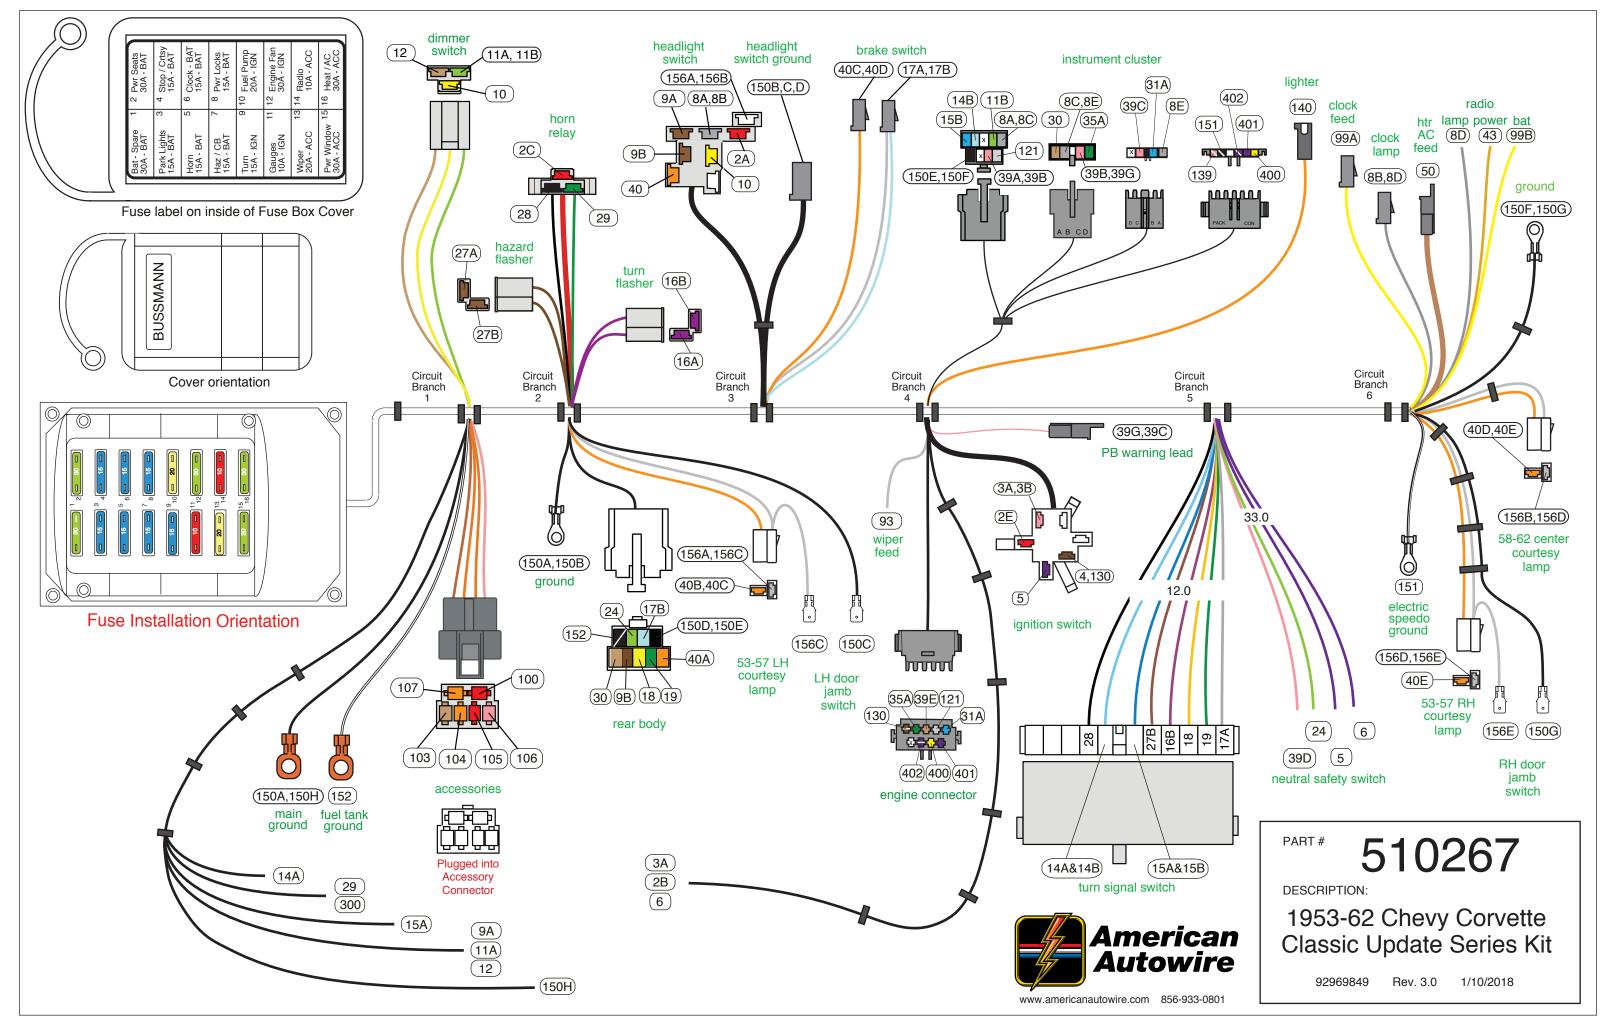

Page 2

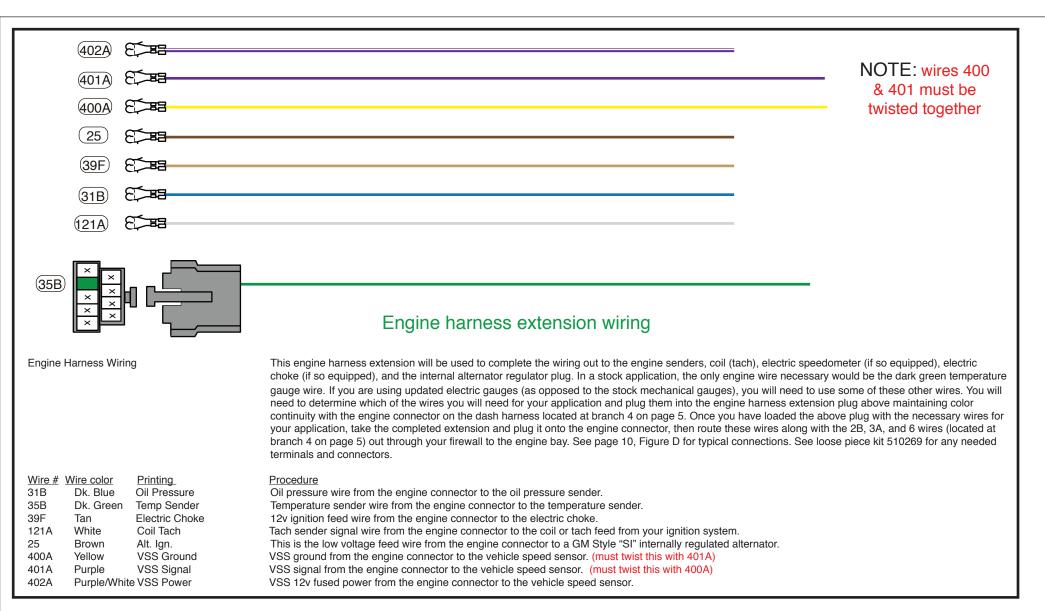

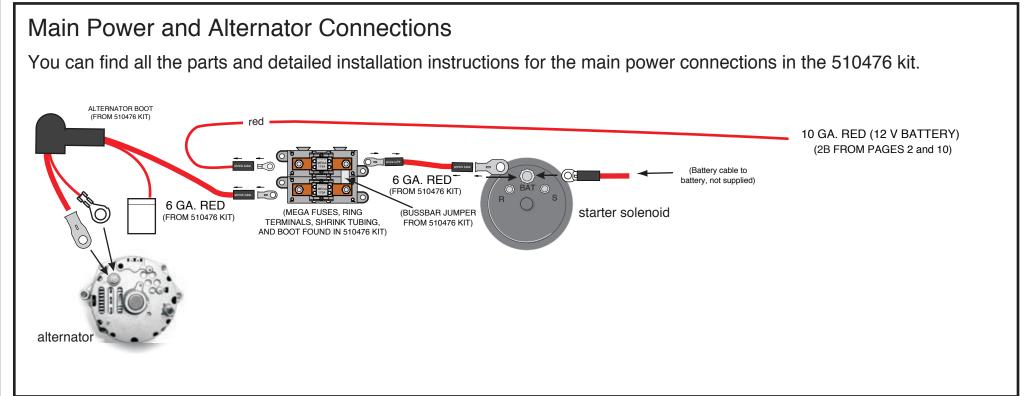

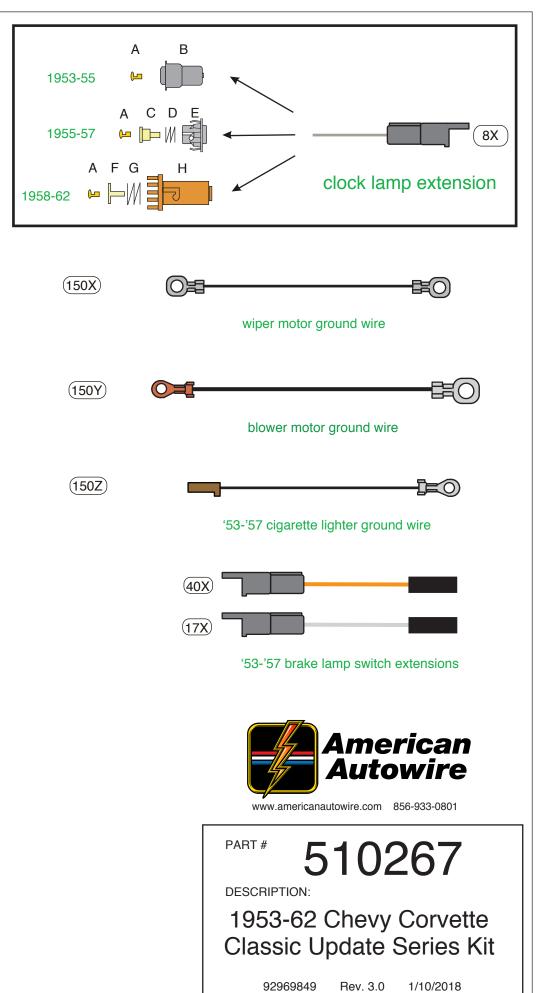

### Main Fuse Panel Installation Instructions

The Main Fuse Panel harness is designed to be mounted under the dash on the firewall in the same general area as did the stock harness. See photos of the installed fuse panel on the "fuse panel mounting template and instruction sheet", P/N 92969868. The enclosed representation of the main dash harness shows each circuit branch and identifies each connection by its color and function. Follow this drawing and detail drawings on pages 8, 9, and 10 for the individual


	Branch 1 - Fro Wire color	nt Lighting connections Printing	See page 9, "Figure A" for typical connections. See loose piece kit 510269 for any needed terminals and connectors. Procedure		
29	Dark Green	Horn	Connect to the horn power terminal. NOTE: You also will need to run the black 150 wire to your horn's ground terminal		
14A	Light Blue	Left Front Turn	in order for the horn to operate.  Connect to the blue wire that is in left front directional lamp lead (not included with this kit).		
15A	Dark Blue	Right Front Turn	Connect to the blue wire that is in right front directional lamp lead (not included with this kit).		
300	Orange	Electric Fan	This is the 12 volt ignition feed to be connected to the trigger wire on your electric fan relay.		
9A	Brown	Park Lights	Connect to both the front park / running light lamp lead purple wires (not included with this kit). An in-line splice of this		
		Ü	wire or a double up of this wire at the left front parking lamp will be necessary to accommodate the wiring of both of the front parking lights.		
11A	Light Green	Headlight-Hi Beam	These wires will mate with the H/L connection kit harnesses, P/N 510273, to complete the front headlight connections		
12	Tan	Headlight-Low Beam	Use the supplied loose piece terminals and connectors in kit 510269 to make these connections to the 510273 H/L		
		J	connection kit. Select the light green Headlight Hi Beam wire (11A) and tan Headlight Low Beam wire (12). Route these wires to the grill shell area near the LH headlight. Cut the wires to length, double the wires with the cutoff portions, crimp on terminals V and plug into connector N as shown on page 9, Figure A. Route the remaining portion		
			of the wire to the opposite side of the grill shell near the RH headlight, cut to length, crimp on terminals W and plug into connector N as shown on page 9, Figure A. Do not plug these connections onto your 510273 H/L connection kit yet as the ground circuits must first be completed.		
150H	Black	Ground	Take this wire to the left H/L area, cut to length, double with the cutoff portion and route to the LH P/L, cut to length,		
			double with the cutoff portion and route to the LH horn, cut to length, double with the cutoff portion and route to the RH horn, cut to length, double with the cutoff portion and route to the RH P/L, double with the cutoff portion and route to the RH H/L. Use the terminals and connectors as shown on page 9 to complete the grounding circuit.		
	l Leads		Main chassis and fuel sender grounds. NOTE: These MUST be firmly attached to your block via the bellhousing bolts		
150A,F 152	l Black Black/White	Ground	Main chassis ground to bellhousing flange bolt for instrument cluster, lighing, and horn ground connections.  Dedicated fuel tank sender ground to bellhousing flange bolt.		
Circuit	Branch 1 - Und	derdash Connections			
	Wire color	Printing	<u>Procedure</u>		
Dimme	r Switch				
10	Yellow	Dimmer Switch Feed	12v Feed from H/L switch		
-	Light Green	Headlight Hi Beam	Switched 12v from dimmer to high beam lamps		
12	Tan	Headlight Low Beam	Switched 12v from dimmer to low beam lamps		
Access	ory Wire Conn	ector	Use the provided connector L and terminals M as power leads for the following:  Fuse Rating		
103	Tan	Fuel Pump	Fuse Rating FUEL 20 amp Fused 12 volt IGNITION feed for fuel pump (or another fused ignition circuit)		
104	Orange	Power Seats	PWRSEATS 30 amp Fused 12 volt BATTERY feed for power seats (or another fused battery circuit)		
105	Red	Power Locks	PWR LOCKS 15 amp Fused 12 volt BATTERY feed for power door locks (or another fused battery circuit)		
100	Red	CB Radio	CB 15 amp Fused 12 volt BATTERY feed for a CB radio (or another fused battery circuit)		
106	Pink	Power Window	PWRWDO 30 amp Fused 12 volt ACCESSORY feed for power windows (or another fused accessory circuit)		
107	Orange	Spare Battery	BAT SPARE 30 amp Fused 12 volt BATTERY feed (for any application)		
	Branch 2- Und Wire Color	erdash Connections Printing	Procedure		
Horn R		<u>r mung</u>	Plug the horn relay (found in the 510145 fuse kit) into this connector.		
2C	Red	12v Bat	12 volt battery feed.		
28	Black	Relay Ground	Relay ground circuit (to steering column).		
29	Green	Horn	Triggered 12 volts to horn.		
Flashe	rs		Plug one each of the flasher cans (found in the 510145 fuse kit) into these connections.		
	A Purple	Turn Switch Feed	Turn signal flasher leads.		
27, 27	A Brown	Hazard Switch Feed	Hazard flasher leads.		
Rear B	ody Connectio	n	The main connector from the Rear Body Kit, 510271 will plug in here to complete the rear body connection.		
9B	Brown	Rear Running Lights	12v feed for tail and tag lamps.		
17B	Lt. Blue	Third Brake Light	12v feed for optional 3rd brake lamp.		
18	Yellow	Left Rear Turn	12v feed to the LH rear stop and turn lamp.		
19	Dk. Green	0	12v feed to the RH rear stop and turn lamp.		
24	Lt. Green	Back Up Lt Sw	12v feed to the back up lamps (optional kit, P/N 510330, available).		
30 40A	Tan Orange	Gas Gauge 12v Battery Fused	Fuel sender signal wire between the rear body and cluster connections.  12v battery feed for LED lamps or trunk lamp.		
	Orange E Black	Ground	Main chassis ground to rear body connection.		
150D, 152	Black/White		Dedicated fuel tank sender ground to rear body connection.		
1953-5	7 LH Courtesy	Connection	If your car is a 1953-57 model, plug in one of the 1953-57 courtesy lamp extensions from the 510272 kit here.		
	Orange	12v Battery Fused	12v battery feed to LH underdash courtesy lamp for 1953-57 applications only.		
156A, (	C White	Ctsy Ground	Switched ground to LH underdash courtesy lamp for 1953-57 applications only.		

Plug into existing LH door jamb switch (not included with this kit).

Main chassis ground to LH dash frame / kick panel area (dash bird cage assembly).

Ground to LH door jamb switch.

Switched ground to LH door jamb switch.

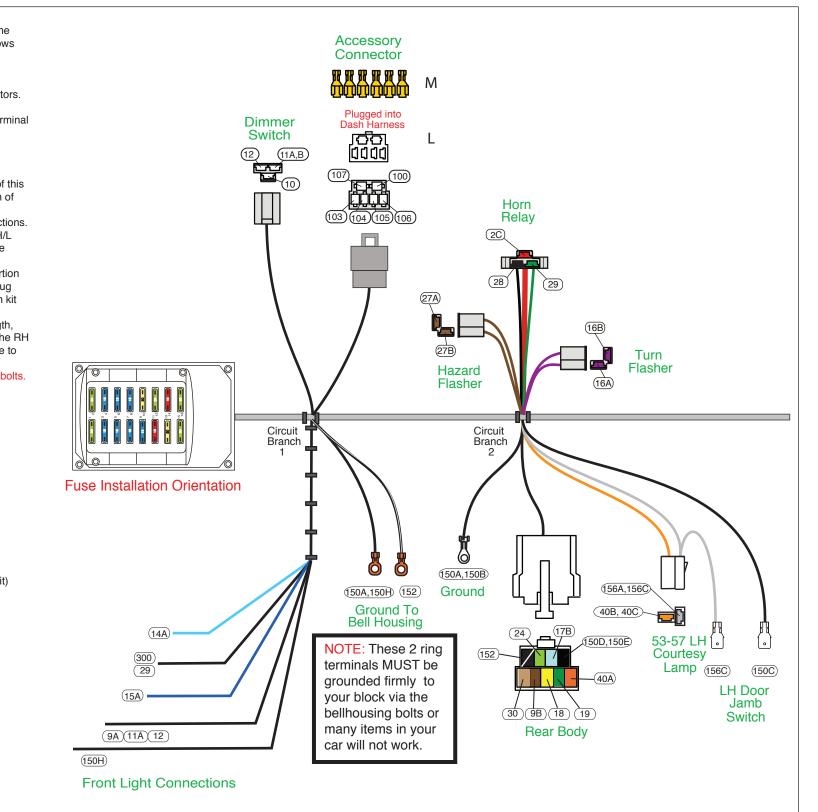



1953-62 Chevy Corvette Classic Update Series Kit

92969849

PART#

**DESCRIPTION:** 

510267

Rev. 3.0 1/10/2018

www.americanautowire.com 856-933-0801

150C

156C

LH Door Jamb Switch

Black


White

Ground

Ground

Ctsy Ground

### Main Fuse Panel Installation Instructions Circuit Branch 3 - Underdash Connections Wire # Wire Color Printing **Procedure** Lighting Switch Plug this connector onto lighting switch 500862. 2A 12v Bat Unfused 12v battery feed to the lighting switch for headlamps. Red 8A, B Dash Lights Feed out to dash illumination lamps at cluster. Gray 9A Park Lights Feed out to front parking lamps. Brown 9B Rear Running Lamps Feed out to rear tail lamps. Brown 10 Yellow Dimmer Sw Feed Feed to headlight dimmer switch for headlights. 40 Orange 12v Batttery Fused Secondary fused 12v battery feed to lighting switch for parking, tail, dash illumination, courtesy, and dome lamps. 156A, B White Ctsy Ground Switched ground for courtesy and dome lamps. Main H/L switch ground. Plug this black connector onto the male blade on the side of the new 500862 lighting switch. Ground Lead 150B.C.D Black Ground Chassis ground to lighting switch to operate the courtesy and dome lamps. Brake Light Switch Plug each these connectors onto either one of the brake light switch blades. NOTE: This harness is set up for the '58-'62 style brake switch which utilized 2 male blade terminals. If your car is a '53-'57 model which utilized a male pin type connection, plug extension wires 40X and 17X (as found on page 3 of this instruction set) onto wires 40C,D and 17A,B and then plug those extensions onto your brake switch. Orange 12v Battery Fused 12 volt fused battery feed the stop lamp switch. 40C.D 17A Brake Sw 12 volt switched feed out to turn signal switch. White Third Brake Light 17B Lt. Blue 12 volt switched feed out to third brake light ciruit at rear body connector. Circuit Branch 4 - Underdash Connections Wire # Wire color Printing Procedure Wiper Switch Feed This is your 12v feed only. This feed must be used in conjunction with your original wiper motor or as the 12v power for any aftermarket switch/motor assembly. NOTE: If you are using a stock wiper motor, a ground wire, 150X (as found on page 3 of this instruction set), has been provided for you to ground your wiper motor assembly. White Wiper Feed 12v fused feed for wiper switch assembly or motor. Plug this connector onto the 500684 ignition switch. Ignition Switch 12v Bat Unfused feed into ignition switch from the battery. Red 3A.B Pink Ignition Feed Unfused ignition feed out to fuse panel and ignition system. Ignition Sw Accessory Unfused accessory feed out to fuse panel. Brown Brown/White 130 Altenator regulator exciter feed from the ignition switch to the engine connector. NOTE: This 10 OHM resistance wire wire is doubled with the brown 4 wire at the "ACC" terminal an the ignition switch. Purple Neutral Safety Switch Unfused start feed to the neutral safety switch. Optional parking brake warning kits 510325 or 510326 will plug into this feed (optional kits not included with this kit). Parking Brake Warning Lead Fused 12 volt ignition feed for optional extra cost parking brake warning kit ('53-'57 kit, 510325; '58-'62 kit, 510326). 39C,G Pink 12v Ign Fused Main Power, Starter, and Ignition Feed Wires Connect these wires to your Meahfuse assemblies, the starter solenoid, and your ignition system (Coil, HEI, MSD, ECU, etc.). See page 10, "Figures C and D" for typical connections. These wires will route to the engine bay with the engine harness wires. For loose piece terminals and connectors, see kit 510269. Red 12v Bat Unfused 12v battery feed from your battery source to the fuse panel. See page 3 for connection to Meagfuses. Pink ЗА Ignition Feed Unfused ignition feed from the ignition switch to your ignition system. Unfused starter solenoid feed from the neutral safety switch to the "S" terminal on your starter solenoid. Purple Starter Soleniod **Engine Connector** Plug the engine harness extension (as found on page 3 of this instruction set) onto this connection. See NOTE 1 on this page to the right. See page 10, Figure C for typical connections. See loose piece kit 510269 for any needed terminals and connectors. Dk. Blue Oil Pressure Oil pressure signal from engine connector to the cluster connection. 31A 35E Dk. Green Temp Sender Temperature sender signal from engine connector to the cluster connection. 39E Electric Choke 12v ignition feed for the electric choke from fuse panel to the engine connector. Tan 121 White Coil Tach Tach sender signal wire from engine connector to the cluster connection. 130 Brown/White This is the low voltage feed wire for a GM Style "SI" internally regulated alternator from the ignition switch. **VSS Ground** 400 Yellow VSS ground from engine engine connector to the cluster connection for electric speedometer. 401 Purple VSS Signal VSS signal from engine engine connector to the cluster connection for electric speedometer. Purple/White VSS Power 402 VSS 12v fused power from cluster connection to engine connector to the cluster connection for electric speedometer. These connections will plug into the Cluster Connection Kit, 510270. Specific connections are addressed in that kit. Instrument Cluster Connections 8A,C,E Gray Dash Lights 12v feeds out from the lighting switch to the cluster connections for dash illumination lamps. 11B Lt. Green Hi Beam Indicator Light 12v feed to the cluster for high beam indicator lamp. 14B Left Turn Ind 12v feed to the cluster for left front turn indicator lamp. It Bue 15B Dk. Blue Right Turn Ind 12v feed to the cluster for right front turn indicator lamp. 30 Gas Gauge Fuel sender signal from rear body harness connection to the cluster connection. Tan 31 Dk. Blue Oil Pressure Oil pressure signal from engine connector to the cluster connection. 35A Temp Sender Temperature sender signal from engine connector to the cluster connection. Dk Green 39 wires Pink 12v Ian Fused Fused 12v Ignition feeds to cluster connections for any stock or aftermarket electrical gauges 121 White Coil Tach Tach sender signal wire from engine connector to the cluster connection. 139 Pink/White Speedo Power Fused 12v Ignition feed to the cluster connection for electric speedometer. 150 wires Black Ground Gauge cluster ground to cluster connections. 151 Electric speedometer ground to the cluster connection for electric speedometer. Black Ground **VSS Ground** VSS ground to the cluster connection for electric speedometer. 400 Yellow VSS Signal VSS signal to the cluster connection for electric speedometer. Purple 402 Purple/White VSS Power VSS 12v fused power to the cluster connection for electric speedometer. Cigarette Lighter Plug this connection onto your original lighter socket assembly. A 1953-57 lighter ground wire (150Z) has also been provided and can be found on page 3 of this instruction set. It installs exactly as your original did. Orange 12v Battery Fused 12v battery feed for the cigarette lighter. Page 5

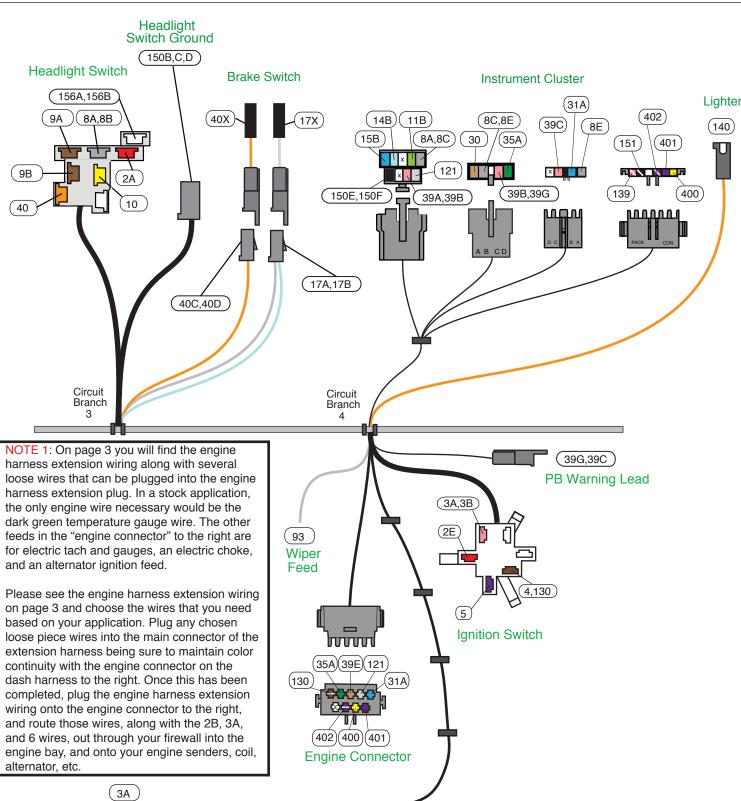



2B

6


www.americanautowire.com 856-933-0801

510267

DESCRIPTION:


1953-62 Chevy Corvette Classic Update Series Kit

92969849 Rev. 3.0 1/10/2018

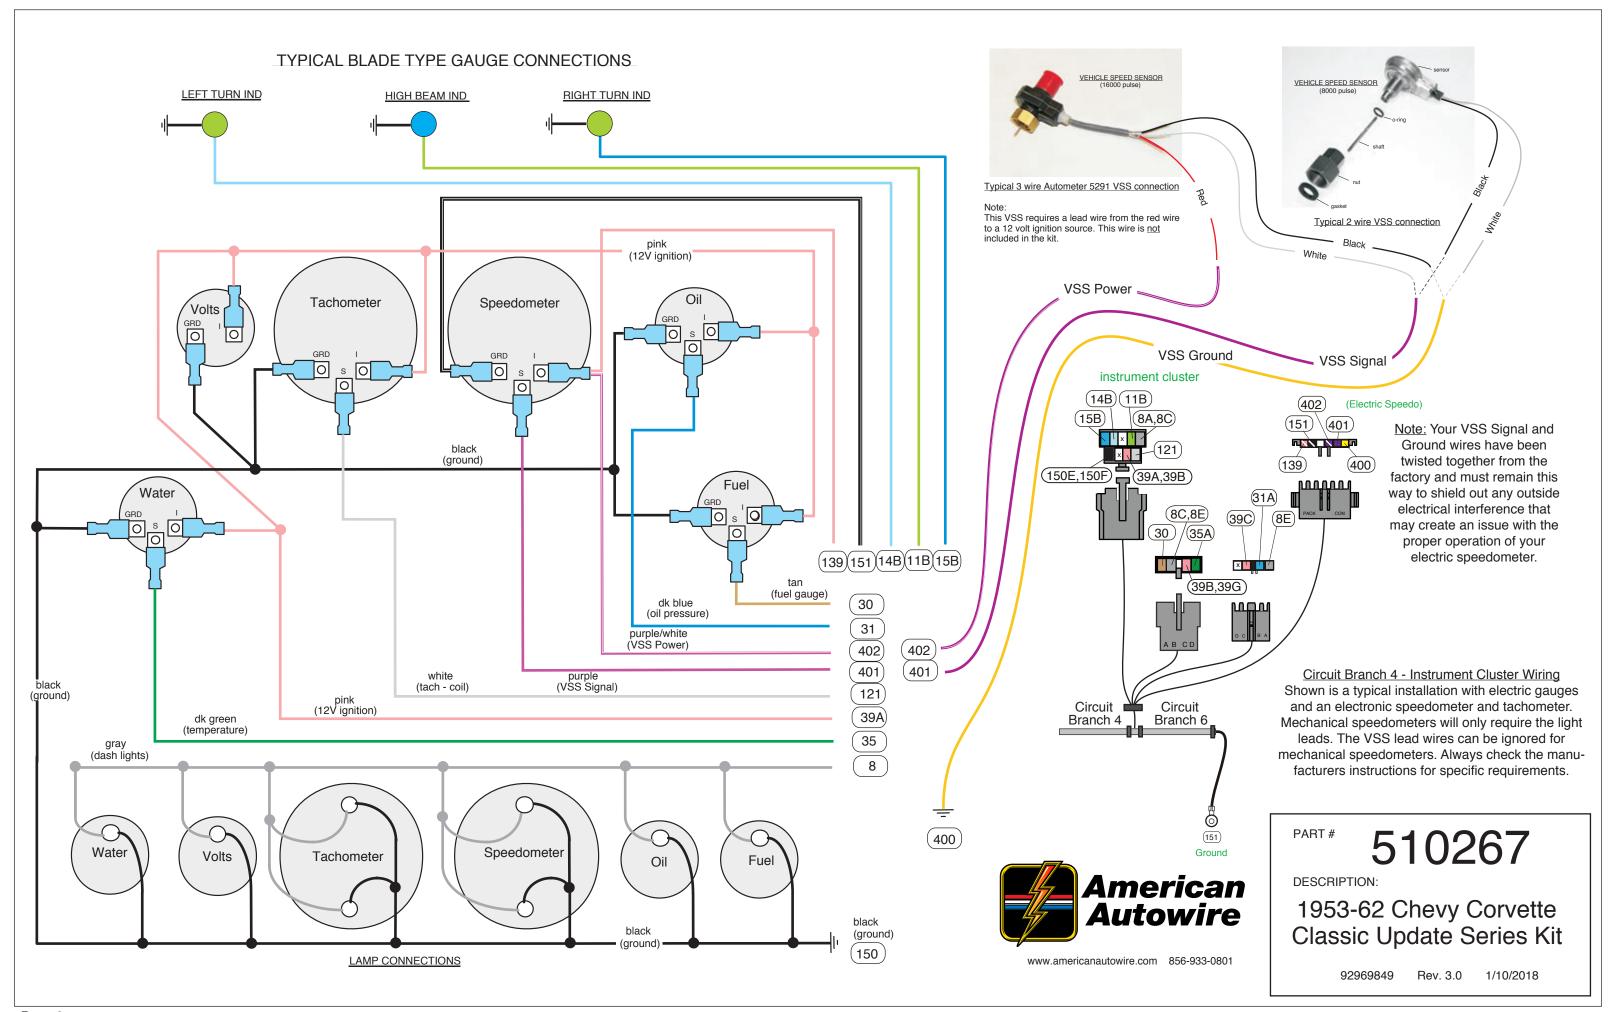

Main Fuse Panel Installation Instructions Circuit Branch 5 - Underdash Connections Wire # Wire Color Printing Back Up and Neutral Safety Switch Connections A typical connection for your neutral safety and back up switch can be found on page 10, "Figure E". NOTE: If you are running a manual transmission, and are not running neutral safety switch, you must connect the 5 and 6 wires together, or the car will not start. Lt. Green Back Up Lt Sw Switched feed from back up lamp switch to rear body connection. 39C Pink 12v Ign Fused 12v ignition feed to back up lamp switch. Neutral Safety Sw 12v feed from solenoid post on the ignition switch to neutral safety switch. Purple Starter Solenoid 12v starter solenoid feed out to engine connections from neutral safety switch Purple Turn Signal Switch Connection Plug into steering column turn signal connection. If you are using a stock '53-'62 Corvette steering column in your car, please refer to "Table A - AAW turn signal wires to stock Corvette turn signal switch" on page 8 for proper mating directions. Our connector mates to a 3 7/8 inch long plug used on 1969-1974 GM, IDIDIT, and many other aftermarket steering columns. Starting from 1975 on up, the GM switch changed and began using a 4 1/4 inch connector. That connector is from the same family and uses the same terminals. By using the supplied mating connector and terminals located in the loose piece kit bag of the dash/main harness (510269), it is easy to adapt any steering column to this kit. The function of the wires are as follows: 14A, B Lt. Blue Left Front Turn LH front turn signal feed out to front light and dash cluster connections. 15A, B Dk. Blue Right Front Turn RH front turn signal feed out to front light and dash cluster connections. 16B Purple Turn Switch Feed Turn signal 12v feed into column from turn flasher. 17A White Brake Sw 12v input from brake switch to turn switch for rear brake lights. Left Rear Turn LH rear turn signal feed out to rear body connection. 18 Yellow 19 Dk Green Right Rear Turn RH rear turn signal feed out to rear body connection. 27B Brown Turn Sw Hazard Hazard switch 12v feed into column from hazard flasher. Circuit Branch 6 - Underdash Connections Wire # Wire Color Printing **Procedure** Heat and A/C Feed This wire will plug onto your stock heater switch or can be used as the "on/off" power source for aftermarket A/C. NOTE: We have also provided you with a blower motor ground wire (150Y) in the event that you are using a stock heater in your car. That wire can be found on page 3 of this instruction set and connects exactly as your original did, from the blower motor case to a chassis ground. Heater AC Feed 12v switched feed for "on/off" power to your stock heater switch or aftermarket heat and A/C. 50 Brown Radio Connections Radio 12v fused accessory feed for radio "on/off" power. 43 Tan 12v fused battery feed for radio memory. 99B Yellow Radio Battery 8D Gray Dash Lights 12v feed out from the lighting switch to the factory radio lamp. NOTE: We have included a clock lamp extension which can be found on page 3 of this instruction set. Depending on **Clock Connections** what year your car is, there are 3 different possible configurations that can be used. Please refer to the detail drawing on page three to complete the proper extension for your car. Once completed, plug the extension onto wires 8B, D to complete the lamp circuit for your factory in dash clock. 8B, D Gray Dash Lights 12v feed out from the lighting switch for the factory clock lamp. 99A Radio Battery 12v fused battery feed for factory clock assembly. Yellow Ground 150F, G Black Ground Main chassis ground to RH dash frame / kick panel area (dash bird cage assembly). 1958-62 Center Dash Courtesy Connection If your car is a 1958-62 model, plug in the 1958-62 center courtesy lamp extension with lamp socket from the 510272 40D, E Orange 12v Battery Fused 12v battery feed to RH underdash courtesy lamp for 1958-62 applications only. 156B, D White Ctsy Ground Switched ground to RH underdash courtesy lamp for 1958-62 applications only. 1953-57 RH Courtesy Connection If your car is a 1953-57 model, plug in one of the 1953-57 courtesy lamp extensions from the 510272 kit here. Orange 12v Battery Fused 12v battery feed to RH underdash courtesy lamp for 1953-57 applications only. 156D, E White Ctsy Ground Switched ground to RH underdash courtesy lamp for 1953-57 applications only. LH Door Jamb Switch Plug into existing LH door jamb switch (not included with this kit). 150C Black Ground Ground to LH door jamb switch. 156C White Ctsy Ground Switched ground to LH door jamb switch. Attach this wire to a good known chassis ground. (Note: Do not attach this wire with the 150F,G wires) Electric Speedo Ground Lead

Chassis ground for electric speedometer at instrument cluster connection.

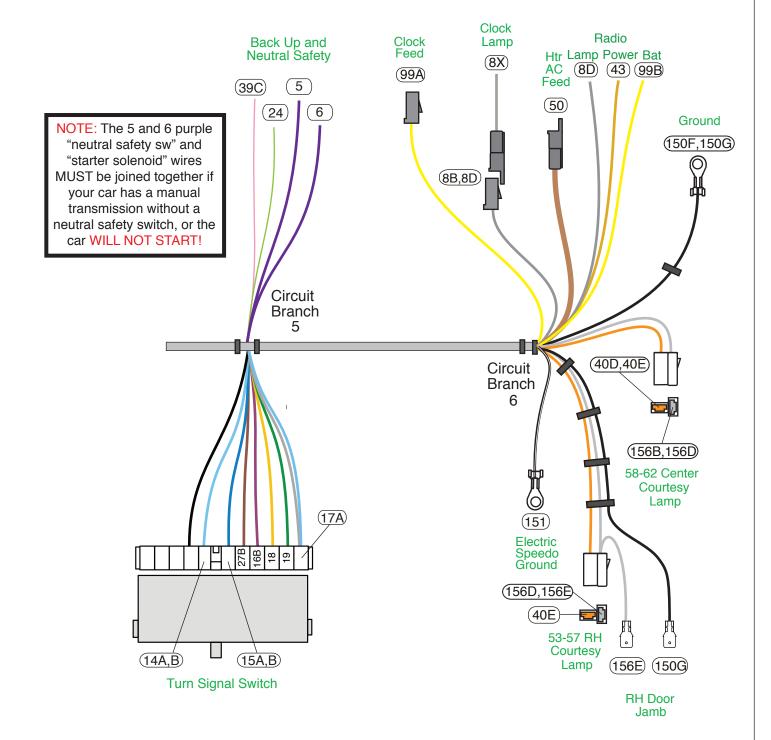



PART#

510267

**DESCRIPTION:** 

1953-62 Chevy Corvette Classic Update Series Kit

92969849


Rev. 3.0 1/10/2018

Black

151

Ground

NOTE: On this page, you will find a photograph of the stock firewall in a typical 1953-62 Corvette. Your new harness has been designed so that the forward lamp and engine wiring will pass through the original firewall pass through locations. We have NOT provided you with any firewall pass through grommets, as we have left that option to the customer. Please be sure to line the opening in your firewall in some fashion so that you do not chaff your new harness. There is also sufficient length on the new harness for custom routing if you have closed this stock hole up and wish to route the wires out into the engine compartment in a different manner. See pages 9 and 10 for the specific connection and routing instructions of all your forward lamp and engine wiring.

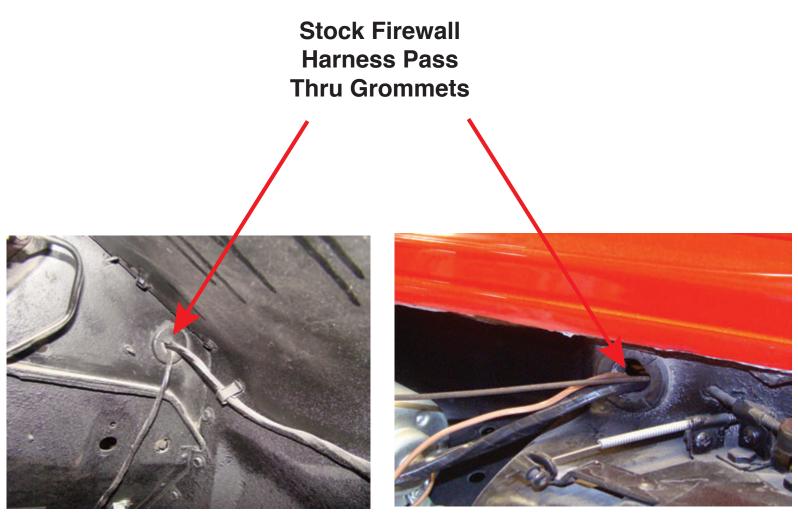

**Front Light Wiring** 

**Engine Wiring** 


**As Viewed From Under the Hood** 

### "Table A"

AAW Turn Signal Switch wires to stock 1953-62 Chevy Corvette turn signal switch.

AAW Wire #	AAW Wire color	AAW Wire Printing	Stock Corvette Wire Color
14A,B	Light Blue	Left Front Turn	Light Blue
15A,B 16B	Dark Blue	Right Front Turn Turn Switch Feed	Dark Blue Yellow
17A,B	Purple White & Blue	Brake Switch	White
18	Yellow	Left Rear Turn	Pink
19	Dark Green	Right Rear Turn	Purple
27B	Brown	Turn Sw - Hazard	Not applicable
28	Black	Horn Relay Ground	Black, Tan, or Dk. Green

NOTE: The stock 1953-62 Corvette turn signal switches did not have a horn ground wire located in them. That wire was a separate wire that was attached to the steering column upper mast jacket bushing and came out through an opening in the steering column. That wire was typically black, tan, or dark green and had an small male blade crimped onto it. If you are using the factory steering column in your car, crimp one of the loose piece terminals M found in the loose piece kit of the 510269 dash harness onto that wire, and plug it into the adapter L when building your turn signal switch adpater to complete the horn ground circuit.

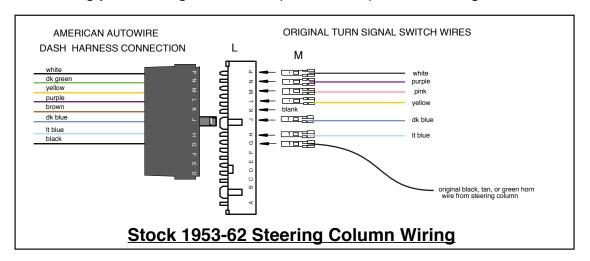




DESCRIPTION:

1953-62 Chevy Corvette
Classic Update Series Kit

92969849 Rev. 3.0 1/10/2018

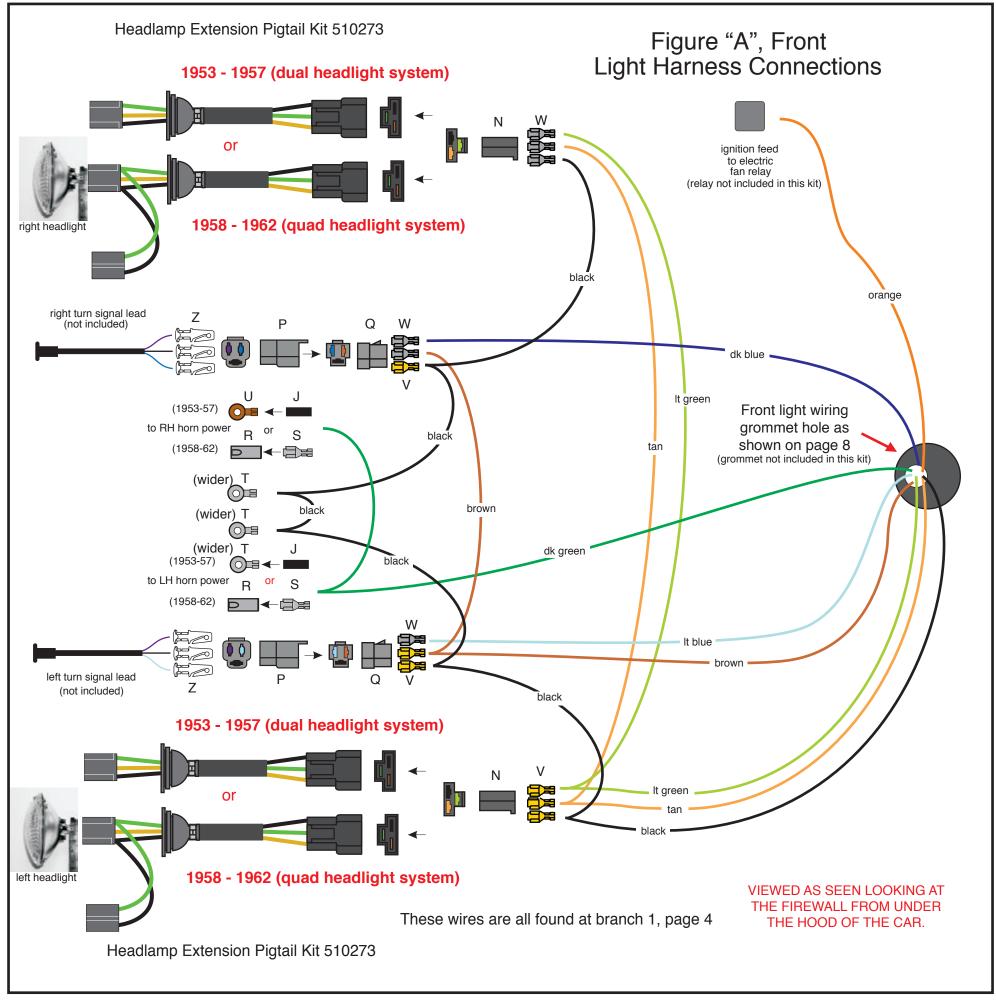

**NOTE:** The terminals and connectors listed on this page and denoted with **UPPER CASE LETTERS** to help you complete the various connections to your lamps, horns, switches, etc. are included and can be found in the dash/main loose piece parts kit, P/N 510269

The identifications, colors, and functions for all of the wires listed in Figure "A" on this page can be found on page 4, branch 1 of this main instruction set (92969849). AAW suggests and recommends using pages 4 and 9 to complete the installation of the foward lamp, horn, and electric fan connections.

This kit also utilizes headlight bucket extension harness 510273 that must also be used in conjunction with the dash/main harness to complete the front light circuits.

There is a production grommet in the inner grill shell panel behind the grill where the parking lamp pigtails and the headlight bucket extensions enter the grill area. You will need to feed those pigtails through those grommets and into the inner grill area to complete your front light connections. (See Below)





RH passenger side inner panel

LH driver side inner panel



www.americanautowire.com 856-933-0801


PART#

510267

DESCRIPTION:

1953-62 Chevy Corvette Classic Update Series Kit


92969849 Rev. 3.0 1/10/2018

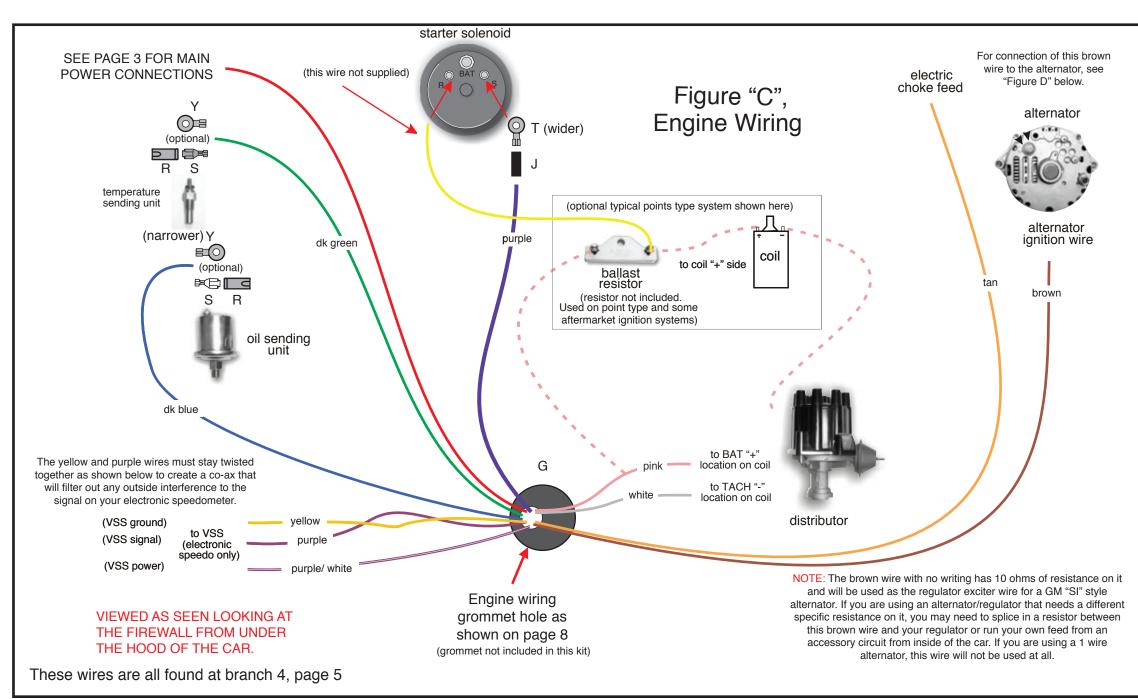


NOTE: The terminals and connectors listed on this page and denoted with UPPER CASE LETTERS to help you complete the various connections to your ignition, temp and oil senders, electric choke, starter solenoid, alternator regulator, etc. are included and can be found in the dash/main loose piece parts kit, P/N 510269. No terminals have been provided for the neutral safety or back up connections.

The identifications, colors, and functions for all of the wires listed in "Figures C, D, and E" on this page can be found on branch 4, page 5, and branch 5, page 7 of this main instruction set (92969849). AAW suggests and recommends using pages 5 and 10 to complete the installation of the engine, main power feed, NSS/back up, and alternator connections.

A note about alternators: AAW kits are all engineered to be used in conjunction with a high output, later model internally regulated, or one wire alternator. We do not suggest or support the use of a stock low amperage generator or alternator as they do not supply sufficient current to recharge the battery in a highly modified vehicle such as this kit was designed for. AAW suggests GM "SI", or 1 wire type alternators as good choices to use. Adpaters to complete the other style alternator connections may be purchased separately if needed. Contact AAW for your needs.

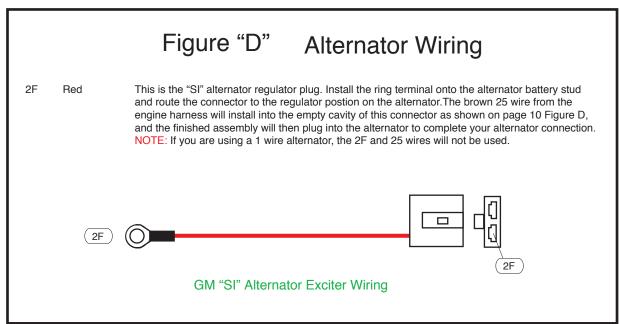

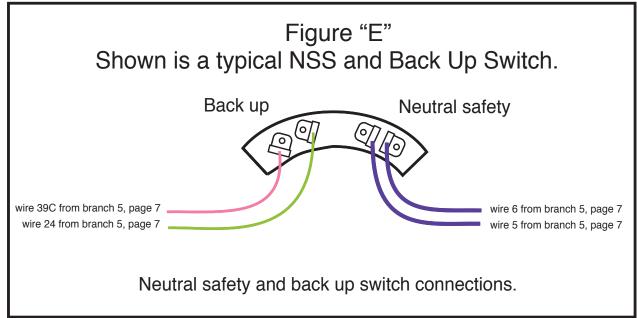



DESCRIPTION:

92969849 Rev. 3.0 1/10/2018

1953-62 Chevy Corvette

Classic Update Series Kit

\*\*\* These are special instructions for connecting your wiring system to the stock instrument clusters. \*\*\*

Note: If you are using after market gauges, follow the instructions included in the 92968220 Gauge Connection Kit along with the specific gauge manufacturers instructions for connection of their gauges.

If you are using the stock gauges, refer to the diagrams on the following pages for your application. Use the enclosed parts and information below for wire termination, gauge, and lamp connections. Connectors A,B,C, and D will plug into your dash harness as noted on the Dash Harness instruction set (510269, bag G). Connection D will only be used in the event that you are using an electric speedometer.

### CONNECTOR A (sheet 2)

DK BLUE Right Turn Indicator
LT BLUE Left Turn Indicator
LT GREEN Hi Beam Indicator Lamp
GRAY Instrument Lamps
BLACK Ground

PINK 12v ignition (loose wire)

WHITE Tach (loose wire)

**CONNECTOR B** (sheet 3)

DK GREEN Temp Gauge
TAN Fuel Gauge
PINK 12v ignition
GRAY Instrument Lamps

CONNECTOR C (sheet 3)

GRAY Instrument Lamps
DK BLUE Oil Gauge (loose wire)

PINK 12v ignition (loose wire)

BLACK Ground (loose wire)

Install components as shown on sheet 2, and plug into the right turn hole in cluster. Install components as shown on sheet 2, and plug into the left turn hole in cluster.

Install components as shown on sheet 2, and plug into the high beam hole in cluster.

Install components as shown on sheet 2, and plug into the instrument lamp holes in the speedometer cluster and tach housing. Connect to the back of the speedometer cluster housing ('58-'62) using ring terminal C (smaller hole), or under the LH mounting bolt of the speedometer cluster ('53-'57) using ring terminal D (larger hole) as shown on sheet 2.

If your car is equipped with an electric tach requiring a 12v ignition feed, plug this loose wire into Connector A maintaining color continuity with the mating connector on your dash harness, install components as shown on sheet 2, and attach to the tachometer per the manufacturer's instructions..

If your car is equipped with an electric tach, plug this loose wire into Connector A maintaining color continuity with the mating connector on your dash harness, install components as shown on sheet 2, and attach to the tachometer per the manufacturer's instructions.

Install components as shown on sheet 3, and attach to the temperature gauge sender post.

Install components as shown on sheet 3, and attach to the fuel gauge sender post.

Install components as shown on sheet 3, and attach to the fuel and temp gauge 12v ignition feed posts.


Install components as shown on sheet 3, and plug into the instrument lamp hole in the fuel and temp gauge pod cluster. NOTE: The oil pressure gauge was a mechanical unit on a stock Corvette and the stock original ammeter is not supported in this aftermarket upgraded kit, so if you are using the stock gauges, you will only use the gray lamp wire for this cluster pod assembly. Install components as shown on sheet 3, and plug into the instrument lamp hole in the ammeter and oil gauge pod cluster. If your car is equipped with an aftermarket electric oil pressure gauge, plug this loose wire into Connector C maintaining color continuity with the mating connector on your dash harness, install components as shown on sheet 3, and attach to the oil pressure gauge per the manufacturer's instructions.

If your car is equipped with an aftermarket electric oil pressure gauge or voltmeter requiring a 12v ignition feed, plug this loose wire into Connector C maintaining color continuity with the mating connector on your dash harness, install components as shown on sheet 3, and attach to the oil pressure gauge or voltmeter per the manufacturer's instructions.

If your car is equipped with an aftermarket voltmeter, this is the ground for that volmeter. Attach the factory ring terminal end of this wire to the grounding location on the bottom of the dash on a "53-"57 car, or to the lighter and clock ground location on a '58-'62 car, and attach the other end to the voltmeter (-) terminal as shown on sheet 3 and per the manufacturer's instructions.

### CONNECTOR D (sheet 4)


This connector is used when using an aftermarket electronic speedometer only. Follow the manufacturer's instructions when installing these wires. If you are using the stock speedometer, then discard this connector. See page 4 for wire descriptions and typical connctions.

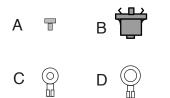




www.americanautowire.com 856-933-0801

Classic Update Series
INSTRUMENT
CLUSTER KIT
1953-62 CORVETTE
510270
92969855 instruction rev 0.0 7/19/2012

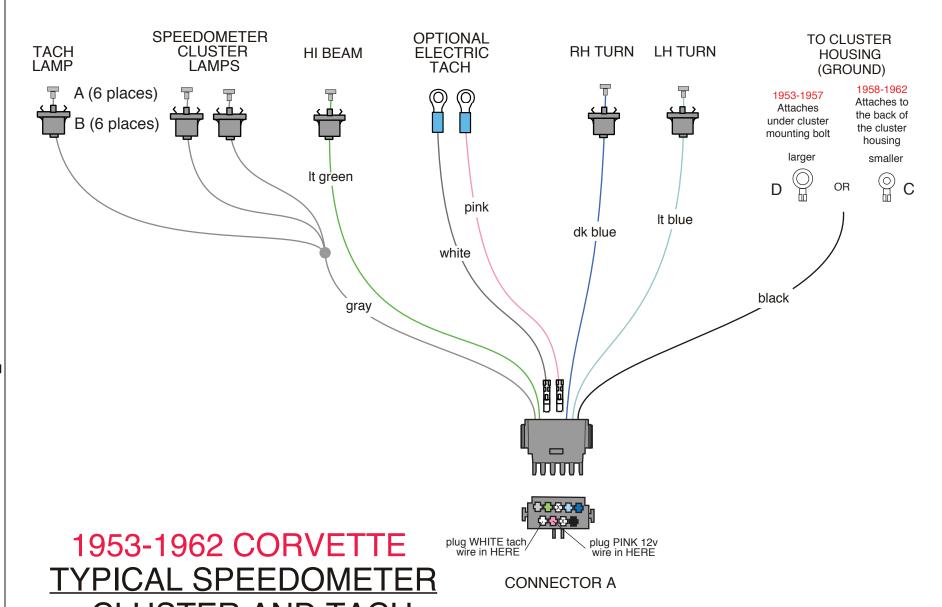


<u>ONNECTIONS</u>

# Jpdate

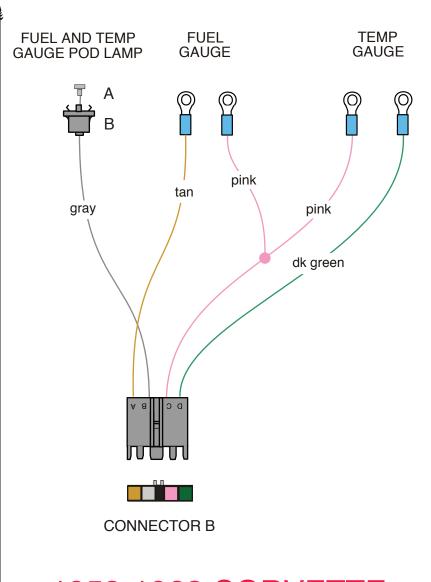

1953-1962 CORVETTE FUEL AND TEMP GAUGE POD CONNECTIONS Optional upgraded electric oil pressure and voltmeter connections are depicted below. If your car uses the stock mechanical oil pressure gauge, these connections WILL NOT be used. This kit DOES NOT support the use of an ammeter.

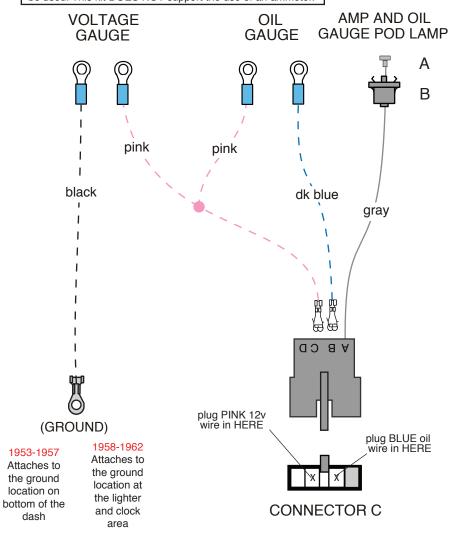

### 1953-1962 CORVETTE AMP AND OIL GAUGE POD CONNECTIONS

# Serie Update

# black purple white pink white yellow purple white ABCDEF CONNECTOR D

### TYPICAL ELECTRIC SPEEDO CONNECTIONS

Below are some general instructions for hooking up an electric speedometer. This connector and these instructions will ONLY be used in the event that you are utilizing an aftermarket electric speedometer. If your car does NOT have an electric speedometer, this connection will NOT be used and should not be plugged onto your dash harness. It is best to consult the speedometer manufacturer's instructions if you have any questions.

Yellow VSS Ground Connect to VSS "-" on speedometer.

<u>Purple</u> VSS Pulse Connect to VSS input on speedometer.

Purple/White VSS Power Connect to 12V power on speedometer.


Black/White Speedo Ground Connect to ground on speedometer.


Pink/White Speedo Power Connect to 12v power on speedometer.

NOTE: This wire will double onto the same stud as the purple/white VSS power wire

from above.

sheet 4 92969855 instruction rev 0.0 7/19/2012

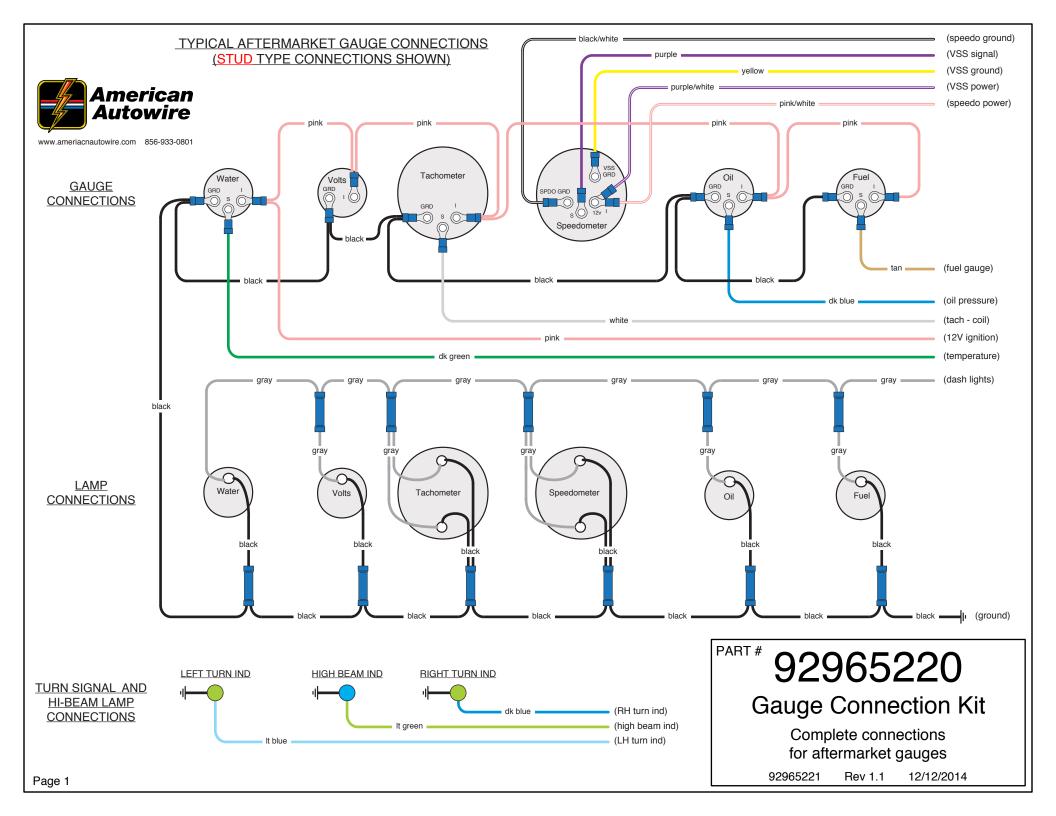


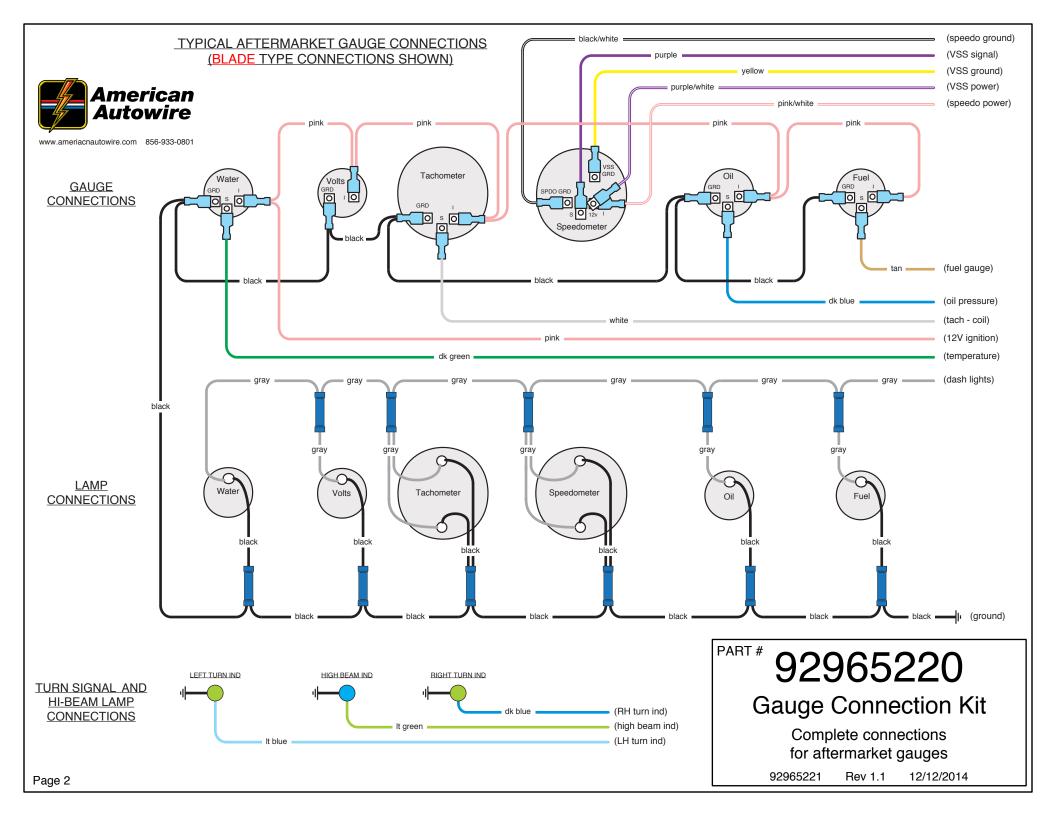



92969863

1953 - 1957 Versions

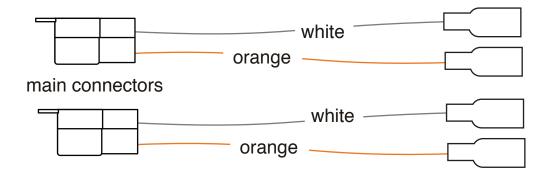

NOTE: Your new '58-'62 underdash courtesy lamp extension uses a # 090 bulb (not included with this kit). It may be purchased at any auto parts store.

NOTE: There were 2 different courtesy lamp configurations used from 1953 thru 1962. We have included both styles in this kit. Your new main/dash harness (510269, bag G) will service either application. There are three 2-way connections on the dash harness. One at either end that will be used in the 1953 - 57 cars, and one in the middle that will be used in the 1958 - 62 cars.

- 1. The '53 thru '57 cars used 2 lamp assemblies (one each on the LH and RH sides up under the dash). Each had a 2-wire lead coming off of it that included a fixed lamp socket assembly. The original courtesy lamp harnesses plugged into these fixed lamp assemblies. If your car is a '53 '57 model, you will take the two '53 '57 versions as shown above, and plug the main connectors onto the dash harness at either of the two end locations where noted on the dash/main instruction sheet.
- 2. The '58 thru '62 cars used a single lamp which did have a lamp socket that was a part of the courtey lamp harness which snapped into a bracket in the center of the dash. If your car is a '58 62 model, you will take the single '58 '62 version with the lamp socket on it as shown above, and plug the main connector onto the dash harness in the center location where noted on the dash/main instruction sheet.



www.americanautowire.com 856-933-0801



### 1953-1962 Corvette Headlamp Bucket Extension Harness

In this kit, you will find all the components necessary to build the headlight bucket extensions for your car. There were two types of systems, one for dual headlamps ('53-'57), and one for quad headlamps ('58-'62).

### The kit consists of the following:

- 1. Two high beam connectors for a quad H/L system (A).
- 2. Two low beam connectors for both dual and guad systems (B).
- 3. Six double 59 Series headlight terminals, which are wider (C).
- 4. Eight single 59 Series headlight terminals, which are narrower (D).
- 5. Two 3 way male connectors to plug onto the bare male blades on the three wires (E).
- 6. Two grommet and loom assemblies (F).
- 7. Two each lt. green high beam, black ground wires cut at 48" long.
- 8. Two tan low beam wires cut at 40" long.


### Directions:


- 1. Insert one of each of the three wires (tan, It. green, and black) into the grommet and loom assembly F at the end opposite the grommet and thread the wire through the assembly and out the end with the grommet attached and even up the connectors at the right end.
- 2. If your car is a '53-'57 model with dual headlamps, cut the extra eight inches from the lt. green and black wires so that they are all an even length, crimp terminals D onto each wire, and plug into connector B as shown on page 2 of this instruction set.
- 3. If your car is a '58-'62 model with quad headlamps, cut the extra eight inches from the lt. green and black wires so that they are all an even length. Crimp terminal D onto the tan wire and plug into connector B as shown on page 2 of this instruction set. Double the lt. green wire with cutoff portion of the lt. green wire, crimp terminal C onto those 2 wires and plug into connector B as shown on page 2 of this instruction set. Crimp terminal D onto the loose end of the lt. green wire and plug into connector A as shown on page 2 of this instruction set. Double the black wire with cutoff portion of the black wire, crimp terminal C onto those 2 wires and plug into connector B as shown on page 2 of this instruction set. Crimp terminal D onto the loose end of the black wire and plug into connector A as shown on page 2 of this instruction set.
- 4. Repeat this process to build your second headlamp extension.
- 5. Route the loose ends of the two extensions (tan, It. green, and black wires with the male terminals on them) through the LH and RH inner fender panels of your car and out into the engine bay, then plug the wires into connector E as shown on page 2. These extensions will plug into the dash/main harness (510269, bag G) to complete the headlamp circuits on your car.



www.americanautowire.com 856-933-0801



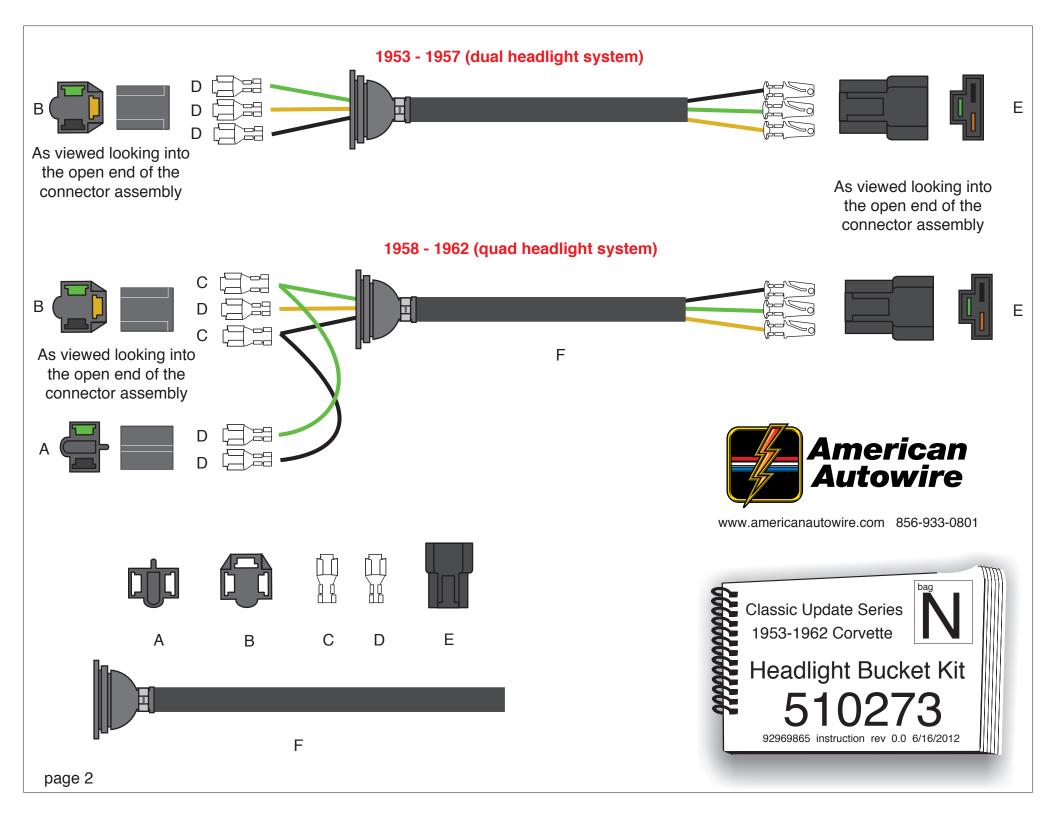

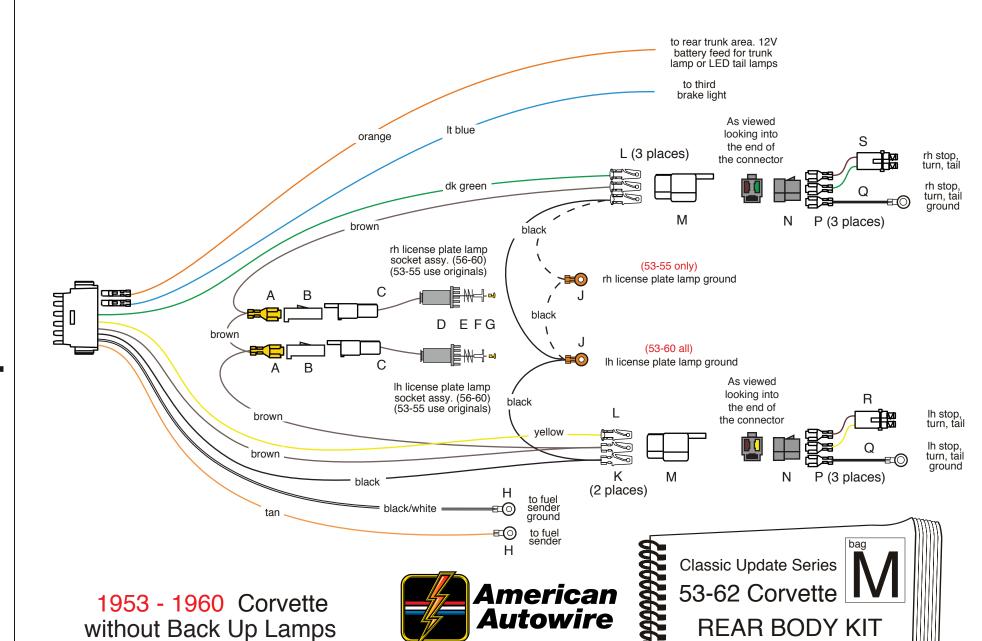


www.americanautowire.com 856-933-0801

92969859 instruction rev 0.0 6/23/2011

page 2

### 1953-1960 Corvette (See sheet 1) Connect the main connector to the mating connector on the dash harness 510269 bag G. Route this harness down the driver's door sill & into the trunk. LIGHT BLUE Third brake light If you are using a third brake light, plug this wire into the main connector maintaining color continuity with the dash/main harness, P/N 510269, then connect the loose end of the wire to your third brake lamp assembly. В TAN Fuel Tank Sender Route this wire to the rear of the car close to the exit hole in the trunk floor, then down to the fuel tank sender, install terminal H and attach to the sending unit to complete the fuel tank sender connection. **BLACK/WHITE** (No Printing) This is your dedicated fuel tank sender ground lead. Route this wire to the rear of the car (along the side of the tan fuel tank sender wire from above) close to the exit hole in the trunk floor, then down to the fuel tan sender area, install terminal H and attach to the frame of the sending unit to complete the D fuel tank sender ground connection. Note: Two new license lamp leads C have been provided for you. If you are doing a '53-'55 car, you will need to re-use your old lamp sockets as they are not available. If you are doing a 1956-60 car, assemble the extension leads using socket, insert, spring Ε and rivet, D, E, F, and G as shown on page 1. These finshed extensions will plug onto connectors B as shown on sheet 1 to complete your two license lamp connections. Also, new Stop/Tail lamp pigtails R and S (yellow and brown for LH driver's side, and F green and brown for RH passenger's side) along with ground wires Q have been provided. Install terminal P on each wire and plug them into connector N maintaining color continuity as shown on sheet 1. These pigtails will plug onto connectors M to complete G your rear lighting in a step below. **BROWN** Running lamps Route this wire to the LH tail lamp area, cut to length, double this wire with the cut off portion, install terminal K and plug into connector M in the location shown on sheet 1 maintaining color continuity with Η E(0) the LH tail lamp pigtail from above. Route the loose end of this brown wire to the LH license lamp area, cut to length, double this wire with the cut off portion, install terminal A and plug into connector B as shown on sheet 1. Route the loose end of this brown wire to the RH license lamp area, cut to length, double this wire with the cut off portion, install terminal A and plug into connector B as shown on sheet 1. Route the loose end of this brown wire to the RH tail lamp area, cut to length, install terminal L and plug into connector M in the location shown on sheet 1 maintaining color continuity with the RH tail lamp pigtail from above. Do not plug your completed tail lamp pigtails from above onto this connection YELLOW LH Stop / Tail Route this wire to the LH tail lamp area, cut to length, install terminal L and plug into the empty cavity of connector M as shown on sheet 1 maintaining color continuity with the LH tail lamp pigtail from above. Do not plug your completed LH tail lamp pigtail from above onto this connection yet. Plug LH pigtail B (yellow, brown and black wires) from above onto this connection to complete the LH stop, turn, and tail circuits. DK GREEN RH Stop / Tail Route this wire to the RH tail lamp area, cut to length, install terminal L and plug into the empty cavity of connector M as shown on sheet 1 maintaining color continuity with the RH tail lamp pigtail from above. Do not plug your completed RH tail lamp pigtail from above onto this connection yet. Plug RH pigtail B (dk green, brown and black wires) from above onto this connection to complete the RH stop, turn, and tail circuits. **ORANGE** 12V Battery Feed If your car has a trunk lamp or you are using LED tail lamps that require a 12v fused battery feed, plug this wire into the main connector mainatining color continuity with the dash/main harness, P/N 510269, then connect the loose end of the wire to the trunk lamp or 12v battery feed for the LED tail lamps. Note: Four new tail lamp ground wires Q have been provided for you. Only two will be used in this application as outlined above. **BLACK** Ground Route this wire to the LH tail lamp area, cut to length, double this wire with the cut off portion, install terminal K and plug into connector M in the location shown on sheet 1 maintaining color continuity with the LH tail lamp pigtail from above. Route the loose end of this black wire to the LH license lamp area, cut to length, double this wire with the cut off portion, and install terminal J as shown on sheet 1. If your car is a '53-'55 car, route the loose end of this black wire to the RH license lamp area, cut to length, double this wire with the cut off portion, and install terminal J as shown on sheet 1. Continuing with a '53-'55 car, route the loose end of this black wire to the RH tail lamp area, cut to length, install terminal L and plug into connector M in the location shown on page 1 maintaining color continuity with the RH tail lamp pigtail from above. If your car is a '56-'60 car, route the loose end of this black wire to the RH tail lamp area, cut to length, install terminal L and plug into connector M in the location shown on sheet 1 maintaining color continuity with the RH tail lamp pigtail from above. You may now plug your completed tail lamp pigtails from above onto these two tail lamp connections. Your rear body connec tions are now completed.

92969859 instruction rev 0.0 6/23/2011

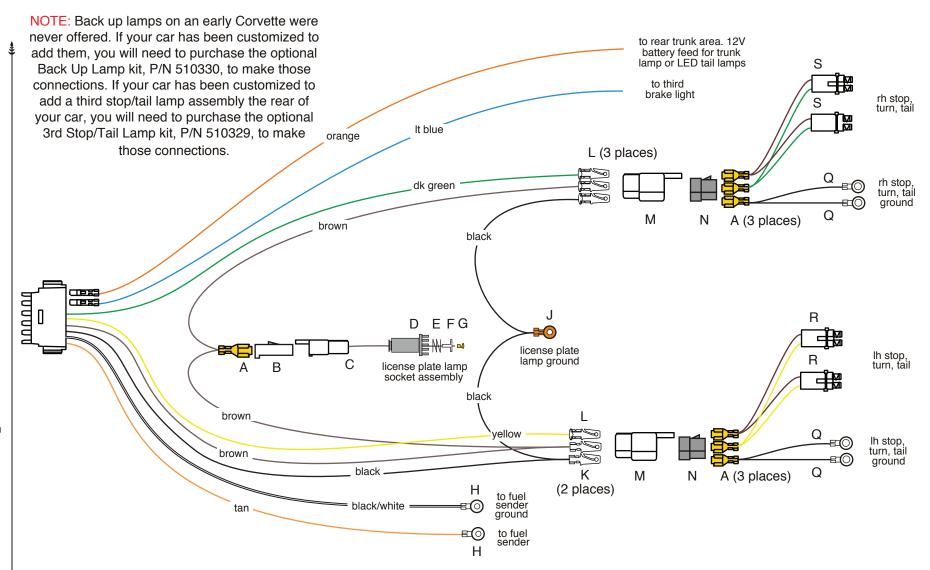

1961 - 1962 Corvette without Back Up Lamps.

(For a car with Back Up Lamps, see optional kit number 510330. For a car with 3 Stop/Tail Lamps, see optional kit number 510329)




www.americanautowire.com 856-933-0801



### Connect the main connector to the mating connector on the dash harness 510269 bag G. Route this harness down the driver's door sill & into the trunk. LIGHT BLUE Third brake light If you are using a third brake light, plug this wire into the main connector maintaining color continuity with the dash/main harness, P/N 510269, then connect the loose end of the wire to your third brake В lamp assembly. TAN Fuel Tank Sender Route this wire to the rear of the car close to the exit hole in the trunk floor, then down to the fuel tank sender, install terminal H and attach to the sending unit to complete the fuel tank sender connection. **BLACK/WHITE** (No Printing) This is your dedicated fuel tank sender ground lead. Route this wire to the rear of the car (along the side of the tan fuel tank sender wire from above) close to the exit hole in the trunk floor, then down to D the fuel tan sender area, install terminal H and attach to the frame of the sending unit to complete the fuel tank sender ground connection. Ε Note: Two new license lamp leads C have been provided for you. For the 1961-62 application, you will only be using one of these pigtails. On a 1961-62 car, assemble the extension lead using socket, insert, spring and rivet, D, E, F, and G as shown on sheet 3. F This finshed pigtail extension will plug onto connector B as shown on sheet 3 to complete your license lamp connection. Also, four new Stop/Tail lamp pigtails R and S (2 yellow and brown for LH driver's side, and 2 dk green and brown for RH passenger's side) along with four ground wires Q have been provided. Double the LH yellow wires together and then LH brown wires together, install G terminal A on each connection and plug the yellow and the brown doubled wires into connector N maintaining color continuity as shown on sheet 3. Repeat this process for the RH dk green and brown wires. Double two of the ground wires Q together, install Н terminal A on each connection and plug the black doubled wires into connector N maintaining color continuity as shown on sheet 3. These pigtails will plug onto connectors M to complete your rear lighting in a step below. **BROWN** Running lamps Route this wire to the LH tail lamp area, cut to length, double this wire with the cut off portion, install terminal K and plug into connector M in the location shown on sheet 3 maintaining color continuity with the LH tail lamp pigtail from above. Route the loose end of this brown wire to the license lamp area, cut to length, double this wire with the cut off portion, install terminal A and plug into connector B as shown on sheet 3. Route the loose end of this brown wire to the RH tail lamp area, cut to length, install terminal L and plug into connector M in the location shown on sheet 3 maintaining color continuity with the RH tail lamp pigtail from above. Do not plug your completed tail lamp pigtails from above onto this connection vet. YELLOW LH Stop / Tail Route this wire to the LH tail lamp area, cut to length, install terminal L and plug into the empty cavity of connector M as shown on sheet 3 maintaining color continuity with the LH tail lamp pigtail from above. Do not plug your completed LH tail lamp pigtail from above onto this connection yet. **DK GREEN** RH Stop / Tail Route this wire to the RH tail lamp area, cut to length, install terminal L and plug into the empty cavity of connector M as shown on sheet 3 maintaining color continuity with the RH tail lamp pigtail from above. Do not plug your completed RH tail lamp pigtail from above onto this connection yet. **ORANGE** 12V Battery Feed If your car has a trunk lamp or you are using LED tail lamps that require a 12v fused battery feed, plug this wire into the main connector mainatining color continuity with the dash/main harness, P/N 510269, then connect the loose end of the wire to the trunk lamp or 12v battery feed for the LED tail lamps. Note: Four new tail lamp ground wires Q have been provided for you. Installation info these wires is outlined in the Note above. **BLACK** Ground Route this wire to the LH tail lamp area, cut to length, double this wire with the cut off portion, install terminal K and plug into connector M in the location shown on sheet 3 maintaining color continuity with the LH tail lamp pigtail from above. Route the loose end of this black wire to the license lamp area, cut to length, double this wire with the cut off portion, and install terminal J as shown on sheet 3. Route the loose end of this black wire to the RH tail lamp area, cut to length, install terminal L and plug into connector M in the location shown on sheet 3 maintaining color continuity with the RH tail lamp pigtail from above. You may now plug the completed LH pigtail R (yellow, brown, and black wires) and the completed RH pigtail S (dk green, brown, and black wires) from above onto these 2 new tail lamp connections to complete the LH and RH stop, turn, and tail circuits. Your rear body connections are now completed.

1961 - 1962 Corvette without Back Up Lamps (See sheet 3)

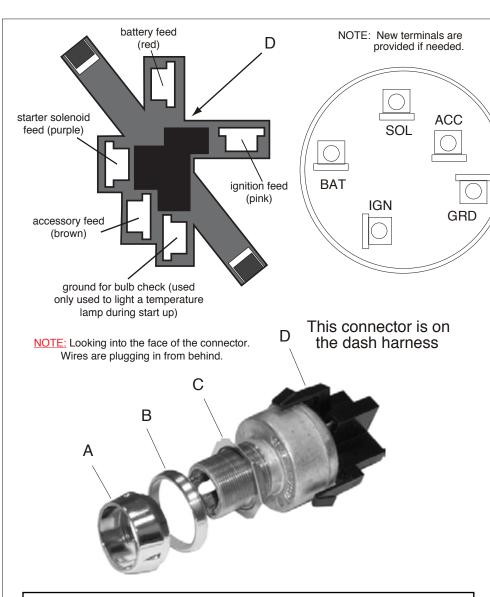

NOTE: Please keep in mind that this is an upgraded switch, not an original replacement, and as such, the flat side on this switch may be in a different location than was your original. If you mount this new AAW switch in your dash and the flat side is in fact in a different location, the key may not line up as the original did. This will not alter the performance of the switch in any way. If you wish for your key to line up as it did in the OEM application, you will need to file out the flat spot in your original dash opening so that the switch can be rotated to the correct position. Once the backing nut C is set so that the depth of the switch is correct for your application, and bezel nut A is firmly tightened, the switch will be secure and will not rotate.

### INSTALLATION:

NOTE: The instruction sheet packaged with this switch shows a copper lamp holder bracket. That bracket is not used in this application and it's installation can be ignored.

- 1. Due to the nature of the chrome plating on threaded collar A, AAW recommends threading the nut on and off of the switch by hand a few times to clean up the threads before installing the switch into your dash.
- 2. Plug in connector D from the dash wiring harness (bag G).
- Install the back-up nut C onto the switch. The depth of this nut will have to be determined when mounting the switch.
- 4. Insert the switch into the hole in the dash panel.
- 5. Install your original dash bezel plate.
- 6. Slide on collar B.
- 7. Screw on threaded collar A
- 8. Insert your original or New AAW lock cylinder into the new switch to complete your installation.

NOTE: AAW has new lock cylinders with the correct GM style keys for your new 510632 ignition switch. Check below for your vehicle's correct application.



### AAW P/N 500672 (with finger guard):

500423 - 1955-56 Chevy car

500434 - 1957 Chevy car 500481 - 1955-59 Chevy Truck

510217 - 1959-60 Chevy Impala

510063 - 1961-64 Chevy Impala

510267 - 1953-62 Chevy Corvette



### AAW P/N 500674 (smooth face):

500467 - 1947-55 Chevy Truck 500560 - 1960-66 Chevy truck

510360 - 1965 Chevy Impala

510372 - 1966-68 Chevy Impala



www.americanautowire.com 856-933-0801


# IGNITION SWITCH Classic Update Series VARIOUS APPLICATIONS

510632

92972596 instruction rev 0.0 10/8/2019

(144.0" 6 Gauge charge wire)

Α

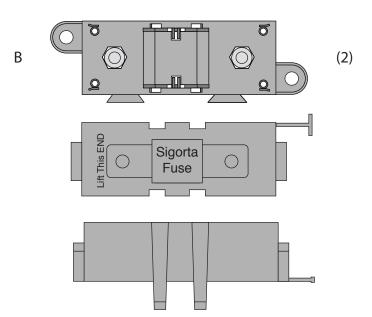

(Megafuse body, cover and two M8 x 1.25 nuts / lock washers)

C (175 amp Megafuse) G

D (1) (Megafuse jumper) H

E (Alternator boot)

F (cut into six 1.0" pieces)

- 1. One this page, you will find the wire, fuse bodies, fuses, boot, ring terminals, and shrink tubing (items A through K) that are necessary to connect your alternator and main power feed for your new AAW wiring kit. Please be sure that all of the necessary components are present before starting this portion of your installation. If anything is missing, stop what you are doing and contact AAW at the number listed below right away.
- 2. On page 2, you will find directions for building the 2 Megafuse assemblies (items B,C and D) into one unit.
- 3. On page 3, you will find an overall concept of how to connect the Megafuse assemblies to your starter solenoid, alternator and main power feed of your new wiring system.
- 4. On page 4, you will find tips on building your charging circuit wires and assembling them and the main panel power feed wire to the Megafuse assembles.



(6Ga. starter ring terminal)



(6Ga. megafuse terminal)



(6Ga. alternator terminal)



(10Ga. megafuse terminal)



www.americanautowire.com 856-933-0801

PART#

510476


Z

DESCRIPTION:

Alternator and Main Power Connection Kit Various Applications

92972153 instruction sheet rev 0.1 6/24/2019


Page 1

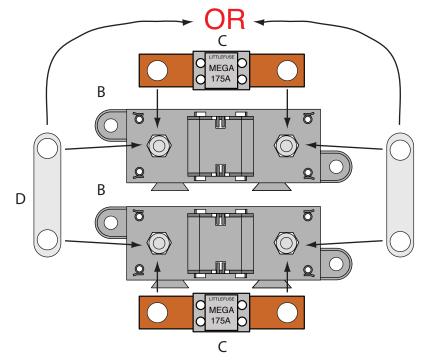


### Assembling the (2) Megafuse assemblies

NOTE: Find a suitable place, as close to the battery power source as possible, under the hood of the your vehicle to mount the completed Megafuse assemblies. Keep in mind that you have 12 feet of 6Ga. charging wire, and that the main power feed coming from your panel or bulkhead connection must also be able to reach the assembly.

- 1. Take the two Megafuse bodies and covers (items B) and snap them together. Remove the 4 nuts and lock washers from the studs on the fuse body assemblies.
- 2. Install the Megafuse jumper (item D above) over two of the studs on the Megafuse bodies. It is very important that the jumper MUST BE assembled on the side that is going to connect to your main power connection (starter solenoid or battery feed).
- 3. Notch top cover to clear jumper D as shown at right.
- 4. Snap one 175amp fuse (items C) onto the studs of each of the two Megafuse bodies (items B), over the jumper, then loosely re-attach the 4 nuts and lock washers back onto the assembled Megafuses. The fuse assemblies are ready to install into your vehicle. Page 2

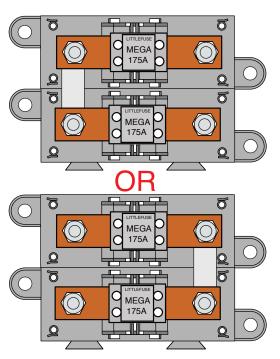

### **Assembled Megafuses**

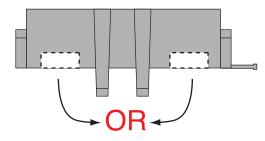

**Notched Cover** 

PART#


510476

Z

DESCRIPTION:

Alternator and Main Power
Connection Kit
Various Applications

92972153 instruction sheet rev 0.1 6/24/2019

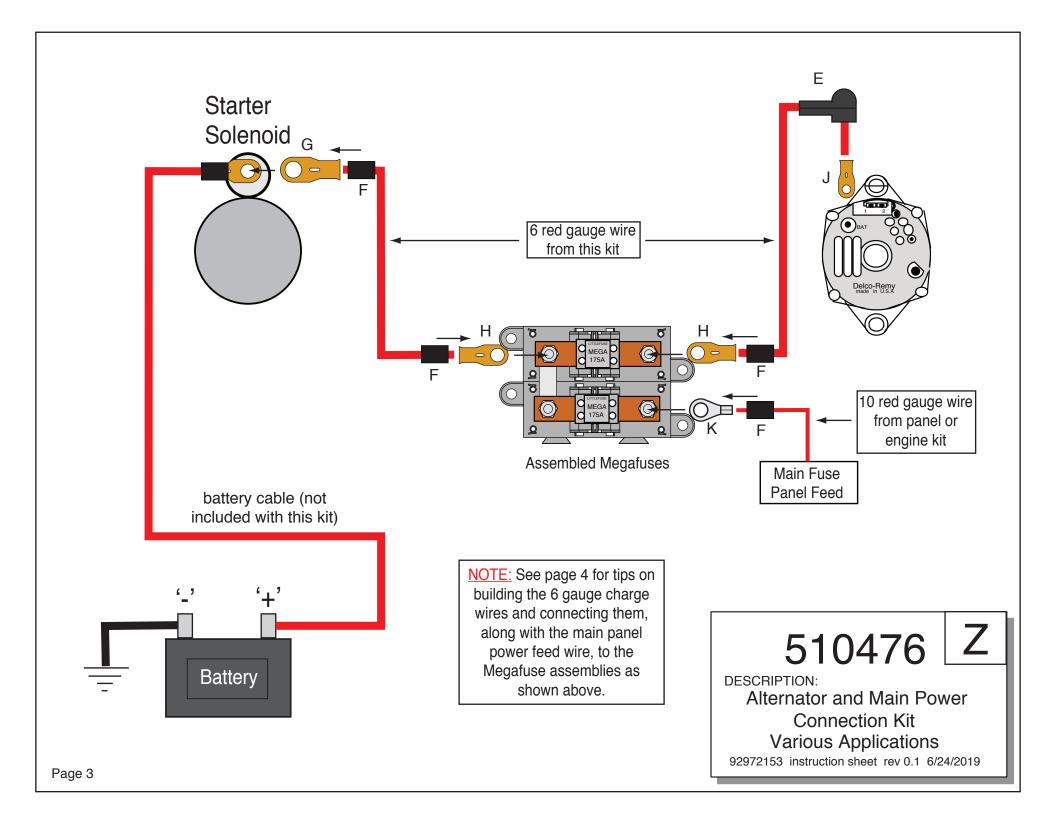

### Building the 6Ga. charge wires and connecting them and the main panel power feed wire to the Megafuse assemblies:

NOTE: Make sure that your battery is disconnected! You will need to install the preassembled Megafuses from page 2 in your vehicle to start this part of the installation.


- 1. Pre-cut item F shrink tubing into (6) 1.00" 1.25" pieces.
- 2. Take the 12-foot piece of 6Ga. red wire from this kit and route it from your starter (or other battery feed) over to the area where you have mounted your Megafuse and cut it to length. Strip the insulation on each end back 1/2". Install 2 pieces of shrink tubing F onto the wire. At the starter end, crimp and solder (1) of terminal G onto the wire. At the Megafuse end, crimp and solder (1) of terminal H onto the wire. Slide the shrink tubing over the terminals and heat it up to shrink it down.
- 3. Take the remaining portion of the 12-foot piece of 6Ga. red wire from this kit and route it from your alternator over to the area where you have mounted your Megafuse and cut it to length. Strip the insulation on each end back 1/2". Install 1 piece of shrink tubing F onto the wire. At the alternator end, slip on boot E as shown on page 3, then crimp and solder (1) of terminal J onto the wire. At the Megafuse end, crimp and solder (1) of terminal H onto the wire. Slide the shrink tubing over terminal H and heat it up to shrink it down.
- 4. Take the 10Ga. red main power feed wire from your engine or panel sub-kit and route it over to the area where you have mounted your Megafuse and cut it to length. Strip the insulation back 3/8". Install 1 piece of shrink tubing F onto the wire, then crimp and solder (1) of terminal K onto the wire.
- 5. Remove the 4 loosely tightened nuts and lock washers from the assembled Megafuses, then using the drawing on page 3 as a guide, install your pre-assembled wires from steps 2-4 above. Re-install the 4 nuts and lock washers onto the assembled Megafuses and tighten them down. This part of your installation is now complete.

510476 | Z

**DESCRIPTION:** 

Alternator and Main Power Connection Kit **Various Applications** 

92972153 instruction sheet rev 0.1 6/24/2019

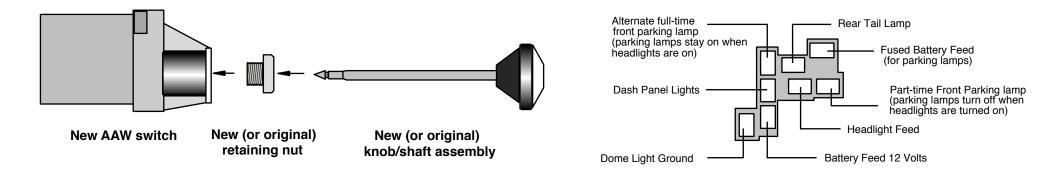


NOTE: On some 1955 and 1956 Chevy Passenger cars, and on all 1953 thru 1957 Corvettes, it may be necessary to open up the hole slightly in your dashboard for the new, larger diameter headlight switch retaining nut. On all 1955 and 1956 Passenger cars, the switch must be installed into the dashboard in order for the dome and courtesy lamps to operate properly. The Corvette dash/main harness assembly has a dedicated ground wire connection, so the courtesy lamps will work with, or without, the switch mounted into the dashboard. The 1953 thru 1957 Corvette models, and all 1955 and 1956 Passenger car models, used a "D" shaped knob/shaft assembly and a smaller diameter retaining nut, so you will need to use the retaining nut and knob/shaft assembly from this kit as your originals WILL NOT work with this newer, updated style switch. If you own a 1957 Corvette, your car is unique in that it used the older style switch with the "D" shaped shaft, but had the newer 1957 style knob. You can purchase a new reproduction 1957 Chevy Passenger car knob/shaft assembly from any Tri-Five supplier that will work with this newer style switch assembly. On all 1958 thru 1962 Corvette models, you will need to use your original retaining nut and knob/shaft assembly (not included with this kit) so that the switch installs properly and so that the knob matches the rest of the knobs in your car.

- 1. Install the new knob and shaft assembly (or your original knob and shaft assembly if you have a 58-62 Corvette) into the new headlight switch to be sure that all of the internal gates line up inside of the switch. You'll want to be listening for the shaft to "click" into position which will lock the knob and shaft assembly into the switch. Once it locks into place, pull the knob out to the "ON" position, push in on the spring loaded button that is protruding from the metal chassis of the new switch, and you will be able to remove the knob/shaft assembly from the switch. See the AAW installation tech video at www.youtube.com/watch?v=PWFHWSEPCso
- 2. Next, we suggest installing the switch into your dashboard assembly and checking it for the proper fitment. Next, remove the switch from your dashboard until it is ready to be installed.
- 3. Once you have the dash/main harness installed into the car, plug the new switch into the dash/main harness plug (This is more easily done with the switch not installed into the dashboard assembly), route the harness (with the switch plugged onto to main/dash plug) over to the proper location for the headlight switch, and install the new switch and lead assembly into your dashboard using the new nut or your original nut (depending on what year and model you are working on as discussed in the **NOTE** above).
- 4. Once installed into the dashboard of your car, you can reinstall the new knob/shaft assembly or your original knob/shaft assembly (depending on what year and model you are working on as discussed in the **NOTE** above). This will complete the new headlight switch installation portion of your kit.



www.americanautowire.com 856-933-0801



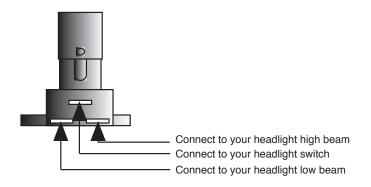

Connect the Dimmer Switch wires as shown above.

- 1. The top center terminal of the Dimmer Switch is connected to the Headlight switch.
- 2. The terminal on the right side is connected to your headlight high beam terminal.
- 3. The terminal on the left side is connected to your headlight low beam terminal.
- 4. Use the enclosed hardware to attach the new dimmer switch to the top of the floor plate of your car. This switch does NOT mount under the plate as the original did.



www.americanautowire.com

856-933-0801

PART#


510237

**DESCRIPTION:** 

DIMMER SWITCH

92969783 instruction sheet

Rev 1.0 6/15/2011

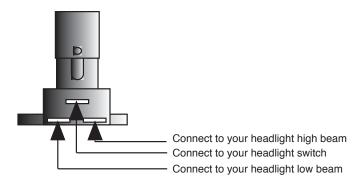

Connect the Dimmer Switch wires as shown above.

- 1. The top center terminal of the Dimmer Switch is connected to the Headlight switch.
- 2. The terminal on the right side is connected to your headlight high beam terminal.
- 3. The terminal on the left side is connected to your headlight low beam terminal.
- 4. Use the enclosed hardware to attach the new dimmer switch to the top of the floor plate of your car. This switch does NOT mount under the plate as the original did.



www.americanautowire.com

856-933-0801

PART#

510237

**DESCRIPTION:** 

DIMMER SWITCH

92969783 instruction sheet

Rev 1.0 6/15/2011